



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Identification of transfer box	1
1.2 Identification of final drive	2
<b>2 Technical data</b>	<b>3</b>
2.1 Allocation of rear final drive - engine/capacities	3
2.2 Allocation of front final drive - engine/capacities	3
2.3 Allocation of transfer box - engine/capacities	3
2.4 Allocation of rear axle - engine/capacities	4
2.5 Calculation of gear ratios	8
<b>3 Overview - power transmission</b>	<b>9</b>
3.1 Overview - power transmission - all-wheel drive	9
<b>4 Repair instructions</b>	<b>10</b>
4.1 Gearbox	10
4.2 Rear axle	10
4.3 Gaskets and seals	10
4.4 Locking devices	10
4.5 Nuts and bolts	11
4.6 Bearings	11
4.7 Shims	11
<b>39 - Final drive - rear differential</b>	<b>12</b>
<b>1 Rear final drive</b>	<b>12</b>
1.1 Assembly overview - final drive	12
1.2 Assembly overview - differential	16
1.3 Removing and installing drive pinion and differential	16
1.4 Dismantling and assembling differential	27
1.5 Removing and installing crown wheel	30
1.6 Checking backlash and contact pattern	31
1.7 Pulling tapered roller bearing for drive pinion off and pressing it on	34
1.8 Pulling tapered roller bearing for differential off and pressing it on	35
1.9 Overview of shims	37
1.10 Adjustment overview	39
1.11 Determining shims for crown wheel	40
1.12 Determining shims for drive pinion	43
1.13 Repairing propshaft flange	46
<b>2 Differential lock</b>	<b>50</b>
2.1 Function	50
2.2 Rear-axle differential lock components and their locations	50
<b>3 Propshaft</b>	<b>54</b>
3.1 Assembly overview - propshaft	54
3.2 Removing and installing propshaft	58
3.3 Dismantling and assembling propshaft	62
<b>4 Gear oil for rear final drive</b>	<b>73</b>
4.1 Checking gear oil level	73
<b>5 Seals for rear final drive</b>	<b>74</b>
5.1 Renewing propshaft flange seal	74
<b>39 - Final drive - front differential</b>	<b>81</b>
<b>1 Front final drive</b>	<b>81</b>
1.1 Assembly overview - final drive	81
1.2 Removing and installing front final drive	81



1.3	Renewing bonded rubber bush on rear of final drive .....	86
1.4	Renewing bonded rubber bush on front of final drive .....	88
1.5	Renewing bonded rubber on left of final drive .....	89
<b>2</b>	<b>Gear oil for front final drive .....</b>	<b>92</b>
2.1	Checking level of gear oil .....	92
<b>3</b>	<b>Oil seals for front final drive .....</b>	<b>94</b>
3.1	Renewing flange shaft seal .....	94
3.2	Renewing dust cap for flange shaft .....	101
3.3	Renewing needle bearing for left flange shaft .....	104
<b>39</b>	<b>- Final drive - differential .....</b>	<b>107</b>
<b>1</b>	<b>Transfer box .....</b>	<b>107</b>
1.1	Assembly overview - transfer box .....	107
1.2	Checking gear oil level .....	112
1.3	Removing and installing transfer box .....	113
1.4	Dismantling and assembling transfer box .....	116
1.5	Renewing oil seals .....	142