

001 - Basic equipment	1-21
1. Basic equipment	1
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	2
3. Current supply relay, Starter motor relay	3
4. Clutch pedal switch, Fuel pump relay, Coolant pump relay, Additional coolant pump relay, Engine/motor control unit	4
5. Alternator with voltage regulator, Fuse 6 on fuse holder C	5
6. Ignition/starter switch, Fuse 3 on fuse holder C, Fuse 13 on fuse holder C	6
7. Steering column combination switch, Steering angle sender	7
8. Steering column combination switch, Coil connector, Horn plate, Airbag control unit, Multifunction steering wheel control unit	8
9. Windscreen wiper switch, Turn signal switch, Washer pump switch (automatic wash/wipe and headlight washer system), Steering column combination switch, Washer pump	9
10. Headlight dipper and flasher switch, Cruise control system switch, Multifunction display call-up button, Multifunction display memory switch, Steering column combination switch	10
11. Bonnet contact switch, Front passenger door lock unit	11
12. Heated rear window button, Rear left door lock unit, Rear right door lock unit, Heated rear window	12
13. Front interior light, Centre interior light	13
14. Hazard warning lights button, Brake light switch, Reversing light switch	14
15. Treble horn	15
16. Dash panel insert, Windscreen wiper motor	16
17. Coolant temperature gauge, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Ambient temperature indicator, Multifunction indicator, Dash panel insert, Washer fluid level warning lamp, Warning lamp fo airbag deactivated on driver side	17
18. Brake fluid level warning contact, Fuel gauge, Fuel system pressurisation pump, Fuel pump control unit, Dash panel insert, Brake fluid level warning lamp, Reserve fuel warning lamp	18
19. Immobiliser reader coil, Oil pressure switch, Oil level and oil temperature sender, Ignition and starter key warning system buzzer and gong, Dash panel insert, Oil pressure warning lamp, Oil level warning lamp	19
20. Switch and instrument illumination regulator, Parking brake contact switch, Dash panel insert, Electric socket, Cigarette lighter, 12 V socket 4	20
21. Light 1 for front centre console background lighting, 12 V socket 2, Left washer jet heater element	21
002 - Central locking, window regulators and mirror adjustment , (L0L)	22-32
1. Central locking, window regulators and mirror adjustment , (L0L)	22
2. Onboard supply control unit, Central locking SAFELOCK function warning lamp, Fuse 2 on fuse holder C, Fuse 65 on fuse holder C	23
3. Central locking button, Fuel tank filler flap central locking actuator, Onboard supply control unit	24
4. Onboard supply control unit, Driver door lock unit, Front passenger door lock unit	25
5. Onboard supply control unit, Rear left door lock unit, Rear right door lock unit	26
6. Mirror adjustment switch, Onboard supply control unit, Fuse 36 on fuse holder C, Fuse 55 on fuse holder C	27
7. Suppression filter, Onboard supply control unit, Driver side exterior mirror	28
8. Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, On oard supply control unit, Driver side window regulator motor	29
9. Front passenger side window regulator button, Front passenger door control unit, Passenger side exterior mirror, Front passenger side window regulator motor	30
10. Switch and instrument illumination regulator	31
11. Rear driver side window regulator button, Rear passenger side window regulator button, Rear left door control unit, Rear right door control unit, Fuse 64 on fuse holder C, Rear left window regulator motor, Rear right window regulator motor	32
003 - Central locking, window regulators and mirror adjustment , (L0R)	33-43
1. Central locking, window regulators and mirror adjustment , (L0R)	33
2. Onboard supply control unit, Central locking SAFELOCK function warning lamp, Fuse 2 on fuse holder C, Fuse 65 on fuse holder C	34
3. Central locking button, Fuel tank filler flap central locking actuator, Onboard supply control unit	35
4. Onboard supply control unit, Driver door lock unit, Front passenger door lock unit	36
5. Onboard supply control unit, Rear left door lock unit, Rear right door lock unit	37
6. Mirror adjustment switch, Onboard supply control unit, Fuse 36 on fuse holder C, Fuse 55 on fuse holder C, Driver side exterior mirror	38
7. Front driver side window regulator button. Rear driver side window regulator button. in driver	39

door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, On board supply control unit, Driver side window regulator motor	
8. Suppression filter, Passenger side exterior mirror	40
9. Suppression filter, Front passenger side window regulator button, Front passenger door control unit, Passenger side exterior mirror, Front passenger side window regulator motor	41
10. Switch and instrument illumination regulator	42
11. Rear driver side window regulator button, Rear passenger side window regulator button, Rear left door control unit, Rear right door control unit, Fuse 64 on fuse holder C, Rear left window regulator motor, Rear right window regulator motor	43
004 - 8-speed automatic gearbox with Tiptronic , (G1G),(G1F)	44-49
1. 8-speed automatic gearbox with Tiptronic , (G1G),(G1F)	44
2. Selector lever locked in position P switch, Selector lever sensors control unit, Gearbox, Ignition key withdrawal lock solenoid, Fuse 5 on fuse holder C, Fuse 54 on fuse holder C	45
3. Gear selector position P switch, Selector lever sensors control unit, Gearbox, Selector lever position display	46
4. Selector lever sensors control unit, Engine/motor control unit, Gearbox, Selector lever lock solenoid, Selector lever position P solenoid, Fuse 38 on fuse holder C	47
5. Onboard supply control unit, Dash panel insert, Gearbox	48
6. Onboard supply control unit, Left reversing light bulb, Right reversing light bulb	49
005 - Seat heating , (3L3)	50-52
1. Seat heating , (3L3)	50
2. Button for left seat heating, Button for right seat heating, Onboard supply control unit, Seat heating control unit, Fuse 43 on fuse holder C, Fuse 45 on fuse holder C	51
3. Seat heating control unit, Heated seat cushion for driver seat, Heated seat cushion for front passenger seat	52
006 - Seat heating , (3L5)	53-55
1. Seat heating , (3L5)	53
2. Button for left seat heating, Button for right seat heating, Onboard supply control unit, Seat heating control unit, Fuse 43 on fuse holder C, Fuse 45 on fuse holder C	54
3. Seat heating control unit, Heated seat cushion for driver seat, Heated seat cushion for front passenger seat	55
007 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) , CFPA,CNEA,CNEB,CNFB,CSHA	56-60
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) , CFPA,CNEA,CNEB,CNFB,CSHA	56
2. Brake light switch, ABS control unit, Fuse 14 on fuse holder C, ABS control unit fuse 1	57
3. Button for TCS and electronic stabilisation program, Driving program button, ABS control unit, Fuse 40 on fuse holder C, Diagnostic connection	58
4. ABS control unit, Onboard supply control unit, Dash panel insert, ABS warning lamp, Traction control system warning lamp, Driving program warning light	59
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	60
008 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) , DDXA,DDXB,DDXC,DDXD,DDXE	61-65
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) , DDXA,DDXB,DDXC,DDXD,DDXE	61
2. Brake light switch, ABS control unit, Power steering control unit, Fuse 14 on fuse holder C, ABS control unit fuse 1	62
3. Button for TCS and electronic stabilisation program, Driving program button, ABS control unit, Fuse 40 on fuse holder C, Diagnostic connection	63
4. ABS control unit, Onboard supply control unit, Dash panel insert, ABS warning lamp, Traction control system warning lamp, Driving program warning light	64
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	65
009 - Airbag systems , (L0L),(NZ0)	66-70
1. Airbag systems , (L0L),(NZ0)	66
2. Driver side belt switch, Key operated switch to deactivate airbag on front passenger side, Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse 39 on fuse holder C	67
3. Front passenger side belt switch, Steering column combination switch, Coil connector, Seat occupied sensor, front passenger side, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	68
4. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	69
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side. Front airbag crash sensor for front passenger side. Airbag	70

control unit, Onboard supply control unit, Dash panel inser , Diagnostic connection	
010 - Airbag systems for RHD vehicles , (L0R)	71-75
1. Airbag systems for RHD vehicles , (L0R)	71
2. Driver side belt switch, Key operated switch to deactivate airbag on front passenger side, Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse 39 on fuse holder C	72
3. Front passenger side belt switch, Steering column combination switch, Coil connector, Seat occupied sensor, front passenger side, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	73
4. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	74
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Onboard supply control unit, Dash panel inser , Diagnostic connection	75
011 - Automatic anti-dazzle interior mirror, rain sensor	76-77
1. Automatic anti-dazzle interior mirror, rain sensor	76
2. Rain and light sensor, Onboard supply control unit, Automatic anti-dazzle interior mirror	77
012 - Multifunction steering wheel	78-80
1. Multifunction steering wheel	78
2. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Steering column combination switch, Multifunction steering wheel control unit, Fuse 50 on fuse holder C	79
3. Steering column combination switch, Horn plate, Airbag control unit, Multifunction steering wheel control unit	80
013 - All-wheel drive	81-86
1. All-wheel drive	81
2. Axle differential lock Hall sender 1, Differential lock control unit, Control solenoid	82
3. Rear differential lock switch, Differential lock control unit, Transfer box control unit, Fuse 6 in fuse holder F, Fuse 7 in fuse holder F, Fuse 42 on fuse holder C, Fuse 50 on fuse holder C	83
4. Running gear program switch, Transfer box control unit, Normal operation warning lamp in transfer box operating unit, Reduction gearing warning lamp in transfer box operating unit, Inter-axle lock-up warning lamp in transfer box operating unit	84
5. Transfer box inter-axle lock-up switch, Hall sender for transfer box, Transfer box control unit, Transfer box control motor	85
6. Onboard supply control unit, Transfer box control unit, Dash panel insert, Reduction gearing warning lamp	86
014 - Reversing camera (Rear Assist)	87-88
1. Reversing camera (Rear Assist)	87
2. Onboard supply control unit, Control unit 1 for information electronics, Reversing camera, Fuse 59 on fuse holder C	88
015 - Preparation for mobile telephone , (9IE),(9ZX)	89-90
1. Preparation for mobile telephone , (9IE),(9ZX)	89
2. Control unit 1 for information electronics, Telephone microphone	90
016 - Preparation for radio , (8UB)	91-93
1. Preparation for radio , (8UB)	91
2. Emergency call module control unit and communication unit, Fuse 60 on fuse holder C	92
3. Onboard supply control unit, Front left loudspeaker, Front right loudspeaker, Aerial, Aerial amplifier	93
017 - Radio system , (I7D),(I7F)	94-98
1. Radio system , (I7D),(I7F)	94
2. Emergency call module control unit and communication unit, Radio, Fuse 60 on fuse holder C	95
3. Radio, Front left loudspeaker, Rear left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	96
4. Radio, Front right loudspeaker, Rear right loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	97
5. Onboard supply control unit, Radio, Aerial amplifier	98
018 - Radio system , (I7A),(I7C)	99-105
1. Radio system , (I7A),(I7C)	99
2. Control unit 1 for information electronics, Fuse 60 on fuse holder C	100
3. Control unit 1 for information electronics, Front left loudspeaker, Rear left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	101
4. Control unit 1 for information electronics, Front right loudspeaker, Rear right loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	102
5. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	103
6. Onboard supply control unit, Control unit 1 for information electronics, Aerial, Aerial amplifier, Digital radio aerial	104

7. Control unit 1 for information electronics, Connection for external audio sources	105
019 - Radio navigation system , (8AY)	106-112
1. Radio navigation system , (8AY)	106
2. Control unit 1 for information electronics, Fuse 60 on fuse holder C	107
3. Control unit 1 for information electronics, Front left loudspeaker, Rear left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	108
4. Control unit 1 for information electronics, Front right loudspeaker, Rear right loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	109
5. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	110
6. Onboard supply control unit, Control unit 1 for information electronics, Aerial, Aerial amplifier, GPS aerial, Digital radio aerial	111
7. Control unit 1 for information electronics, Connection for external audio sources	112
020 - Trailer coupling , (1D1),(1M0)	113-115
1. Trailer coupling , (1D1),(1M0)	113
2. Brake light switch, Trailer detector control unit, Fuse 8 on fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C, Fuse 41 on fuse holder C, Trailer socket	114
3. Trailer detector control unit, Onboard supply control unit, Rear fog light warning lamp, Rear left fog light bulb	115
021 - Trailer coupling , (1D7)	116-118
1. Trailer coupling , (1D7)	116
2. Brake light switch, Trailer detector control unit, Fuse 8 on fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C, Fuse 13 on fuse holder C, Fuse 41 on fuse holder C	117
3. Trailer detector control unit, Onboard supply control unit, Rear fog light warning lamp, Rear left fog light bulb	118
022 - Anti-theft alarm system	119-123
1. Anti-theft alarm system	119
2. Onboard supply control unit, Driver door lock unit, Rear left door lock unit	120
3. Bonnet contact switch, Onboard supply control unit, Front passenger door lock unit, Rear right door lock unit	121
4. Alarm horn, Alarm system relay 1, Onboard supply control unit, Fuse 40 on fuse holder C	122
5. Interior monitoring switch, Interior monitoring sensor, Vehicle inclination sender, Anti-theft alarm sensor, Onboard supply control unit, Fuse 7 on fuse holder C, Fuse 59 on fuse holder C	123
023 - Climatic , (9AP)	124-130
1. Climatic , (9AP)	124
2. Air conditioning system control unit, Fuse 53 on fuse holder C, Fresh air blower fuse 1, Continued coolant circulation pump, Circulation pump	125
3. Coolant pump relay, Air conditioning system control unit, Auxiliary coolant heater relay, Additional coolant pump relay, Engine/motor control unit, Fuse 4 on fuse holder C, Fuse 31 on fuse holder C, Fuse 59 on fuse holder C, Auxiliary pump for heating	126
4. Air conditioning system control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	127
5. High-pressure sender, Air conditioning system control unit, Air conditioner compressor regulating valve, Fuse 42 on fuse holder C	128
6. Centre vent temperature sender, Footwell vent temperature sender, Air conditioning system control unit, Defroster flap control motor, Air recirculation flap control motor	129
7. Evaporator temperature sensor, Air conditioning system control unit, Temperature flap control motor, Footwell flap control motor, Air distribution flap control motor	130
024 - Climatronic , (9AD),(KH4)	131-138
1. Climatronic , (9AD),(KH4)	131
2. Climatronic control unit, Onboard supply control unit, Continued coolant circulation pump, Circulation pump	132
3. Coolant pump relay, Climatronic control unit, Auxiliary coolant heater relay, Additional coolant pump relay, Fuse 15 on fuse holder C, Fuse 31 on fuse holder C, Fuse 59 on fuse holder C, Auxiliary pump for heating	133
4. Fresh air blower control unit, Climatronic control unit, Fuse 53 on fuse holder C, Fresh air blower fuse 1, Fresh air blower	134
5. High-pressure sender, Climatronic control unit, Air conditioner compressor regulating valve, Fuse 42 on fuse holder C	135
6. Climatronic control unit, Defroster flap control motor, Left temperature flap control motor, Footwell flap control motor	136
7. Climatronic control unit, Right temperature flap control motor, Fresh air/air recirculation, air flow flap control motor, Air distribution flap control motor	137
8. Sunlight penetration photosensor, Sunlight penetration photosensor 2, Left vent temperature sender, Right vent temperature sender, Left footwell vent temperature sender, Right footwell vent temperature sender. Evaporator temperature sensor. Climatronic control unit	138

025 - Supplementary heater , (9M5)	139-141
1. Supplementary heater , (9M5)	139
2. Auxiliary heater control unit, Onboard supply control unit, Fuse 15 on fuse holder C, Metering pump	140
3. Overheating sensor, Coolant temperature sender for heater, Auxiliary heater control unit, Glow plug with flame monitor, Combustion air blower	141
026 - Auxiliary coolant heater , (7VE),(7VL)	142-145
1. Auxiliary coolant heater , (7VE),(7VL)	142
2. Fuel delivery unit, Electric fuel pump 2 relay, Auxiliary heater control unit, Heater coolant shut-off valve, Fuse 10 in fuse holder F, Fuse 15 on fuse holder C, Metering pump	143
3. Auxiliary heater control unit, Onboard supply control unit, Roof display unit, Aerial, Remote control receiver for auxiliary coolant heater, Fuse 59 on fuse holder C	144
4. Overheating sensor, Coolant temperature sender for heater, Auxiliary heater control unit, Glow plug with flame monitor, Combustion air blower	145
027 - Passenger compartment heater and ventilation system , (9AA)	146-148
1. Passenger compartment heater and ventilation system , (9AA)	146
2. Heater/heat output switch, Switch and instrument illumination regulator, Additional coolant pump relay, Onboard supply control unit, Fuse 40 on fuse holder C, Fuse 53 on fuse holder C, Circulation pump	147
3. Heater/heat output switch, Current supply relay, Fresh air blower series resistor with overheating fuse, Fresh air blower fuse 1, Fresh air blower, Fresh air and air recirculation flap control motor	148
028 - Parking aid (PDC)	149-153
1. Parking aid (PDC)	149
2. Rear parking aid warning buzzer, Front parking aid warning buzzer, Warning buzzer 2 for rear parking aid, Parking aid control unit, Fuse 50 on fuse holder C	150
3. Switch and instrument illumination regulator, Parking aid button, Parking aid control unit, Onboard supply control unit	151
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	152
5. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	153
029 - 2.0l petrol engine , CFPA	154-168
1. 2.0l petrol engine , CFPA	154
2. Battery, Starter, Alternator with voltage regulator, Starter motor relay, Fuse holder A, Fuse 9 on fuse holder C	155
3. Clutch pedal switch, Fuel pump relay, Main relay, Engine/motor control unit, Fuel pressure regulating valve, Fuse holder A, Fuse 10 in fuse holder F, Fuse 28 on fuse holder C, Fuse 58 on fuse holder C	156
4. Coolant pump relay, Engine/motor control unit, Fuse 15 on fuse holder C, Fuse 25 on fuse holder C, Fuse 31 on fuse holder C, Fuse 57 on fuse holder C, Continued coolant circulation pump	157
5. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs, Fuse 33 on fuse holder C	158
6. Engine speed sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	159
7. Accelerator pedal module, Throttle valve module, Throttle valve drive for electric throttle, Engine/motor control unit	160
8. Lambda probe, Knock sensor 1, Lambda probe after catalytic converter, Engine/motor control unit, Fuse 23 on fuse holder C	161
9. Intake air temperature sender, Coolant temperature sender, Air mass meter, Engine/motor control unit, Fuse 38 on fuse holder C, Fuse 42 on fuse holder C	162
10. Intake manifold pressure sender, Engine/motor control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Fuse 24 on fuse holder C	163
11. Charge pressure sender, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	164
12. Brake light switch, ABS control unit, Engine/motor control unit, Fuse 20 on fuse holder C	165
13. Ignition/starter switch, Cruise control system switch, Engine/motor control unit, Fuse 6 on fuse holder C, Fuse 18 on fuse holder C	166
14. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Engine/motor control unit, Dash panel insert, Fuse 34 on fuse holder C	167
15. Oil pressure switch, Dash panel insert	168
030 - 2.0l diesel engine , CNFB,(7L3)	169-184
1. 2.0l diesel engine , CNFB,(7L3)	169
2. Batterv. Starter. Alternator with voltaae regulator. Fuse holder A	170

3. Brake light switch, Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, ABS control unit, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C	171
4. Main relay, Auxiliary coolant heater relay, Additional coolant pump relay, Engine/motor control unit, Fuse 31 on fuse holder C, Fuse 38 on fuse holder C, Fuse 57 on fuse holder C, Fuse 59 on fuse holder C, Circulation pump	172
5. Ignition/starter switch, Starter motor relay, Onboard supply control unit, Engine/motor control unit, Fuse 9 on fuse holder C, Fuse 18 on fuse holder C, Fuse 20 on fuse holder C, Diagnostic connection	173
6. Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit, Fuse 6 on fuse holder C	174
7. Clutch pedal switch, Fuel pump relay, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Fuse 10 in fuse holder F, Fuse 28 on fuse holder C	175
8. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve, Fuse 27 on fuse holder C	176
9. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 23 on fuse holder C	177
10. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	178
11. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	179
12. Exhaust gas recirculation valve 1, Engine speed sender, Hall sender, Engine/motor control unit	180
13. Throttle valve module, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Engine/motor control unit	181
14. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Radiator fan, Continued coolant circulation pump	182
15. Engine/motor control unit, Dash panel insert, Fuse 33 on fuse holder C	183
16. Oil pressure switch, Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert, Fuse 42 on fuse holder C	184
031 - 2.0l diesel engine , CNFB,(7L6)	185-200
1. 2.0l diesel engine , CNFB,(7L6)	185
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse 6 on fuse holder C	186
3. Brake light switch, Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, ABS control unit, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C	187
4. Main relay, Auxiliary coolant heater relay, Additional coolant pump relay, Engine/motor control unit, Fuse 31 on fuse holder C, Fuse 33 on fuse holder C, Fuse 38 on fuse holder C, Fuse 57 on fuse holder C, Fuse 59 on fuse holder C, Circulation pump	188
5. Ignition/starter switch, Onboard supply control unit, Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse 9 on fuse holder C, Fuse 18 on fuse holder C, Fuse 20 on fuse holder C, Diagnostic connection	189
6. Switch and instrument illumination regulator, Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	190
7. Clutch pedal switch, Clutch pedal switch for stop/start system, Fuel pump relay, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Fuse 10 in fuse holder F, Fuse 28 on fuse holder C	191
8. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve, Fuse 27 on fuse holder C	192
9. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 23 on fuse holder C	193
10. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	194
11. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	195
12. Exhaust gas recirculation valve 1, Hall sender, Engine/motor control unit, Exhaust gas recirculation control motor	196
13. Throttle valve module, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner. Engine/motor control unit	197

14. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	198
15. Start/Stop operation button, Engine/motor control unit, Dash panel insert, Fuse 50 on fuse holder C	199
16. Oil pressure switch, Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert, Fuse 42 on fuse holder C	200
032 - 2.0l diesel engine , CNEA,CNEB,CSHA,(7L3)	201-216
1. 2.0l diesel engine , CNEA,CNEB,CSHA,(7L3)	201
2. Battery, Starter, Alternator with voltage regulator, Fuse holder A	202
3. Brake light switch, Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, ABS control unit, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C	203
4. Main relay, Auxiliary coolant heater relay, Additional coolant pump relay, Engine/motor control unit, Fuse 31 on fuse holder C, Fuse 38 on fuse holder C, Fuse 57 on fuse holder C, Fuse 59 on fuse holder C, Circulation pump	204
5. Ignition/starter switch, Starter motor relay, Onboard supply control unit, Engine/motor control unit, Fuse 9 on fuse holder C, Fuse 18 on fuse holder C, Fuse 20 on fuse holder C, Diagnostic connection	205
6. Cruise control system switch, Steering column combination switch, Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit, Fuse 6 on fuse holder C	206
7. Clutch pedal switch, Fuel pump relay, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Fuse 10 in fuse holder F, Fuse 28 on fuse holder C	207
8. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve, Fuse 27 on fuse holder C	208
9. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 23 on fuse holder C	209
10. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	210
11. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	211
12. Exhaust gas recirculation valve 1, Engine speed sender, Hall sender, Charge pressure sender 2, Engine/motor control unit	212
13. Throttle valve module, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Engine/motor control unit	213
14. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Radiator fan, Continued coolant circulation pump	214
15. Engine/motor control unit, Dash panel insert, Fuse 33 on fuse holder C	215
16. Oil pressure switch, Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert, Fuse 42 on fuse holder C	216
033 - 2.0l diesel engine with start/stop system , CNEA,CNEB,CSHA,(7L6)	217-232
1. 2.0l diesel engine with start/stop system , CNEA,CNEB,CSHA,(7L6)	217
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse 6 on fuse holder C	218
3. Brake light switch, Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, ABS control unit, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C	219
4. Main relay, Auxiliary coolant heater relay, Additional coolant pump relay, Engine/motor control unit, Fuse 31 on fuse holder C, Fuse 33 on fuse holder C, Fuse 38 on fuse holder C, Fuse 57 on fuse holder C, Fuse 59 on fuse holder C, Circulation pump	220
5. Ignition/starter switch, Onboard supply control unit, Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse 9 on fuse holder C, Fuse 18 on fuse holder C, Fuse 20 on fuse holder C, Diagnostic connection	221
6. Switch and instrument illumination regulator, Cruise control system switch, Steering column combination switch, Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit	222
7. Clutch pedal switch, Clutch pedal switch for stop/start system, Fuel pump relay, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Fuse 10 in fuse holder F, Fuse 28 on fuse holder C	223
8. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve, Fuse 27 on fuse holder C	224
9. Lambda probe. Engine/motor control unit. Iniection. cvlinder 1. Iniection. cvlinder 2. Iniection.	225

cylinder 3, Injector, cylinder 4, Fuse 23 on fuse holder C	
10. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	226
11. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	227
12. Exhaust gas recirculation valve 1, Engine speed sender, Hall sender, Charge pressure sender 2, Engine/motor control unit	228
13. Throttle valve module, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Engine/motor control unit	229
14. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Radiator fan, Continued coolant circulation pump	230
15. Start/Stop operation button, Engine/motor control unit, Dash panel insert, Fuse 50 on fuse holder C	231
16. Oil pressure switch, Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert, Fuse 42 on fuse holder C	232
034 - 3.0l diesel engine , DDXA,DDXB,DDXC,DDXD,DDXE	233-253
1. 3.0l diesel engine , DDXA,DDXB,DDXC,DDXD,DDXE	233
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A	234
3. Brake light switch, Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, ABS control unit, Engine/motor control unit, Fuse 57 on fuse holder C, Engine/motor control unit fuse	235
4. Fuel pump relay, Main relay, Auxiliary coolant heater relay, Additional coolant pump relay, Engine/motor control unit, Fuse 10 in fuse holder F, Fuse 38 on fuse holder C, Fuse 58 on fuse holder C, Fuse 59 on fuse holder C, Circulation pump	236
5. Ignition/starter switch, Onboard supply control unit, Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse 9 on fuse holder C, Fuse 18 on fuse holder C, Fuse 20 on fuse holder C, Fuse 29 on fuse holder C, Diagnostic connection	237
6. Switch and instrument illumination regulator, Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit, Fuse 6 on fuse holder C	238
7. Cylinder 2 combustion chamber pressure sender, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	239
8. Clutch pedal switch, Clutch pedal switch for stop/start system, Lambda probe 1 before catalytic converter, Lambda probe, Air mass meter, Gearbox neutral position sender, Automatic gearbox control unit, Engine/motor control unit, Fuse 23 on fuse holder C, Fuse 27 on fuse holder C, Fuse 28 on fuse holder C	240
9. Intake manifold sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender for low pressure, Exhaust gas temperature sender 4, Engine/motor control unit	241
10. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	242
11. Map-controlled engine cooling system thermostat, Exhaust gas recirculation valve 1, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Exhaust gas recirculation cooling bypass valve 2, Coolant valve for cylinder head, Fuse 2 on fuse holder C	243
12. Coolant temperature sender, Fuel temperature sender, Oil temperature sender 2, Coolant temperature sender 2, Coolant temperature sender 3, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 25 on fuse holder C	244
13. Oil pressure sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit, Valve for oil pressure control	245
14. Engine speed sender, Hall sender, Pressure differential sender, Engine/motor control unit, Turbocharger 1 control unit	246
15. Throttle valve module, Intake manifold flap control unit, Fuel pressure sender, Engine/motor control unit	247
16. Radiator fan control unit, Engine/motor control unit, Fuse 31 on fuse holder C, Radiator fan	248
17. NOx sender, NOx sender 2, Particulate sensor, Engine/motor control unit, Fuse 34 on fuse holder C	249
18. Delivery unit for reducing agent metering system, Engine/motor control unit, Relay for reducing agent metering system, Fuse 56 on fuse holder C, Reducing agent tank	250
19. Water separator sender, Engine/motor control unit, Control unit for reducing agent heater, Injector for reducing agent, Fuse 9 in fuse holder F, Reducing agent tank, Heater for reducing agent line (heater circuit 2)	251
20. Start/Stop operation button, Engine/motor control unit, Dash panel insert, Fuse 50 on fuse holder C	252
21. Fuel system pressurisation pump. Oil level and oil temperature sender. Dash panel insert	253

035 - Adjustable seat , (3L5)	254-257
1. Adjustable seat , (3L5)	254
2. Switch module for driver seat, Driver seat adjustment thermal fuse 1, Driver seat longitudinal adjustment motor, Driver seat front height adjustment motor, Driver seat rear height adjustment motor, Driver seat backrest adjustment motor	255
3. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Driver seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor, Front passenger seat lumbar support height adjustment motor	256
4. Switch module for front passenger seat, Front passenger seat adjustment thermal fuse 1, Front passenger seat longitudinal adjustment motor, Front passenger seat front height adjustment motor, Front passenger seat rear height adjustment motor, Front passenger seat backrest adjustment motor	257
036 - Exterior lighting , (8ID)	258-267
1. Exterior lighting , (8ID)	258
2. Steering column combination switch, Onboard supply control unit, Dash panel insert, Fuse 4 on fuse holder C, Fuse 7 on fuse holder C, Fuse 16 on fuse holder C, Fuse 17 on fuse holder C, Fuse 51 on fuse holder C, Fuse 66 on fuse holder C, Fuse 67 on fuse holder C	259
3. Light switch, Onboard supply control unit, Fuse 58 on fuse holder C	260
4. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	261
5. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Fuse 41 on fuse holder C, Left headlight range control motor, Right headlight range control motor	262
6. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	263
7. Onboard supply control unit, Left tail light cluster, Right tail light cluster	264
8. Reversing light switch, Onboard supply control unit, Fuse 50 on fuse holder C, Left number plate light, Right number plate light	265
9. Brake light switch, Onboard supply control unit, High-level brake light bulb, Fuse 20 on fuse holder C	266
10. Load area illumination switch, High-level brake light bulb, Load area illumination bulb, Fuse 59 on fuse holder C	267
037 - Exterior lighting , (8IH)	268-277
1. Exterior lighting , (8IH)	268
2. Steering column combination switch, Onboard supply control unit, Dash panel insert, Fuse 4 on fuse holder C, Fuse 7 on fuse holder C, Fuse 16 on fuse holder C, Fuse 17 on fuse holder C, Fuse 51 on fuse holder C, Fuse 66 on fuse holder C, Fuse 67 on fuse holder C	269
3. Light switch, Onboard supply control unit, Fuse 58 on fuse holder C	270
4. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	271
5. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Fuse 41 on fuse holder C, Left headlight range control motor, Right headlight range control motor	272
6. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	273
7. Onboard supply control unit, Left tail light cluster, Right tail light cluster	274
8. Reversing light switch, Onboard supply control unit, Fuse 50 on fuse holder C, Left number plate light, Right number plate light	275
9. Brake light switch, Onboard supply control unit, High-level brake light bulb, Fuse 20 on fuse holder C	276
10. Load area illumination switch, High-level brake light bulb, Load area illumination bulb, Fuse 59 on fuse holder C	277
038 - Interface for external use , (IS1)	278-282
1. Interface for external use , (IS1)	278
2. Ignition/starter switch, Onboard supply control unit, Fuse 3 on fuse holder A, Fuse holder C	279
3. Current supply relay, Onboard supply control unit, Front left headlight, Fuse holder C	280
4. Steering column combination switch, Reversing light switch, Onboard supply control unit	281
5. Parking brake contact switch, Alarm system relay 1, Onboard supply control unit, Dash panel insert	282
039 - Power assisted steering , (1N3)	283-284
1. Power assisted steering , (1N3)	283
2. ABS control unit, Power steering control unit, Power steering hydraulic pressure valve, Fuse 21 on fuse holder C	284
040 - Tyre Pressure Monitoring System , (7K3)	285-286
1. Tyre Pressure Monitoring System , (7K3)	285
2. Tyre Pressure Monitoring System control unit. Onboard supply control unit. Dash panel insert.	286

Fuse 59 on fuse holder C	
041 - Auxiliary lights , (2Y1),(2Y5),(E5W)	287-288
1. Auxiliary lights , (2Y1),(2Y5),(E5W)	287
2. Headlight main beam relay, Onboard supply control unit, Fuse 12 on fuse holder C	288
042 - Hardtop	289-293
1. Hardtop	289
2. Heated rear window button, Brake light switch, Onboard supply control unit, Left brake light bulb, Right brake light bulb, Fuse 20 on fuse holder C, Fuse 50 on fuse holder C	290
3. Heated rear window relay, Onboard supply control unit, Fuse 8 in fuse holder F, Fuse 62 on fuse holder C, Heated rear window, Heated rear window for hardtop	291
4. Switch and instrument illumination regulator, Load area illumination switch, Onboard supply control unit	292
5. Rear interior light button, Roof electronics control unit, High-level brake light bulb, Load area illumination bulb, Fuse 59 on fuse holder C	293
043 - Electronic logbook, chip card reader unit , (9ND),(9NE)	294-296
1. Electronic logbook, chip card reader unit , (9ND),(9NE)	294
2. Tachograph, Onboard supply control unit, Fuse 50 on fuse holder C, Fuse 54 on fuse holder C	295
3. Tachograph, Tachograph sender, Onboard supply control unit	296
044 - Provision for side member lighting , (NU2)	297-298
1. Provision for side member lighting , (NU2)	297
2. Fuse 7 on fuse holder C, Front interior light	298
045 - Data bus network	299-306
1. Data bus network	299
2. Tachograph, Connection 1 (powertrain CAN bus, high), in main wiring harness, Connection 1 (powertrain CAN bus, low), in main wiring harness, Connection 1 (dash panel insert CAN bus high) in main wiring harness, Connection 1 (dash panel insert CAN bus low) in main wiring harness	300
3. Connection 1 (powertrain CAN bus, high), in main wiring harness, Connection 1 (powertrain CAN bus, low), in main wiring harness	301
4. Connection 1 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 1 (powertrain CAN bus, low), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness	302
5. Fuse 42 on fuse holder C, Fuse 59 on fuse holder C, Diagnostic connection, Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness, Connection 1 (diagnosis), in main wiring harness	303
6. Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness	304
7. Connection 1 (LIN bus) in main wiring harness	305
8. Connection 2 (LIN bus) in main wiring harness, Connection 3 (LIN bus) in main wiring harness	306
046 - Fuse assignment	307-338
1. Fuse assignment	307
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	308
3. Main relay, Engine/motor control unit fuse	309
4. Driver seat adjustment thermal fuse 1, Front passenger seat adjustment thermal fuse 1, ABS control unit fuse 1	310
5. Current supply relay, Starter motor relay, Fresh air blower fuse 1	311
6. Fuse 1 on fuse holder C, Fuse 2 on fuse holder C	312
7. Ignition/starter switch, Fuse 3 on fuse holder C, Fuse 4 on fuse holder C, Fuse 5 on fuse holder C	313
8. Fuse 6 on fuse holder C, Fuse 7 on fuse holder C, Fuse 8 on fuse holder C, Fuse 9 on fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C	314
9. Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C, Fuse 15 on fuse holder C, Fuse 16 on fuse holder C	315
10. Starter relay 1, Starter relay 2, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C, Fuse 19 on fuse holder C, Fuse 20 on fuse holder C	316
11. Fuse 21 on fuse holder C, Fuse 22 on fuse holder C, Fuse 23 on fuse holder C	317
12. Fuse 24 on fuse holder C	318
13. Fuel metering valve, Fuse 25 on fuse holder C, Fuse 32 on fuse holder C	319
14. Fuse 33 on fuse holder C, Fuse 34 on fuse holder C	320
15. Fuse 26 on fuse holder C, Fuse 27 on fuse holder C, Fuse 28 on fuse holder C	321
16. Fuse 29 on fuse holder C, Fuse 30 on fuse holder C, Fuse 31 on fuse holder C, Fuse 35 on fuse holder C	322
17. Fuse 36 on fuse holder C, Fuse 37 on fuse holder C, Fuse 38 on fuse holder C	323
18. Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C	324
19. Fuse 42 on fuse holder C	325
20. Fuse 49 on fuse holder C, Fuse 50 on fuse holder C	326
21. Fuse 43 on fuse holder C. Fuse 51 on fuse holder C	327

22. Fuse 44 on fuse holder C, Fuse 45 on fuse holder C, Fuse 46 on fuse holder C, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Fuse 52 on fuse holder C	328
23. Fuse 53 on fuse holder C, Fuse 54 on fuse holder C, Fuse 55 on fuse holder C	329
24. Delivery unit for reducing agent metering system, Fuse 56 on fuse holder C, Fuse 57 on fuse holder C, Fuse 58 on fuse holder C, Reducing agent tank	330
25. Emergency call module control unit and communication unit, Fuse 59 on fuse holder C	331
26. Heated rear window relay, Fuse 60 on fuse holder C, Fuse 61 on fuse holder C, Fuse 62 on fuse holder C	332
27. Alarm system relay 1, Fuse 63 on fuse holder C, Fuse 64 on fuse holder C	333
28. Fuse 65 on fuse holder C, Fuse 66 on fuse holder C, Fuse 67 on fuse holder C, Fuse 68 on fuse holder C	334
29. Fuse 1 in fuse holder F, Fuse 2 in fuse holder F, Fuse 3 in fuse holder F, Fuse 4 in fuse holder F, Fuse 5 in fuse holder F, Fuse 6 in fuse holder F, Fuse 7 in fuse holder F	335
30. Fuse 8 in fuse holder F, Fuse 9 in fuse holder F, Fuse 10 in fuse holder F, Fuse 11 in fuse holder F, Fuse 12 in fuse holder F	336
31. Fuel pump relay, Electric fuel pump 2 relay, Auxiliary coolant heater relay, Additional coolant pump relay, Onboard supply control unit, Engine/motor control unit	337
32. Fuel pump relay, Coolant pump relay, Auxiliary coolant heater relay, Continued coolant circulation pump	338
047 - Earthing concept	339-361
1. Earthing concept	339
2. Driver door control unit, Front passenger door control unit, Control unit 1 for information electronics, Radio	340
3. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Switch module for driver seat, Switch module for front passenger seat, Reversing camera	341
4. Bonnet contact switch, Parking brake contact switch, Selector lever sensors control unit, Electric socket, Cigarette lighter, Rear right door lock unit	342
5. Running gear program switch, Alarm horn, Rear right door control unit, Seat heating control unit, Reduction gearing warning lamp in transfer box operating unit	343
6. Suppression filter, Differential lock control unit, Wiper motor control unit	344
7. Suppression filter, Mirror adjustment switch, Central locking button, Central locking SAFELOCK function warning lamp, Driver door lock unit, Rear left door lock unit, Heated exterior mirror on driver side	345
8. Parking aid button, Button for left seat heating, Button for right seat heating, Trailer detector control unit, Dash panel insert, 12 V socket 4, Left washer jet heater element	346
9. Fresh air blower control unit, Climatronic control unit, Air conditioning system control unit, Fresh air blower	347
10. Heater/heat output switch, Hazard warning lights button, Heated rear window button, Load area illumination switch, Start/Stop operation button, Light 1 for front centre console background lighting, 12 V socket 2	348
11. Light switch, Rain and light sensor, Current supply relay, Starter motor relay, Terminal 15 voltage supply relay, Rear left door control unit, Alarm system relay 1, Auxiliary coolant heater relay, Transfer box control unit, Heater element for crankcase breather	349
12. Rear differential lock switch, Button for TCS and electronic stabilisation program, Driving program button, Tachograph, Reducing agent tank, Automatic anti-dazzle interior mirror, Heater for reducing agent line (heater circuit 2)	350
13. Turn signal switch, Washer pump switch (automatic wash/wipe and headlight washer system), Multifunction display call-up button, Steering column combination switch, Brake light switch, Clutch pedal switch for stop/start system, High-pressure sender, Steering angle sender, Horn plate, Multifunction steering wheel control unit	351
14. Switch and instrument illumination regulator, Headlight range control regulator, Headlight main beam relay, Airbag control unit, Parking aid control unit, Power steering control unit, Roof display unit, Aerial, Remote control receiver for auxiliary coolant heater, Diagnostic connection	352
15. Battery, Battery monitor control unit, Left additional main beam bulb, Right additional main beam bulb, Centre left additional main beam bulb, Centre right additional main beam bulb, Front interior light, Centre interior light	353
16. Anti-theft alarm sensor, Roof electronics control unit, High-level brake light bulb, Interior light, Heated rear window	354
17. ABS control unit, Auxiliary heater control unit, Left fog light bulb, Heater coolant shut-off valve, Circulation pump	355
18. Treble horn, Radiator fan control unit, Left turn signal repeater bulb, Continued coolant circulation pump	356
19. Oil level and oil temperature sender, Automatic glow period control unit, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	357
20. Brake fluid level warning contact. Right fog light bulb. Front left headlight. Front right	358

headlight, Right turn signal repeater bulb, Left headlight range control motor, Right headlight range control motor	
21. Heated rear window relay, Tyre Pressure Monitoring System control unit, 14-pin connector, Trailer socket, 12 V socket 3, Heated rear window for hardtop	359
22. Control unit for NOx sender, Control unit for sensor electronics, Control unit for NOx sender 2, Left tail light cluster, Right tail light cluster, Left number plate light, Right number plate light	360
23. Transfer box inter-axle lock-up switch, Fuel system pressurisation pump, Oil level and oil temperature sender, Automatic gearbox control unit, Fuel pump control unit, Air conditioner compressor regulating valve, Metering pump	361
048 - Airbag systems , (L0L),(NZ3)	362-366
1. Airbag systems , (L0L),(NZ3)	362
2. Driver side belt switch, Key operated switch to deactivate airbag on front passenger side, Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse 39 on fuse holder C	363
3. Front passenger side belt switch, Steering column combination switch, Coil connector, Seat occupied sensor, front passenger side, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	364
4. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	365
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Onboard supply control unit, Emergency call module control unit and communication unit, Dash panel insert, Diagnostic connection	366
049 - Emergency call module , (NZ3)	367-370
1. Emergency call module , (NZ3)	367
2. Emergency assistance call button, Airbag control unit, Emergency call module control unit and communication unit, Fuse 58 on fuse holder C	368
3. Onboard supply control unit, Emergency call module control unit and communication unit	369
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit	370
050 - Earthing concept , (L0R)	371-393
1. Earthing concept , (L0R)	371
2. Driver door control unit, Front passenger door control unit, Control unit 1 for information electronics, Radio	372
3. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Switch module for driver seat, Switch module for front passenger seat, Reversing camera	373
4. Bonnet contact switch, Parking brake contact switch, Selector lever sensors control unit, Electric socket, Cigarette lighter, Rear right door lock unit	374
5. Running gear program switch, Alarm horn, Rear right door control unit, Seat heating control unit, Reduction gearing warning lamp in transfer box operating unit	375
6. Suppression filter, Differential lock control unit, Wiper motor control unit, Front passenger door lock unit, Heated exterior mirror on passenger side	376
7. Mirror adjustment switch, Central locking button, Central locking SAFELOCK function warning lamp, Rear left door lock unit, Heated exterior mirror on driver side	377
8. Parking aid button, Button for left seat heating, Button for right seat heating, Trailer detector control unit, Dash panel insert, 12 V socket 4, Left washer jet heater element	378
9. Fresh air blower control unit, Climatronic control unit, Air conditioning system control unit, Fresh air blower	379
10. Heater/heat output switch, Hazard warning lights button, Heated rear window button, Load area illumination switch, Start/Stop operation button, Light 1 for front centre console background lighting, 12 V socket 2	380
11. Light switch, Rain and light sensor, Current supply relay, Starter motor relay, Terminal 15 voltage supply relay, Rear left door control unit, Alarm system relay 1, Auxiliary coolant heater relay, Transfer box control unit, Heater element for crankcase breather	381
12. Rear differential lock switch, Button for TCS and electronic stabilisation program, Driving program button, Tachograph, Reducing agent tank, Automatic anti-dazzle interior mirror, Heater for reducing agent line (heater circuit 2)	382
13. Steering column combination switch, Brake light switch, Clutch pedal switch for stop/start system, High-pressure sender, Horn plate, Multifunction steering wheel control unit	383
14. Switch and instrument illumination regulator, Headlight range control regulator, Headlight main beam relay, Airbag control unit, Parking aid control unit, Power steering control unit, Roof display unit, Aerial, Remote control receiver for auxiliary coolant heater, Diagnostic connection	384
15. Battery, Battery monitor control unit, Left additional main beam bulb, Right additional main beam bulb, Centre left additional main beam bulb, Centre right additional main beam bulb, Front interior light, Centre interior light	385
16. Anti-theft alarm sensor, Roof electronics control unit, High-level brake light bulb, Interior light. Heated rear window	386

17. ABS control unit, Auxiliary heater control unit, Left fog light bulb, Heater coolant shut-off valve, Circulation pump	387
18. Treble horn, Radiator fan control unit, Left turn signal repeater bulb, Continued coolant circulation pump	388
19. Oil level and oil temperature sender, Automatic glow period control unit, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	389
20. Brake fluid level warning contact, Right fog light bulb, Front left headlight, Front right headlight, Right turn signal repeater bulb, Left headlight range control motor, Right headlight range control motor	390
21. Heated rear window relay, Tyre Pressure Monitoring System control unit, 14-pin connector, Trailer socket, 12 V socket 3, Heated rear window for hardtop	391
22. Control unit for NOx sender, Control unit for sensor electronics, Control unit for NOx sender 2, Left tail light cluster, Right tail light cluster, Left number plate light, Right number plate light	392
23. Transfer box inter-axle lock-up switch, Fuel system pressurisation pump, Oil level and oil temperature sender, Automatic gearbox control unit, Fuel pump control unit, Air conditioner compressor regulating valve, Metering pump	393
051 - Earthing concept , (L0L)	394-416
1. Earthing concept , (L0L)	394
2. Emergency assistance call button, Driver door control unit, Front passenger door control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Radio	395
3. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Switch module for driver seat, Switch module for front passenger seat, Reversing camera	396
4. Bonnet contact switch, Parking brake contact switch, Selector lever sensors control unit, Electric socket, Cigarette lighter, Rear right door lock unit	397
5. Running gear program switch, Alarm horn, Rear right door control unit, Seat heating control unit, Reduction gearing warning lamp in transfer box operating unit	398
6. Differential lock control unit, Wiper motor control unit	399
7. Suppression filter, Mirror adjustment switch, Central locking button, Central locking SAFELOCK function warning lamp, Driver door lock unit, Rear left door lock unit, Heated exterior mirror on driver side	400
8. Parking aid button, Button for left seat heating, Button for right seat heating, Trailer detector control unit, Dash panel insert, 12 V socket 4, Left washer jet heater element	401
9. Fresh air blower control unit, Climatronic control unit, Air conditioning system control unit, Fresh air blower	402
10. Heater/heat output switch, Hazard warning lights button, Heated rear window button, Load area illumination switch, Start/Stop operation button, Light 1 for front centre console background lighting, 12 V socket 2	403
11. Light switch, Rain and light sensor, Current supply relay, Starter motor relay, Terminal 15 voltage supply relay, Rear left door control unit, Alarm system relay 1, Auxiliary coolant heater relay, Transfer box control unit, Heater element for crankcase breather	404
12. Rear differential lock switch, Button for TCS and electronic stabilisation program, Driving program button, Tachograph, Reducing agent tank, Automatic anti-dazzle interior mirror, Heater for reducing agent line (heater circuit 2)	405
13. Steering column combination switch, Brake light switch, Clutch pedal switch for stop/start system, High-pressure sender, Horn plate, Multifunction steering wheel control unit	406
14. Switch and instrument illumination regulator, Headlight range control regulator, Headlight main beam relay, Airbag control unit, Parking aid control unit, Power steering control unit, Roof display unit, Aerial, Remote control receiver for auxiliary coolant heater, Diagnostic connection	407
15. Battery, Battery monitor control unit, Left additional main beam bulb, Right additional main beam bulb, Centre left additional main beam bulb, Centre right additional main beam bulb, Front interior light, Centre interior light	408
16. Anti-theft alarm sensor, Roof electronics control unit, High-level brake light bulb, Interior light, Heated rear window	409
17. ABS control unit, Auxiliary heater control unit, Left fog light bulb, Heater coolant shut-off valve, Circulation pump	410
18. Treble horn, Radiator fan control unit, Left turn signal repeater bulb, Continued coolant circulation pump	411
19. Oil level and oil temperature sender, Automatic glow period control unit, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	412
20. Brake fluid level warning contact, Right fog light bulb, Front left headlight, Front right headlight, Right turn signal repeater bulb, Left headlight range control motor, Right headlight range control motor	413
21. Heated rear window relav. Tvre Pressure Monitorina Svstem control unit. 14-pin connector.	414

Trailer socket, 12 V socket 3, Heated rear window for hardtop	
22. Control unit for NOx sender, Control unit for sensor electronics, Control unit for NOx sender 2, Left tail light cluster, Right tail light cluster, Left number plate light, Right number plate light	415
23. Transfer box inter-axle lock-up switch, Fuel system pressurisation pump, Oil level and oil temperature sender, Automatic gearbox control unit, Fuel pump control unit, Air conditioner compressor regulating valve, Metering pump	416
052 - Hardtop , (5GF)	417-421
1. Hardtop , (5GF)	417
2. Heated rear window button, Brake light switch, Onboard supply control unit, Left brake light bulb, Right brake light bulb, Fuse 20 on fuse holder C, Fuse 50 on fuse holder C	418
3. Heated rear window relay, Onboard supply control unit, Fuse 8 in fuse holder F, Fuse 62 on fuse holder C, Heated rear window, Heated rear window for hardtop	419
4. Switch and instrument illumination regulator, Load area illumination switch, Onboard supply control unit	420
5. Rear interior light button, Roof electronics control unit, High-level brake light bulb, Load area illumination bulb, Fuse 59 on fuse holder C	421
053 - Trailer coupling , (1D1)	422-424
1. Trailer coupling , (1D1)	422
2. Brake light switch, Trailer detector control unit, Fuse 8 on fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C, Fuse 13 on fuse holder C, Fuse 41 on fuse holder C, Trailer socket	423
3. Trailer detector control unit, Onboard supply control unit, Rear fog light warning lamp, Rear left fog light bulb	424
054 - Trailer coupling , (1M0)	425-427
1. Trailer coupling , (1M0)	425
2. Brake light switch, Trailer detector control unit, Fuse 8 on fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C, Fuse 13 on fuse holder C, Fuse 41 on fuse holder C, Trailer socket	426
3. Trailer detector control unit, Onboard supply control unit, Rear fog light warning lamp, Rear left fog light bulb	427
055 - Fuse assignment	428-459
1. Fuse assignment	428
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	429
3. Main relay, Engine/motor control unit fuse	430
4. Driver seat adjustment thermal fuse 1, Front passenger seat adjustment thermal fuse 1, ABS control unit fuse 1	431
5. Current supply relay, Starter motor relay, Fresh air blower fuse 1	432
6. Fuse 1 on fuse holder C, Fuse 2 on fuse holder C	433
7. Ignition/starter switch, Fuse 3 on fuse holder C, Fuse 4 on fuse holder C, Fuse 5 on fuse holder C	434
8. Fuse 6 on fuse holder C, Fuse 7 on fuse holder C, Fuse 8 on fuse holder C, Fuse 9 on fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C	435
9. Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C, Fuse 15 on fuse holder C, Fuse 16 on fuse holder C	436
10. Starter relay 1, Starter relay 2, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C, Fuse 19 on fuse holder C, Fuse 20 on fuse holder C	437
11. Fuse 21 on fuse holder C, Fuse 22 on fuse holder C, Fuse 23 on fuse holder C	438
12. Fuse 24 on fuse holder C	439
13. Fuel metering valve, Fuse 25 on fuse holder C, Fuse 32 on fuse holder C	440
14. Fuse 33 on fuse holder C, Fuse 34 on fuse holder C	441
15. Fuse 26 on fuse holder C, Fuse 27 on fuse holder C, Fuse 28 on fuse holder C	442
16. Fuse 29 on fuse holder C, Fuse 30 on fuse holder C, Fuse 31 on fuse holder C, Fuse 35 on fuse holder C	443
17. Fuse 36 on fuse holder C, Fuse 37 on fuse holder C, Fuse 38 on fuse holder C	444
18. Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C	445
19. Fuse 42 on fuse holder C	446
20. Fuse 49 on fuse holder C, Fuse 50 on fuse holder C	447
21. Fuse 43 on fuse holder C, Fuse 51 on fuse holder C	448
22. Fuse 44 on fuse holder C, Fuse 45 on fuse holder C, Fuse 46 on fuse holder C, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Fuse 52 on fuse holder C	449
23. Fuse 53 on fuse holder C, Fuse 54 on fuse holder C, Fuse 55 on fuse holder C	450
24. Delivery unit for reducing agent metering system, Fuse 56 on fuse holder C, Fuse 57 on fuse holder C, Fuse 58 on fuse holder C, Reducing agent tank	451
25. Emergency call module control unit and communication unit, Fuse 59 on fuse holder C	452
26. Heated rear window relay, Fuse 60 on fuse holder C, Fuse 61 on fuse holder C, Fuse 62 on fuse holder C	453

27. Alarm system relay 1, Fuse 63 on fuse holder C, Fuse 64 on fuse holder C	454
28. Fuse 65 on fuse holder C, Fuse 66 on fuse holder C, Fuse 67 on fuse holder C, Fuse 68 on fuse holder C	455
29. Fuse 1 in fuse holder F, Fuse 2 in fuse holder F, Fuse 3 in fuse holder F, Fuse 4 in fuse holder F, Fuse 5 in fuse holder F, Fuse 6 in fuse holder F, Fuse 7 in fuse holder F	456
30. Fuse 8 in fuse holder F, Fuse 9 in fuse holder F, Fuse 10 in fuse holder F, Fuse 11 in fuse holder F, Fuse 12 in fuse holder F	457
31. Fuel pump relay, Electric fuel pump 2 relay, Auxiliary coolant heater relay, Additional coolant pump relay, Onboard supply control unit, Engine/motor control unit	458
32. Fuel pump relay, Coolant pump relay, Auxiliary coolant heater relay, Continued coolant circulation pump	459
056 - Tail light clusters , (5HA)	460-461
1. Tail light clusters , (5HA)	460
2. Left tail light cluster, Right tail light cluster	461
057 - Basic equipment	462-482
1. Basic equipment	462
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	463
3. Current supply relay, Starter motor relay	464
4. Clutch pedal switch, Fuel pump relay, Coolant pump relay, Additional coolant pump relay, Engine/motor control unit	465
5. Alternator with voltage regulator, Fuse 6 on fuse holder C	466
6. Ignition/starter switch, Fuse 3 on fuse holder C, Fuse 8 on fuse holder C	467
7. Steering column combination switch, Steering angle sender	468
8. Steering column combination switch, Coil connector, Horn plate, Airbag control unit, Multifunction steering wheel control unit	469
9. Windscreen wiper switch, Turn signal switch, Washer pump switch (automatic wash/wipe and headlight washer system), Steering column combination switch, Washer pump	470
10. Headlight dipper and flasher switch, Cruise control system switch, Multifunction display call-up button, Multifunction display memory switch, Steering column combination switch	471
11. Bonnet contact switch, Front passenger door lock unit	472
12. Heated rear window button, Rear left door lock unit, Rear right door lock unit, Heated rear window	473
13. Front interior light, Centre interior light	474
14. Hazard warning lights button, Brake light switch, Reversing light switch	475
15. Treble horn	476
16. Dash panel insert, Windscreen wiper motor	477
17. Coolant temperature gauge, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Ambient temperature indicator, Multifunction indicator, Dash panel insert, Washer fluid level warning lamp, Warning lamp for airbag deactivated on driver side	478
18. Brake fluid level warning contact, Fuel gauge, Fuel system pressurisation pump, Fuel pump control unit, Dash panel insert, Brake fluid level warning lamp, Reserve fuel warning lamp	479
19. Immobiliser reader coil, Oil pressure switch, Oil level and oil temperature sender, Ignition and starter key warning system buzzer and gong, Dash panel insert, Oil pressure warning lamp, Oil level warning lamp	480
20. Parking brake contact switch, Dash panel insert, Electric socket, Cigarette lighter, 12 V socket 4	481
21. Light 1 for front centre console background lighting, 12 V socket 2, Left washer jet heater element	482
058 - Interface for external use , (IS1)	483-487
1. Interface for external use , (IS1)	483
2. Ignition/starter switch, Onboard supply control unit, Fuse 3 on fuse holder A, Fuse holder C	484
3. Current supply relay, Onboard supply control unit, Front left headlight, Fuse holder C	485
4. Steering column combination switch, Reversing light switch, Onboard supply control unit	486
5. Parking brake contact switch, Alarm system relay 1, Onboard supply control unit, Dash panel insert	487
059 - Fuse assignment	488-519
1. Fuse assignment	488
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	489
3. Main relay, Engine/motor control unit fuse	490
4. Driver seat adjustment thermal fuse 1, Front passenger seat adjustment thermal fuse 1, ABS control unit fuse 1	491
5. Current supply relay, Starter motor relay, Fresh air blower fuse 1	492
6. Fuse 1 on fuse holder C, Fuse 2 on fuse holder C	493
7. Ignition/starter switch, Fuse 3 on fuse holder C, Fuse 4 on fuse holder C, Fuse 5 on fuse holder C	494
8. Fuse 6 on fuse holder C. Fuse 7 on fuse holder C. Fuse 8 on fuse holder C. Fuse 9 on fuse holder C	495

C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C	
9. Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C, Fuse 15 on fuse holder C, Fuse 16 on fuse holder C	496
10. Starter relay 1, Starter relay 2, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C, Fuse 19 on fuse holder C, Fuse 20 on fuse holder C	497
11. Fuse 21 on fuse holder C, Fuse 22 on fuse holder C, Fuse 23 on fuse holder C	498
12. Fuse 24 on fuse holder C	499
13. Fuel metering valve, Fuse 25 on fuse holder C, Fuse 32 on fuse holder C	500
14. Fuse 33 on fuse holder C, Fuse 34 on fuse holder C	501
15. Fuse 26 on fuse holder C, Fuse 27 on fuse holder C, Fuse 28 on fuse holder C	502
16. Fuse 29 on fuse holder C, Fuse 30 on fuse holder C, Fuse 31 on fuse holder C, Fuse 35 on fuse holder C	503
17. Fuse 36 on fuse holder C, Fuse 37 on fuse holder C, Fuse 38 on fuse holder C	504
18. Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C	505
19. Fuse 42 on fuse holder C	506
20. Fuse 49 on fuse holder C, Fuse 50 on fuse holder C	507
21. Fuse 43 on fuse holder C, Fuse 51 on fuse holder C	508
22. Fuse 44 on fuse holder C, Fuse 45 on fuse holder C, Fuse 46 on fuse holder C, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Fuse 52 on fuse holder C	509
23. Fuse 53 on fuse holder C, Fuse 54 on fuse holder C, Fuse 55 on fuse holder C	510
24. Delivery unit for reducing agent metering system, Fuse 56 on fuse holder C, Fuse 57 on fuse holder C, Fuse 58 on fuse holder C, Reducing agent tank	511
25. Emergency call module control unit and communication unit, Fuse 59 on fuse holder C	512
26. Heated rear window relay, Fuse 60 on fuse holder C, Fuse 61 on fuse holder C, Fuse 62 on fuse holder C	513
27. Alarm system relay 1, Fuse 63 on fuse holder C, Fuse 64 on fuse holder C	514
28. Fuse 65 on fuse holder C, Fuse 66 on fuse holder C, Fuse 67 on fuse holder C, Fuse 68 on fuse holder C	515
29. Fuse 1 in fuse holder F, Fuse 2 in fuse holder F, Fuse 3 in fuse holder F, Fuse 4 in fuse holder F, Fuse 5 in fuse holder F, Fuse 6 in fuse holder F, Fuse 7 in fuse holder F	516
30. Fuse 8 in fuse holder F, Fuse 9 in fuse holder F, Fuse 10 in fuse holder F, Fuse 11 in fuse holder F, Fuse 12 in fuse holder F	517
31. Fuel pump relay, Electric fuel pump 2 relay, Auxiliary coolant heater relay, Additional coolant pump relay, Onboard supply control unit, Engine/motor control unit	518
32. Fuel pump relay, Coolant pump relay, Auxiliary coolant heater relay, Continued coolant circulation pump	519
060 - Parking aid (PDC)	520-524
1. Parking aid (PDC)	520
2. Rear parking aid warning buzzer, Front parking aid warning buzzer, Warning buzzer 2 for rear parking aid, Parking aid control unit, Fuse 50 on fuse holder C	521
3. Headlight range control regulator, Parking aid button, Parking aid control unit, Onboard supply control unit	522
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	523
5. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	524
061 - Electronic logbook, chip card reader unit , (9ND),(9NE)	525-527
1. Electronic logbook, chip card reader unit , (9ND),(9NE)	525
2. Tachograph, Onboard supply control unit, Fuse 50 on fuse holder C, Fuse 54 on fuse holder C	526
3. Tachograph, Tachograph sender, Onboard supply control unit	527
062 - Hardtop , (YS9)	528-534
1. Hardtop , (YS9)	528
2. Heated rear window button, Brake light switch, Onboard supply control unit, Fuse 16 on fuse holder C, Fuse 20 on fuse holder C, Fuse 62 on fuse holder C	529
3. Onboard supply control unit, Left brake light bulb, Right brake light bulb, Fuse 8 in fuse holder F, Fuse 50 on fuse holder C, Heated rear window	530
4. Aerial, Remote control receiver for unlocking armoured vehicle, Left vent window motor, Right vent window motor, Rear lid electric opener motor	531
5. Heated rear window relay, Blocking relay, Remote control receiver for unlocking armoured vehicle, Fuse holder H, Heated rear window for hardtop	532
6. Left sender for rear window frame locked, Right sender for rear window frame locked	533
7. Sender for rear window frame open, Warning lamp, High-level brake light bulb, Rear interior light	534
063 - Basic equipment	535-555
1. Basic equipment	535
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	536
3. Current supply relav. Starter motor relav	537

4. Clutch pedal switch, Fuel pump relay, Additional coolant pump relay, Engine/motor control unit, Auxiliary pump for heating	538
5. Alternator with voltage regulator, Fuse 6 on fuse holder C	539
6. Ignition/starter switch, Fuse 3 on fuse holder C, Fuse 8 on fuse holder C	540
7. Steering column combination switch, Steering angle sender	541
8. Steering column combination switch, Coil connector, Horn plate, Airbag control unit, Multifunction steering wheel control unit	542
9. Windscreen wiper switch, Turn signal switch, Washer pump switch (automatic wash/wipe and headlight washer system), Steering column combination switch, Washer pump	543
10. Headlight dipper and flasher switch, Cruise control system switch, Multifunction display call-up button, Multifunction display memory switch, Steering column combination switch	544
11. Bonnet contact switch, Front passenger door lock unit	545
12. Heated rear window button, Rear left door lock unit, Rear right door lock unit, Heated rear window	546
13. Front interior light, Centre interior light	547
14. Hazard warning lights button, Brake light switch, Reversing light switch	548
15. Treble horn	549
16. Dash panel insert, Windscreen wiper motor	550
17. Coolant temperature gauge, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Ambient temperature indicator, Multifunction indicator, Dash panel insert, Washer fluid level warning lamp, Warning lamp for airbag deactivated on driver side	551
18. Brake fluid level warning contact, Fuel gauge, Fuel system pressurisation pump, Dash panel insert, Brake fluid level warning lamp, Reserve fuel warning lamp	552
19. Immobiliser reader coil, Oil pressure switch, Oil level and oil temperature sender, Ignition and starter key warning system buzzer and gong, Dash panel insert, Oil pressure warning lamp, Oil level warning lamp	553
20. Parking brake contact switch, Dash panel insert, Electric socket, Cigarette lighter, 12 V socket 4	554
21. Light 1 for front centre console background lighting, 12 V socket 2, Left washer jet heater element	555
064 - Fuse assignment	556-585
1. Fuse assignment	556
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	557
3. Main relay, Engine/motor control unit fuse	558
4. Driver seat adjustment thermal fuse 1, Front passenger seat adjustment thermal fuse 1, ABS control unit fuse 1	559
5. Current supply relay, Starter motor relay, Fresh air blower fuse 1	560
6. Fuse 1 on fuse holder C, Fuse 2 on fuse holder C	561
7. Ignition/starter switch, Fuse 3 on fuse holder C, Fuse 4 on fuse holder C, Fuse 5 on fuse holder C	562
8. Fuse 6 on fuse holder C, Fuse 7 on fuse holder C, Fuse 8 on fuse holder C, Fuse 9 on fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C	563
9. Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C, Fuse 15 on fuse holder C, Fuse 16 on fuse holder C	564
10. Starter relay 1, Starter relay 2, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C, Fuse 19 on fuse holder C, Fuse 20 on fuse holder C	565
11. Fuse 21 on fuse holder C, Fuse 22 on fuse holder C, Fuse 23 on fuse holder C, Lambda probe heater	566
12. Fuel metering valve, Fuse 24 on fuse holder C, Fuse 25 on fuse holder C	567
13. Fuse 32 on fuse holder C, Fuse 33 on fuse holder C, Fuse 34 on fuse holder C	568
14. Fuse 26 on fuse holder C, Fuse 27 on fuse holder C, Fuse 28 on fuse holder C	569
15. Fuse 29 on fuse holder C, Fuse 30 on fuse holder C, Fuse 31 on fuse holder C, Fuse 35 on fuse holder C, Auxiliary pump for heating	570
16. Fuse 36 on fuse holder C, Fuse 37 on fuse holder C, Fuse 38 on fuse holder C	571
17. Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C	572
18. Fuse 42 on fuse holder C	573
19. Fuse 49 on fuse holder C, Fuse 50 on fuse holder C	574
20. Fuse 43 on fuse holder C, Fuse 51 on fuse holder C	575
21. Fuse 44 on fuse holder C, Fuse 45 on fuse holder C, Fuse 46 on fuse holder C, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Fuse 52 on fuse holder C	576
22. Fuse 53 on fuse holder C, Fuse 54 on fuse holder C, Fuse 55 on fuse holder C	577
23. Delivery unit for reducing agent metering system, Fuse 56 on fuse holder C, Fuse 57 on fuse holder C, Fuse 58 on fuse holder C, Reducing agent tank	578
24. Emergency call module control unit and communication unit, Fuse 59 on fuse holder C	579
25. Fuse 60 on fuse holder C, Fuse 61 on fuse holder C, Fuse 62 on fuse holder C	580
26. Alarm system relay 1. Fuse 63 on fuse holder C. Fuse 64 on fuse holder C	581

27. Fuse 65 on fuse holder C, Fuse 66 on fuse holder C, Fuse 67 on fuse holder C, Fuse 68 on fuse holder C	582
28. Heated rear window relay, Blocking relay, Fuse 1 in fuse holder F, Fuse 2 in fuse holder F, Fuse 3 in fuse holder F, Fuse 4 in fuse holder F, Fuse holder H, Fuse 5 in fuse holder F, Fuse 6 in fuse holder F, Fuse 7 in fuse holder F	583
29. Fuse 8 in fuse holder F, Fuse 9 in fuse holder F, Fuse 10 in fuse holder F, Fuse 11 in fuse holder F, Fuse 12 in fuse holder F	584
30. Fuel pump relay, Electric fuel pump 2 relay, Auxiliary coolant heater relay, Additional coolant pump relay, Onboard supply control unit, Engine/motor control unit	585
065 - 3.0l diesel engine , DDXA,DDXB,DDXC,DDXD,DDXE,(7MJ),(7MM),(7MR)	586-606
1. 3.0l diesel engine , DDXA,DDXB,DDXC,DDXD,DDXE,(7MJ),(7MM),(7MR)	586
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A	587
3. Brake light switch, Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, ABS control unit, Engine/motor control unit, Fuse 57 on fuse holder C, Engine/motor control unit fuse	588
4. Fuel pump relay, Main relay, Auxiliary coolant heater relay, Additional coolant pump relay, Engine/motor control unit, Fuse 10 in fuse holder F, Fuse 38 on fuse holder C, Fuse 58 on fuse holder C, Fuse 59 on fuse holder C, Circulation pump	589
5. Ignition/starter switch, Onboard supply control unit, Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse 9 on fuse holder C, Fuse 18 on fuse holder C, Fuse 20 on fuse holder C, Fuse 29 on fuse holder C, Diagnostic connection	590
6. Switch and instrument illumination regulator, Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit, Fuse 6 on fuse holder C	591
7. Cylinder 2 combustion chamber pressure sender, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	592
8. Clutch pedal switch, Clutch pedal switch for stop/start system, Lambda probe 1 before catalytic converter, Lambda probe, Air mass meter, Gearbox neutral position sender, Automatic gearbox control unit, Engine/motor control unit, Fuse 23 on fuse holder C, Fuse 27 on fuse holder C, Fuse 28 on fuse holder C	593
9. Intake manifold sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender for low pressure, Exhaust gas temperature sender 4, Engine/motor control unit	594
10. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	595
11. Map-controlled engine cooling system thermostat, Exhaust gas recirculation valve 1, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Exhaust gas recirculation cooling bypass valve 2, Coolant valve for cylinder head, Fuse 2 on fuse holder C	596
12. Coolant temperature sender, Fuel temperature sender, Oil temperature sender 2, Coolant temperature sender 2, Coolant temperature sender 3, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 25 on fuse holder C	597
13. Oil pressure sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit, Valve for oil pressure control	598
14. Engine speed sender, Hall sender, Pressure differential sender, Engine/motor control unit, Turbocharger 1 control unit	599
15. Throttle valve module, Intake manifold flap control unit, Fuel pressure sender, Engine/motor control unit	600
16. Radiator fan control unit, Engine/motor control unit, Fuse 31 on fuse holder C, Radiator fan	601
17. NOx sender, NOx sender 2, Particulate sensor, Engine/motor control unit, Fuse 34 on fuse holder C	602
18. Delivery unit for reducing agent metering system, Engine/motor control unit, Relay for reducing agent metering system, Fuse 56 on fuse holder C, Reducing agent tank	603
19. Water separator sender, Engine/motor control unit, Control unit for reducing agent heater, Injector for reducing agent, Fuse 9 in fuse holder F, Reducing agent tank, Heater for reducing agent line (heater circuit 2)	604
20. Start/Stop operation button, Engine/motor control unit, Dash panel insert, Fuse 50 on fuse holder C	605
21. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	606
066 - 3.0l diesel engine , DDXA,DDXB,DDXC,DDXD,DDXE,(7CN)	607-627
1. 3.0l diesel engine , DDXA,DDXB,DDXC,DDXD,DDXE,(7CN)	607
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A	608
3. Brake light switch, Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, ABS control unit, Engine/motor control unit, Fuse 57 on fuse holder C, Engine/motor control unit fuse	609
4. Fuel pump relay, Main relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 10 in fuse holder F. Fuse 38 on fuse holder C. Fuse 58 on fuse holder C. Circulation pump. Auxiliary	610

pump for heating	
5. Ignition/starter switch, Onboard supply control unit, Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse 9 on fuse holder C, Fuse 18 on fuse holder C, Fuse 20 on fuse holder C, Fuse 29 on fuse holder C, Diagnostic connection	611
6. Switch and instrument illumination regulator, Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit, Fuse 6 on fuse holder C	612
7. Cylinder 2 combustion chamber pressure sender, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	613
8. Clutch pedal switch, Clutch pedal switch for stop/start system, Lambda probe 1 before catalytic converter, Lambda probe, Air mass meter, Gearbox neutral position sender, Automatic gearbox control unit, Engine/motor control unit, Fuse 23 on fuse holder C, Fuse 27 on fuse holder C, Fuse 28 on fuse holder C	614
9. Intake manifold sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender for low pressure, Exhaust gas temperature sender 4, Engine/motor control unit	615
10. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	616
11. Map-controlled engine cooling system thermostat, Exhaust gas recirculation valve 1, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Exhaust gas recirculation cooling bypass valve 2, Coolant valve for cylinder head, Fuse 2 on fuse holder C	617
12. Coolant temperature sender, Fuel temperature sender, Oil temperature sender 2, Coolant temperature sender 2, Coolant temperature sender 3, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 25 on fuse holder C	618
13. Oil pressure sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit, Valve for oil pressure control	619
14. Engine speed sender, Hall sender, Pressure differential sender, Engine/motor control unit, Turbocharger 1 control unit	620
15. Throttle valve module, Intake manifold flap control unit, Fuel pressure sender, Engine/motor control unit	621
16. Radiator fan control unit, Engine/motor control unit, Fuse 31 on fuse holder C, Radiator fan	622
17. NOx sender, NOx sender 2, Particulate sensor, Engine/motor control unit, Fuse 34 on fuse holder C	623
18. Delivery unit for reducing agent metering system, Engine/motor control unit, Relay for reducing agent metering system, Fuse 56 on fuse holder C, Reducing agent tank	624
19. Water separator sender, Engine/motor control unit, Control unit for reducing agent heater, Injector for reducing agent, Fuse 9 in fuse holder F, Reducing agent tank, Heater for reducing agent line (heater circuit 2)	625
20. Start/Stop operation button, Engine/motor control unit, Dash panel insert, Fuse 50 on fuse holder C	626
21. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	627
067 - Earthing concept , (LOR)	628-651
1. Earthing concept , (LOR)	628
2. Driver door control unit, Front passenger door control unit, Control unit 1 for information electronics, Radio	629
3. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Switch module for driver seat, Switch module for front passenger seat, Reversing camera	630
4. Bonnet contact switch, Parking brake contact switch, Selector lever sensors control unit, Electric socket, Cigarette lighter, Rear right door lock unit	631
5. Running gear program switch, Alarm horn, Rear right door control unit, Seat heating control unit, Reduction gearing warning lamp in transfer box operating unit	632
6. Suppression filter, Differential lock control unit, Wiper motor control unit, Front passenger door lock unit, Heated exterior mirror on passenger side	633
7. Mirror adjustment switch, Central locking button, Central locking SAFELOCK function warning lamp, Rear left door lock unit, Heated exterior mirror on driver side	634
8. Button for left seat heating, Button for right seat heating, Trailer detector control unit, Dash panel insert, 12 V socket 4, Left washer jet heater element	635
9. Fresh air blower control unit, Climatronic control unit, Air conditioning system control unit, Fresh air blower	636
10. Heater/heat output switch, Hazard warning lights button, Heated rear window button, Parking aid button, Load area illumination switch, Start/Stop operation button, Light 1 for front centre console background lighting, 12 V socket 2	637
11. Light switch, Rain and light sensor, Current supply relay, Starter motor relay, Terminal 15 voltage supply relay, Rear left door control unit, Alarm system relay 1, Auxiliary coolant heater relay, Transfer box control unit, Heater element for crankcase breather	638
12. Rear differential lock switch. Button for TCS and electronic stabilisation program. Driving	639

program button, Tachograph, Reducing agent tank, Automatic anti-dazzle interior mirror, Heater for reducing agent line (heater circuit 2)	
13. Steering column combination switch, Brake light switch, Clutch pedal switch for stop/start system, High-pressure sender, Horn plate, Multifunction steering wheel control unit	640
14. Switch and instrument illumination regulator, Headlight range control regulator, Headlight main beam relay, Airbag control unit, Parking aid control unit, Power steering control unit, Roof display unit, Aerial, Remote control receiver for auxiliary coolant heater, Diagnostic connection	641
15. Battery, Battery monitor control unit, Left additional main beam bulb, Right additional main beam bulb, Centre left additional main beam bulb, Centre right additional main beam bulb, Front interior light, Centre interior light	642
16. Anti-theft alarm sensor, High-level brake light bulb, Heated rear window	643
17. ABS control unit, Auxiliary heater control unit, Left fog light bulb, Heater coolant shut-off valve, Circulation pump	644
18. Treble horn, Radiator fan control unit, Left turn signal repeater bulb, Continued coolant circulation pump	645
19. Oil level and oil temperature sender, Automatic glow period control unit, Engine/motor control unit	646
20. Brake fluid level warning contact, Right fog light bulb, Front left headlight, Front right headlight, Right turn signal repeater bulb, Left headlight range control motor, Right headlight range control motor	647
21. Tyre Pressure Monitoring System control unit, 14-pin connector, Trailer socket, 12 V socket 3	648
22. Control unit for NOx sender, Control unit for sensor electronics, Control unit for NOx sender 2, Left tail light cluster, Right tail light cluster, Left number plate light, Right number plate light	649
23. Transfer box inter-axle lock-up switch, Fuel system pressurisation pump, Oil level and oil temperature sender, Automatic gearbox control unit, Air conditioner compressor regulating valve, Metering pump, Auxiliary pump for heating	650
24. Left sender for rear window frame locked, Right sender for rear window frame locked, Sender for rear window frame open, Heated rear window relay, Blocking relay, Warning lamp, Remote control receiver for unlocking armoured vehicle, Rear interior light, Heated rear window for hardtop	651
068 - Earthing concept , (LOL)	652-675
1. Earthing concept , (LOL)	652
2. Emergency assistance call button, Driver door control unit, Front passenger door control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Radio	653
3. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Switch module for driver seat, Switch module for front passenger seat, Reversing camera	654
4. Bonnet contact switch, Parking brake contact switch, Selector lever sensors control unit, Electric socket, Cigarette lighter, Rear right door lock unit	655
5. Running gear program switch, Alarm horn, Rear right door control unit, Seat heating control unit, Reduction gearing warning lamp in transfer box operating unit	656
6. Differential lock control unit, Wiper motor control unit	657
7. Suppression filter, Mirror adjustment switch, Central locking button, Central locking SAFELOCK function warning lamp, Driver door lock unit, Rear left door lock unit, Heated exterior mirror on driver side	658
8. Button for left seat heating, Button for right seat heating, Trailer detector control unit, Dash panel insert, 12 V socket 4, Left washer jet heater element	659
9. Fresh air blower control unit, Climatronic control unit, Air conditioning system control unit, Fresh air blower	660
10. Heater/heat output switch, Hazard warning lights button, Heated rear window button, Parking aid button, Load area illumination switch, Start/Stop operation button, Light 1 for front centre console background lighting, 12 V socket 2	661
11. Light switch, Rain and light sensor, Current supply relay, Starter motor relay, Terminal 15 voltage supply relay, Rear left door control unit, Alarm system relay 1, Auxiliary coolant heater relay, Transfer box control unit, Heater element for crankcase breather	662
12. Rear differential lock switch, Button for TCS and electronic stabilisation program, Driving program button, Tachograph, Reducing agent tank, Automatic anti-dazzle interior mirror, Heater for reducing agent line (heater circuit 2)	663
13. Steering column combination switch, Brake light switch, Clutch pedal switch for stop/start system, High-pressure sender, Horn plate, Multifunction steering wheel control unit	664
14. Switch and instrument illumination regulator, Headlight range control regulator, Headlight main beam relay, Airbag control unit, Parking aid control unit, Power steering control unit, Roof display unit, Aerial, Remote control receiver for auxiliary coolant heater, Diagnostic connection	665
15. Battery, Battery monitor control unit, Left additional main beam bulb, Right additional main beam bulb, Centre left additional main beam bulb, Centre right additional main beam bulb, Front interior light, Centre interior light	666
16. Anti-theft alarm sensor. High-level brake light bulb. Heated rear window	667

17. ABS control unit, Auxiliary heater control unit, Left fog light bulb, Heater coolant shut-off valve, Circulation pump	668
18. Treble horn, Radiator fan control unit, Left turn signal repeater bulb, Continued coolant circulation pump	669
19. Oil level and oil temperature sender, Automatic glow period control unit, Engine/motor control unit	670
20. Brake fluid level warning contact, Right fog light bulb, Front left headlight, Front right headlight, Right turn signal repeater bulb, Left headlight range control motor, Right headlight range control motor	671
21. Tyre Pressure Monitoring System control unit, 14-pin connector, Trailer socket, 12 V socket 3	672
22. Control unit for NOx sender, Control unit for sensor electronics, Control unit for NOx sender 2, Left tail light cluster, Right tail light cluster, Left number plate light, Right number plate light	673
23. Transfer box inter-axle lock-up switch, Fuel system pressurisation pump, Oil level and oil temperature sender, Automatic gearbox control unit, Air conditioner compressor regulating valve, Metering pump, Auxiliary pump for heating	674
24. Left sender for rear window frame locked, Right sender for rear window frame locked, Sender for rear window frame open, Heated rear window relay, Blocking relay, Warning lamp, Remote control receiver for unlocking armoured vehicle, Rear interior light, Heated rear window for hardtop	675
801 - Fitting locations: Earth points - 3	676-678
1. Earth points	676-678
1.1 Earth points, in engine compartment	676
1.2 Earth points in interior	677
1.3 Earth points under the vehicle	678
802 - Fitting locations: Fuses - 3	679-701
1. Fuses	679-701
1.1 Fuse holder A -SA-	679-680
1.1.1 Fitting location	679
1.1.2 Fuse assignment, from June 2016	680
1.2 Fuse holder C -SC-(68-pin)	681-691
1.2.1 Fitting location for left-hand-drive vehicles	681-682
1.2.2 Fitting location for right-hand-drive vehicles	683
1.2.3 Fuse colours	683
1.2.4 Fuse assignment, from June 2016	684-691
1.3 Fuse holder D -SD- and fuse holder F -SF-	692-695
1.3.1 Fitting location for left-hand-drive vehicles	692-693
1.3.2 Fitting location for right-hand-drive vehicles	694
1.3.3 Fuse colours	695
1.3.4 Fuse assignment, from June 2016	695
1.4 Fuses in relay carrier 1	696-697
1.4.1 Fitting location for left-hand-drive vehicles	696
1.4.2 Fitting location for right-hand-drive vehicles	697
1.4.3 Fuse colours	697
1.4.4 Fuse assignment, from June 2016	698
1.5 Fuses in relay carrier 2	698-701
1.5.1 Fitting location for left-hand-drive vehicles	698-699
1.5.2 Fitting location for right-hand-drive vehicles	700
1.5.3 Fuse colours	700
1.5.4 Fuse assignment, from June 2016	701
803 - Fitting locations: Relays - 3	702-707
1. Relays	702-707
1.1 Relay carrier 1 on left under dash panel (left-hand-drive vehicles), from June 2016	702-703
1.1.1 Relay assignment	702-703
1.2 Relay carrier 1 on right under dash panel (right-hand-drive vehicles), from June 2016	704-705
1.2.1 Relay assignment	704-705
1.3 Relay carrier 2 on left under dash panel (left-hand-drive vehicles), from June 2016	706
1.3.1 Relay assignment	706
1.4 Relay carrier 2 on right under dash panel (right-hand-drive vehicles), from June 2016	707
1.4.1 Relay assignment	707
804 - Fitting locations: Control units in front end of vehicle - 3	708-719
1. Control units in front part of vehicle	708-719
1.1 ABS control unit -J104-	708-710
1.1.1 Fitting location for vehicles with 3.0l engine 1)	708-709
1.1.2 Fitting location for vehicles with 2.0l engine 1), 2) and 3.0l engine 2)	710
1.2 Automatic glow period control unit -J179-	711
1.3 Automatic gearbox control unit -J217-	712-713
1.4 Radiator fan control unit -J293-	714

1.5 Auxiliary heater control unit -J364-	715
1.6 Battery monitor control unit -J367-	716
1.7 Engine control unit -J623-	717-719
1.7.1 Connector pin assignment for vehicles with 2.0l engine	717
1.7.2 Connector pin assignment for vehicles with 3.0l engine	718-719
805 - Fitting locations: Control units in middle of vehicle - 3	720-765
1. Control units in middle part of vehicle	720-765
1.1 Heater/heat output switch -E16- or Climatronic control unit -J255- or Air conditioning system control unit -J301-	720-723
1.1.1 Heater/heat output switch -E16-	720
1.1.2 Climatronic control unit -J255-	721
1.1.3 Air conditioning system control unit -J301-	722-723
1.2 Control unit 1 for information electronics -J794- and radio -R-	724-725
1.2.1 Control unit 1 for information electronics -J794- (8AY)	724
1.2.2 Control unit 1 for information electronics -J794- (17A/17C)	725
1.2.3 Radio -R- (17D/17F)	726
1.3 USB connection holder -R193- and connection for external audio sources -R199-	726
1.4 Anti-theft alarm sensor -G578-	727
1.5 Roof display unit -J702-	728
1.6 Selector lever sensors control unit -J587-	729-730
1.7 Parking aid control unit -J446-	731-732
1.7.1 Fitting location for left-hand-drive vehicles	731
1.7.2 Fitting location for right-hand-drive vehicles	732
1.8 Remote control receiver for auxiliary coolant heater -R149-	733
1.8.1 Fitting location for left-hand-drive vehicles	733
1.8.2 Fitting location for right-hand-drive vehicles	734
1.9 Multifunction steering wheel control unit -J453-	734
1.10 Control unit in dash panel insert -J285-	735-736
1.11 Emergency call module control unit and communication unit -J949-	737-738
1.12 Onboard supply control unit -J519-	739-752
1.12.1 Fitting location for left-hand-drive vehicles	739
1.12.2 Fitting location for right-hand-drive vehicles	740
1.12.3 Pin assignment for 73-pin connector -T73a-, black	741-746
1.12.4 Pin assignment for 73-pin connector -T73b-, colourless	747-752
1.13 Trailer detector control unit -J345-	753
1.13.1 Fitting location for left-hand-drive vehicles	753
1.13.2 Fitting location for right-hand-drive vehicles	754
1.14 Airbag control unit -J234-	754-755
1.15 Seat heating control unit -J882-	756
1.15.1 Fitting location for left-hand-drive vehicles	756
1.15.2 Fitting location for right-hand-drive vehicles	757
1.16 Differential lock control unit -J187-	757
1.17 Transfer box control unit -J646-	758
1.18 Steering column combination switch -E595- with coil connector -F350-	759
1.19 Suppression filter -C10- and driver door control unit -J386-	760-761
1.20 Front passenger door control unit -J387-	762-763
1.21 Rear left door control unit -J388-	764
1.22 Rear right door control unit -J389-	764-765
806 - Fitting locations: Control units in bottom part of vehicle - 3	766-773
1. Control units in bottom part of vehicle	766-773
1.1 Fuel pump control unit -J538-	766
1.2 Delivery unit for reducing agent metering system -GX19- on reducing agent tank -VX85-	767
1.3 Control unit for NOx sender -J583- with NOx sender -G295-	767
1.4 Control unit for sensor electronics -J849- with Particulate sensor -G784-	768
1.5 Control unit for NOx sender 2 -J881- with NOx sender 2 -G687-	769
1.6 Control unit for reducing agent heater -J891-	770
1.7 Tyre Pressure Monitoring System control unit -J502-	771
1.8 Reversing camera -R189-	772-773
807 - Fitting locations: Coupling points - 3	774-776
1. Coupling points	774-776
1.1 Coupling points behind dash panel	774-775
1.1.1 Coupling points behind dash panel, left (left-hand drive vehicle)	774
1.1.2 Coupling points behind dash panel, right (right-hand drive vehicle)	775
1.2 Coupling points near handbrake lever	776