



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
2 Identification	2
2.1 Allocation of PR number - brakes	2
3 Technical data	5
3.1 Technical data for brakes	5
4 Brake test	8
4.1 General information	8
4.2 Checking vehicles with front-wheel drive	8
4.3 Checking vehicles with all-wheel drive	8
4.4 Checking parking brake	9
45 - Anti-lock brake system	11
1 General information	11
1.1 Repair instructions for repair work on ABS	11
2 Overview of fitting locations	14
2.1 Overview of fitting locations - ABS/ESP	14
3 Control unit and hydraulic unit	16
3.1 Assembly overview - control unit and hydraulic unit	16
3.2 Removing and installing ABS control unit J104 and ABS hydraulic unit N55	20
3.3 Connecting brake lines to hydraulic unit	42
3.4 Separating control unit from hydraulic unit	44
3.5 Fitting control unit to hydraulic unit	45
4 Sensors	47
4.1 Assembly overview - speed sensor on front axle	47
4.2 Assembly overview - speed sensor on rear axle	48
4.3 Removing and installing speed sensors on front axle G45 / G47	49
4.4 Removing and installing speed sensors on rear axle G44 / G46	50
4.5 Checking ABS sensor ring	51
4.6 Removing and installing ESP sensor unit G419	52
4.7 Removing and installing steering angle sender G85	53
46 - Brakes - mechanism	54
1 Front brake	54
1.1 Assembly overview - front brake	54
1.2 Removing and installing brake pads	56
1.3 Removing and installing brake caliper	59
2 Rear brake	61
2.1 Assembly overview - rear brakes	61
2.2 Removing and installing brake pads	63
2.3 Removing and installing brake caliper	67
3 Parking brake	72
3.1 Overview of fitting locations - parking brake	72
3.2 Removing and installing control unit for electromechanical parking brake J540	73
3.3 Removing and installing parking brake motor V282 / V283	73
4 Brake pedal	76
4.1 Assembly overview - brake pedal	76
4.2 Separating brake pedal from brake servo	79
4.3 Connecting brake pedal to brake servo	80
4.4 Removing and installing brake pedal	80



4.5	Removing and installing mounting bracket	81
47 - Brakes - hydraulics		86
1	Front brake caliper	86
1.1	Assembly overview – front brake caliper	86
1.2	Removing and installing brake caliper piston	87
2	Rear brake caliper	90
2.1	Assembly overview – rear brake caliper	90
2.2	Removing and installing protective cap	90
3	Brake servo and brake master cylinder	94
3.1	Assembly overview - brake servo/brake master cylinder	94
3.2	Removing and installing brake light switch	102
3.3	Removing and installing brake master cylinder	104
3.4	Removing and installing brake servo	129
4	Vacuum system	158
4.1	Assembly overview - vacuum pump	158
4.2	Checking non-return valve	162
4.3	Removing and installing vacuum sender G608	162
4.4	Removing and installing electric vacuum pump	162
4.5	Checking vacuum system	163
5	Brake lines	168
5.1	Repairing brake lines	168
6	Hydraulic system	173
6.1	General notes on brake fluid	173
6.2	Pre-bleeding hydraulic system	173
6.3	Bleeding hydraulic system following standard procedure	175
6.4	Subsequent bleeding of hydraulic system	176
6.5	Testing for leaks	177