



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Repair notes</b>	<b>1</b>
1.1 General repair instructions	1
1.2 Routing and attachment of lines	1
1.3 Notes on repair of CAN bus wiring	1
1.4 General notes	1
<b>91 - Communication</b>	<b>3</b>
<b>1 Infotainment system</b>	<b>4</b>
1.1 Components of infotainment system	4
1.2 Overview of fitting locations - Infotainment system	5
1.3 Removing and installing infotainment system display	6
1.4 Removing and installing control unit 1 for information electronics J794	8
1.5 Renewing rotary knobs of display unit for front information display and operating unit control unit J685	9
<b>2 Sound system</b>	<b>11</b>
2.1 Components of sound system	11
2.2 Overview of fitting locations - sound system	12
2.3 Removing and installing digital sound package control unit/amplifier	13
2.4 Removing and installing retainer for digital sound package control unit J525	15
2.5 Removing and installing front treble loudspeakers R20 / R22	15
2.6 Removing and installing rear treble loudspeakers R14 / R16	15
2.7 Removing and installing front mid-range loudspeakers	16
2.8 Removing and installing front bass loudspeakers R21 / R23	17
2.9 Removing and installing rear bass loudspeakers R15 / R17	18
2.10 Removing and installing subwoofer R211	19
2.11 Removing and installing centre loudspeaker	20
<b>3 Aerial systems</b>	<b>22</b>
3.1 Components of aerial systems	22
3.2 Overview of fitting locations - aerial systems	22
3.3 Removing and installing aerial module	24
3.4 Removing and installing aerial amplifier	25
3.5 Removing and installing frequency modulation (FM) frequency filter in negative wire R178	26
3.6 Removing and installing frequency modulation (FM) frequency filter in positive wire R179	27
3.7 Removing and installing roof aerial	28
3.8 Removing and installing bumper aerials	29
<b>4 Radio</b>	<b>32</b>
4.1 Components of radio system	32
4.2 Removing and installing radio	32
<b>5 Telephone system</b>	<b>33</b>
5.1 Mobile telephone preparation	33
5.2 Overview of fitting locations - telephone system	35
5.3 Removing and installing telephone microphone R38	36
5.4 Removing and installing two-way signal amplifier for mobile telephone/data services J984	38
5.5 Removing and installing storage compartment with interface for mobile telephone R265	38
<b>6 Navigation system</b>	<b>39</b>
6.1 Components of navigation system	39
6.2 Overview of fitting locations - navigation system	39
6.3 Removing and installing control unit for navigation system	40



<b>7</b>	<b>TV system</b>	<b>41</b>
7.1	Overview of fitting locations - TV system	41
7.2	Removing and installing TV tuner	41
<b>8</b>	<b>Reversing camera system</b>	<b>44</b>
8.1	Components of reversing camera system	44
8.2	Overview of fitting locations - reversing camera system	44
8.3	Removing and installing reversing camera R189	45
8.4	Removing and installing reversing camera system control unit J772	45
8.5	Calibrating reversing camera system	46
<b>9</b>	<b>Multifunction steering wheel</b>	<b>52</b>
9.1	Components of multifunction steering wheel	52
9.2	Assembly overview - multifunction steering wheel	52
9.3	Removing and installing steering wheel multifunction buttons E441 / E440	53
9.4	Removing and installing Tiptronic switch in steering wheel E439 / E438	56
<b>10</b>	<b>Connection for external multimedia devices</b>	<b>58</b>
10.1	Removing and installing connection for external multimedia devices	58
10.2	Removing and installing USB charging socket 1 U37	60
10.3	Removing and installing USB hub R293	60
<b>11</b>	<b>Car-Net</b>	<b>62</b>
11.1	General notes	62
11.2	Overview of fitting locations - Car-Net services	62
11.3	Removing and installing emergency call module control unit and communication unit J949	63
11.4	Removing and installing telematics button module E734	65
11.5	Removing and installing loudspeaker for emergency call module R335	65
11.6	Renewing control unit for emergency call module and communication unit J949	66
11.7	Renewing battery in emergency call module control unit and communication unit J949	66
11.8	Commissioning ERA Glonass	68
<b>12</b>	<b>Overhead view camera</b>	<b>69</b>
12.1	Overview - overhead view camera	69
12.2	Overview of fitting locations - overhead view camera	69
12.3	Removing and installing overhead view camera control unit J928	70
12.4	Removing and installing front overhead view camera R243	71
12.5	Removing and installing left overhead view camera R244	72
12.6	Removing and installing right overhead view camera R245	73
12.7	Removing and installing rear overhead view camera R246	73
12.8	Calibrating overhead view camera	73