



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety measures when working with pyrotechnic components	2
1.3 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	3
1.4 Additional safety regulations for side airbag	4
1.5 Additional safety instructions for curtain airbag	4
1.6 Safety regulations for crash sensors (pressure sensors) for front side airbags	5
1.7 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	5
1.8 Checking airbag securing parts after an accident	7
1.9 Accident without airbag triggering	7
1.10 Checking seat belts	7
1.11 Check belt webbing	8
1.12 Checking inertia reel (locking mechanism)	9
1.13 Visually checking belt buckle	10
1.14 Check operation of belt buckle	10
1.15 Checking belt relays, and buckle tongues	10
1.16 Checking securing parts and anchorage points after an accident	10
1.17 Checking seat belt restraint function for holding additional child seats (not for driver's seat belt) - country-specific	11
1.18 Checking child seat anchors after an accident	11
2 Repair instructions	12
2.1 Contact corrosion	12
2.2 Pipe/wire routing and attachment	12
68 - Interior equipment	13
1 Compartments/covers	13
1.1 Overview of fitting locations – compartments/covers	13
1.2 Assembly overview – dash panel cover on driver side	14
1.3 Assembly overview - steering column trim	15
1.4 Assembly overview – glove compartment	17
1.5 Assembly overview - storage compartment in headliner	18
1.6 Removing and installing dash panel cover on driver side	19
1.7 Removing and installing gap cover of dash panel insert, fully digital dash panel insert	20
1.8 Removing and installing upper steering column trim	21
1.9 Removing and installing lower steering column trim	23
1.10 Removing and installing glove compartment opener	24
1.11 Service position for glove compartment cover	25
1.12 Removing and installing restrictor for glove compartment cover	26
1.13 Removing and installing glove compartment	28
1.14 Removing and installing glove compartment cover	28
1.15 Removing and installing headliner storage compartment	29
2 Equipment	31
2.1 Assembly overview - net partition, Arteon Shooting Brake	31
2.2 Assembly overview – sun visors	32
2.3 Removing and installing net partition, Arteon Shooting Brake	32
2.4 Removing and installing net partition support element, Arteon Shooting Brake	33
2.5 Removing and installing sun visor	34
2.6 Removing and installing sun visor centre mount	36
2.7 Removing and installing roof grab handle	37
2.8 Removing and installing bracket for roof grab handle	40



3	Centre console	41
3.1	Removing and installing front ashtray	41
3.2	Removing and installing rear centre console trim	41
3.3	Removing and installing centre console trim in front footwell	43
3.4	Removing and installing trim for operating and display unit	44
3.5	Removing and installing centre console front storage compartment	45
3.6	Removing and installing centre console insert	45
3.7	Removing and installing centre console	52
3.8	Removing and installing centre console bracket	57
4	Front centre armrest	60
4.1	Removing and installing front centre armrest	60
5	Interior mirror	62
5.1	Assembly overview – interior mirror	62
5.2	Removing and installing interior mirror	66
69	Passenger protection	74
1	Seat belts	74
1.1	Overview of fitting locations – seat belts and anchorage points	74
1.2	Assembly overview – front three-point seat belt	76
1.3	Assembly overview – rear outer three-point seat belt	80
1.4	Assembly overview – rear centre three-point seat belt	80
1.5	Assembly overview – front belt buckle	81
1.6	Assembly overview – rear belt buckle	82
1.7	Removing and installing front three-point seat belt	84
1.8	Removing and installing rear three-point seat belt	87
1.9	Removing and installing front belt guide	89
1.10	Removing and installing rear belt guide	90
1.11	Removing and installing front belt end fitting	91
1.12	Removing and installing rear outer belt end fitting	92
1.13	Removing and installing belt height adjuster	93
1.14	Removing and installing front belt buckle	94
1.15	Removing and installing rear belt buckle	95
2	Child seat anchors	97
2.1	Assembly overview – rear child seat anchors	97
2.2	Removing and installing rear child seat anchors	97
3	Airbag system	101
3.1	Overview of fitting locations – airbag system	101
4	Airbag control unit	104
4.1	Assembly overview – airbag control unit	104
4.2	Removing and installing airbag control unit J234	104
5	Battery isolator igniter	107
5.1	Assembly overview - battery isolator igniter	107
5.2	Removing and installing battery isolator igniter	107
6	Front airbag, driver side	111
6.1	Assembly overview – front airbag, driver side	111
6.2	Removing and installing airbag unit with igniter	113
6.3	Renewing connector on airbag	116
7	Front passenger airbag	120
7.1	Assembly overview – front passenger airbag	120
7.2	Removing and installing front passenger airbag unit with igniter	122
7.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	124
7.4	Removing and installing front passenger side airbag deactivated warning lamp K145	125
8	Side airbags	127
8.1	Assembly overview – front side airbag	127



8.2	Assembly overview - rear side airbag	129
8.3	Removing and installing front side airbag with igniter	131
8.4	Removing and installing rear side airbag with igniter	132
9	Curtain airbags	134
9.1	Assembly overview – curtain airbag	134
9.2	Removing and installing curtain airbag with igniter	136
10	Knee airbags	141
10.1	Assembly overview - knee airbag	141
10.2	Removing and installing knee airbag with igniter	142
11	Airbag crash sensors	145
11.1	Overview of fitting locations – airbag crash sensors	145
11.2	Removing and installing front airbag crash sensor, driver side G190	147
11.3	Removing and installing front side airbag crash sensor G179/G180	150
11.4	Removing and installing rear side airbag crash sensor G256/G257	153
12	Seat belt verification	156
12.1	Removing and installing Seat occupied sensor, front passenger side G128	156
13	Pedestrian protection	157
13.1	Assembly overview - pedestrian protection	157
13.2	Removing and installing crash sensor for pedestrian protection	159
13.3	Removing and installing trigger for pedestrian protection G598/G599	161
13.4	Remove and installing front pressure hose sensor for pedestrian protection G579	164
70	Trim, insulation	166
1	Front door trims	166
1.1	Assembly overview – front door trim	166
1.2	Removing and installing trim	168
1.3	Removing and installing front door trim	169
1.4	Removing and installing front armrest	172
1.5	Removing and installing mirror cover trim	173
2	Rear door trims	176
2.1	Assembly overview – rear door trim	176
2.2	Removing and installing trim	177
2.3	Removing and installing rear door trim	178
2.4	Removing and installing rear arm rest	180
3	Dash panel	182
3.1	Assembly overview - dash panel	182
3.2	Assembly overview - cover and trim for head-up display	185
3.3	Removing and installing dash panel end cover	185
3.4	Removing and installing dash panel trim	187
3.5	Removing and installing loudspeaker trim	191
3.6	Removing and installing radio/navigation system mounting frame	192
3.7	Removing and installing dash panel insert trim	194
3.8	Removing and installing dash panel	196
3.9	Removing and installing outer dash panel vents	202
3.10	Removing and installing trim for head-up display	204
3.11	Removing and installing cover for head-up display	205
4	Central tube for dash panel	207
4.1	Assembly overview – central tube for dash panel	207
4.2	Removing and installing central tube for dash panel	207
4.3	Removing and installing crash bar	212
5	Interior trims	213
5.1	Overview of fitting locations – interior trims	213
5.2	Assembly overview - sill panel mouldings	216
5.3	Assembly overview - A-pillar trim	217



5.4	Assembly overview – B-pillar trim	220
5.5	Assembly overview - C-pillar trim	221
5.6	Assembly overview - D-pillar trim, Arteon Shooting Brake	223
5.7	Assembly overview – foot rest and floor covering	224
5.8	Removing and installing sill panel moulding	226
5.9	Removing and installing A-pillar gap cover	228
5.10	Removing and installing A-pillar trim	229
5.11	Removing and installing B-pillar trim	234
5.12	Removing and installing C-pillar trim	237
5.13	Removing and installing D-pillar trim, Arteon Shooting Brake	240
5.14	Removing and installing rear sill panel moulding	241
5.15	Removing and installing foot rest	246
5.16	Removing and installing floor covering	248
6	Luggage compartment trims	250
6.1	Overview of fitting locations – luggage compartment trims	250
6.2	Assembly overview – luggage compartment side trim	253
6.3	Assembly overview – luggage compartment floor	257
6.4	Assembly overview – lower rear lid trim	259
6.5	Assembly overview – upper rear lid trim	261
6.6	Removing and installing lower rear lid trim	263
6.7	Removing and installing luggage compartment cover	266
6.8	Removing and installing manual release mechanism for rear lid, country-specific version “NAR”	267
6.9	Removing and installing upper rear lid trim	268
6.10	Removing and installing luggage compartment side trim	271
6.11	Removing and installing lock carrier trim	274
6.12	Removing and installing fastening rings	275
7	Roof trims	277
7.1	Assembly overview - moulded headliner, Arteon	277
7.2	Assembly overview - moulded headliner, Arteon Shooting Brake	277
7.3	Removing and installing moulded headliner	278
7.4	Installing roof reinforcement to body	282
72	Seat frames	295
1	Overview of seat variants	295
1.1	Overview of fitting locations – seat variants	295
1.2	Securing front seat to seat repair stand	296
2	Front seats	298
2.1	Overview of fitting locations – electrical and electronic components	298
2.2	Assembly overview – front seat	305
2.3	Assembly overview – front backrest	309
2.4	Assembly overview – seat pan	313
2.5	Assembly overview – seat height adjustment	318
2.6	Assembly overview – seat rake adjustment	320
2.7	Assembly overview – seat depth adjustment	322
2.8	Assembly overview – fire extinguisher	323
2.9	Removing and installing front seat	324
2.10	Connecting and disconnecting airbag adapter	331
2.11	Removing and installing seat trim on tunnel side	331
2.12	Removing and installing seat trim on sill side	333
2.13	Removing and installing bracket for seat trim	335
2.14	Removing and installing manually adjustable lumbar support frame	335
2.15	Removing and installing seat depth adjuster	337
2.16	Removing and installing seat height adjustment handle	342
2.17	Removing and installing seat height adjuster	343



2.18	Removing and installing lower seat pan frame with seat longitudinal adjustment motor V28/V31	344
2.19	Removing and installing lumbar support adjuster	345
2.20	Removing and installing front backrest	346
2.21	Removing and installing head restraint	348
2.22	Removing and installing head restraint guide	350
2.23	Removing and installing lumbar support adjustment switch E176/E177	350
2.24	Removing and installing lumbar support adjustment motor V125/V126/V129/V130	351
2.25	Removing and installing seat adjustment operating unit E470/E471	352
2.26	Removing and installing massage control unit J740	353
2.27	Removing and installing seat and steering column adjustment control unit with memory J136	354
2.28	Removing and installing impact and stabbing protector in backrest	354
2.29	Removing and installing backrest adjustment handle	356
3	Rear seats	358
3.1	Assembly overview – bench seat/individual seats	358
3.2	Assembly overview – locking mechanism	359
3.3	Assembly overview – rear seat backrest	360
3.4	Assembly overview – centre armrest	362
3.5	Assembly overview - side padding	364
3.6	Removing and installing bench seat/individual seats	364
3.7	Removing and installing head restraint	366
3.8	Removing and installing head restraint guide	367
3.9	Removing and installing rear seat backrest	368
3.10	Removing and installing locking mechanism trim	370
3.11	Removing and installing locking mechanism for rear seat backrest	371
3.12	Removing and installing trim frame for load-through hatch	372
3.13	Removing and installing flap for load-through hatch	374
3.14	Removing and installing centre armrest	375
3.15	Removing and installing side padding	375
74	Seat - padding, covers	376
1	Front seat covers and padding	376
1.1	Assembly overview – seat pan cover and padding	376
1.2	Assembly overview - cover and backrest padding	378
1.3	Assembly overview – seat heating element	379
1.4	Removing and installing cover and padding in area of seat pan	380
1.5	Removing and installing backrest cover and backrest padding	384
1.6	Separating cover and padding in area of seat pan	391
1.7	Separating cover and padding on backrest	394
1.8	Removing and installing seat heating element Z6/Z8	398
1.9	Removing and installing backrest heating element Z7/Z9	399
2	Rear seat covers and padding	400
2.1	Assembly overview – bench seat cover and padding	400
2.2	Assembly overview - rear seat backrest cover and padding	401
2.3	Assembly overview – seat heating element	402
2.4	Removing and installing bench seat cover and padding	403
2.5	Removing and installing cover and padding of rear seat backrest	404
2.6	Removing and installing intermediate padding, backrest with load-through hatch	407
2.7	Separating rear bench seat cover and padding	408
2.8	Separating cover and padding of rear seat backrest	409
2.9	Removing and installing seat heating element	409
2.10	Removing and installing backrest heating element	410