



Contents

00 - Technical data	1
50 - Body - front	2
1 Lock carrier	2
1.1 Assembly overview – lock carrier	2
1.2 Removing and installing lock carrier	4
1.3 Moving to and back from service position	6
2 Wings	11
2.1 Assembly overview – wing	11
2.2 Removing and installing wing	11
3 Plenum chamber bulkhead	17
3.1 Assembly overview – plenum chamber bulkhead	17
3.2 Assembly overview – plenum chamber cover	17
3.3 Removing and installing bulkhead	18
3.4 Removing and installing plenum chamber cover	19
55 - Bonnet, rear lid	22
1 Bonnet	22
1.1 Assembly overview – bonnet	22
1.2 Assembly overview – Bowden cable	24
1.3 Removing and installing bonnet	26
1.4 Adjusting bonnet	29
1.5 Removing and installing rear lid lock	34
1.6 Removing and installing bonnet lock operating lever	39
1.7 Removing and installing striker pin	41
1.8 Removing and installing hinges	42
1.9 Removing and installing insulation	45
1.10 Removing and installing gas strut	46
1.11 Releasing gas from gas strut	48
1.12 Removing and installing Bowden cable	49
1.13 Resetting hinge	56
2 Rear lid	58
2.1 Assembly overview – rear lid	58
2.2 Removing and installing rear lid	63
2.3 Adjusting rear lid	70
2.4 Removing and installing rear lid lock	77
2.5 Removing and installing operating mechanism	89
2.6 Removing and installing hinges	93
2.7 Removing and installing striker pin	98
2.8 Removing and installing rear lid seal	99
2.9 Removing and installing gas strut	103
2.10 Releasing gas from gas strut	107
2.11 Removing and installing rear lid drive unit VX69	109
3 Tank flap unit	116
3.1 Assembly overview - tank flap unit	116
3.2 Removing and installing tank flap unit	116
3.3 Removing and installing fuel tank flap	119
4 Charging flap unit	122
4.1 Assembly overview – charging flap unit	122
4.2 Removing and installing charging flap unit	122
57 - Front doors, door components, central locking	125



1	Door	125
1.1	Assembly overview – door	125
1.2	Assembly overview - door seals	128
1.3	Removing and installing inner door seal	129
1.4	Removing and installing outer door seal	134
1.5	Removing and installing door	137
1.6	Adjusting door	139
1.7	Adjusting striker pin	142
1.8	Removing and installing door arrester	144
2	Door components	147
2.1	Assembly overview – door components	147
2.2	Assembly overview – window regulator	148
2.3	Assembly overview – door handle and door lock	149
2.4	Removing and installing window regulator motor	151
2.5	Removing and installing window regulator	153
2.6	Removing and installing inner door cover	155
2.7	Removing and installing striker pin	157
2.8	Removing and installing cap on door handle	159
2.9	Removing and installing lock cylinder	165
2.10	Removing and installing door handle	169
2.11	Removing and installing mounting bracket	173
2.12	Removing and installing door lock	175
2.13	Removing and installing window channel	179
2.14	Removing and installing window slot outer seal	182
2.15	Removing and installing window slot inner seal	184
3	Central locking	186
3.1	Overview of fitting locations – central locking system	186
3.2	Assembly overview - ignition key	188
3.3	Removing and installing driver door control unit J386 and front passenger door control unit J387	189
3.4	Removing and installing rear left door control unit J926 and rear right door control unit J927	191
3.5	Removing and installing tank filler flap locking motor V155	192
3.6	Removing and installing actuator for high-voltage charging flap lock 1 F496	193
3.7	Removing and installing ignition key battery	194
3.8	Removing and installing cap on ignition key	195
58	Rear doors, door components	197
1	Door	197
1.1	Assembly overview – door	197
1.2	Assembly overview - door seals	200
1.3	Removing and installing door	200
1.4	Adjusting door	203
1.5	Adjusting striker pin	206
1.6	Removing and installing door arrester	208
1.7	Removing and installing inner door seal	210
1.8	Removing and installing outer door seal	215
2	Door components	219
2.1	Assembly overview – door components	219
2.2	Assembly overview – window regulator	220
2.3	Assembly overview – door handle and door lock	221
2.4	Removing and installing window regulator motor	222
2.5	Removing and installing window regulator	226
2.6	Removing and installing inner door cover	228
2.7	Removing and installing striker pin	230
2.8	Removing and installing cap on door handle	232



2.9	Removing and installing door handle	236
2.10	Removing and installing mounting bracket	241
2.11	Removing and installing door lock	243
2.12	Removing and installing window slot outer seal	247
2.13	Removing and installing window slot inner seal	249
60	- Sunroof	251
1	Sliding sunroof	251
1.1	Assembly overview – sliding sunroof	251
1.2	Assembly overview – sunroof roller blind	253
1.3	Removing and installing sliding sunroof frame	254
1.4	Removing and installing wind deflector	264
1.5	Removing and installing glass panel	266
1.6	Adjusting sunroof panel	271
1.7	Removing and installing slotted guide	273
1.8	Removing and installing front trim for sliding sunroof	279
1.9	Removing and installing sliding sunroof motor V1	288
1.10	Removing and installing sliding sunroof adjustment control unit J245	292
1.11	Removing and installing sliding sunroof seals	296
1.12	Removing and installing sunroof roller blind	298
1.13	Programming sliding sunroof adjustment control unit J245	307
2	Sliding sunroof	309
2.1	Assembly overview – sliding sunroof	309
2.2	Assembly overview - sliding sunroof seals	311
2.3	Removing and installing sunroof panel	311
2.4	Removing and installing rear sunroof panel	315
2.5	Adjusting sunroof panel	320
2.6	Removing and installing sliding sunroof seals	323
2.7	Removing and installing wind deflector	328
2.8	Removing and installing sunroof motor V1	332
2.9	Removing and installing sunroof roller blind motor V260	334
2.10	Removing and installing sunroof roller blind control unit J394	336
2.11	Removing and installing sliding sunroof adjustment control unit J245	337
2.12	Removing and installing sunroof roller blind	339
2.13	Removing and installing sliding sunroof frame	343
2.14	Manual operation	346
3	Water drain hoses	348
3.1	Assembly overview - water drain hoses	348
3.2	Cleaning water drain hoses	348
3.3	Removing and installing water drain hoses	350
4	Water drain hoses	352
4.1	Assembly overview - water drain hoses	352
4.2	Cleaning water drain hoses	352
4.3	Removing and installing water drain hoses	354
63	- Bumpers	356
1	Bumper, front	356
1.1	Assembly overview – bumper cover	356
1.2	Assembly overview – bumper carrier	367
1.3	Removing and installing bumper cover	368
1.4	Removing and installing add-on parts	373
1.5	Repairing bumper cover	387
1.6	Installing holder for parking aid sender	387
1.7	Installing retainer for parking aid sender	393
2	Bumper, rear	397



2.1	Assembly overview – bumper cover	397
2.2	Assembly overview – bumper carrier	400
2.3	Removing and installing bumper cover	400
2.4	Removing and installing bumper carrier	403
2.5	Repairing bumper cover	405
2.6	Installing holder for parking aid sender	405
2.7	Installing retainer for parking aid sender	410
64	- Glazing	413
1	Repair instructions	413
1.1	Minimum drying times for bonded windows	413
1.2	Window repair	413
1.3	Installation instructions for bonded windows	414
1.4	Preparing old undamaged windows for installing	415
1.5	Preparing new windows for installing	416
1.6	Preparing body flange for installing	417
1.7	Cleaning off excess adhesive	418
2	Windscreen	420
2.1	Assembly overview – windscreen	420
2.2	Removing and installing windscreen	421
3	Rear windscreen	429
3.1	Assembly overview – rear window	429
3.2	Removing and installing rear window	430
4	Rear windscreen	434
4.1	Assembly overview – rear window	434
4.2	Removing and installing rear window	435
5	Side windows	439
5.1	Assembly overview - rear side windows	439
5.2	Removing and installing rear side window	440
6	Door windows	445
6.1	Assembly overview - front door window	445
6.2	Assembly overview - rear door window	445
6.3	Removing and installing front door window	446
6.4	Adjusting front door window	449
6.5	Removing and installing rear door window	457
6.6	Adjusting rear door window	460
66	- Exterior equipment	468
1	Radiator grille and front trim	468
1.1	Assembly overview – radiator grille	468
1.2	Removing and installing radiator grille	468
2	Spoiler	471
2.1	Assembly overview – spoiler	471
2.2	Removing and installing spoiler	471
3	Spoiler	476
3.1	Assembly overview – spoiler	476
3.2	Removing and installing spoiler	477
3.3	Removing and installing side spoiler	479
4	Mouldings, trims, extensions	482
4.1	Assembly overview - trim strip and covers	482
4.2	Assembly overview – side member trim	484
4.3	Assembly overview – water deflector	485
4.4	Assembly overview - A-pillar trim	486
4.5	Assembly overview - B-pillar trim	487



4.6	Removing and installing trim strip	488
4.7	Removing and installing cover	495
4.8	Removing and installing side member trim	499
4.9	Removing and installing water deflector	501
4.10	Removing and installing A-pillar trim	502
4.11	Removing and installing B-pillar trim	503
5	Noise insulation	507
5.1	Assembly overview - noise insulation	507
6	Underbody cladding	510
6.1	Overview of fitting locations - underbody cladding	510
6.2	Assembly overview - bracing on underbody	514
6.3	Removing and installing underbody cladding	515
6.4	Removing and installing tunnel cross-piece	518
7	Exterior mirror	522
7.1	Assembly overview – exterior mirror	522
7.2	Removing and installing exterior mirror	524
7.3	Removing and installing mirror glass	525
7.4	Removing and installing mirror adjustment unit	527
7.5	Removing and installing mirror cover	529
7.6	Removing and installing mirror frame	530
8	Wheel housing liner	531
8.1	Assembly overview – front wheel housing liner	531
8.2	Assembly overview – rear wheel housing liner	532
8.3	Removing and installing front wheel housing liner	532
8.4	Removing and installing rear wheel housing liner	535
9	Lettering and emblems	539
9.1	Dimensions – lettering and badges at rear	539
9.2	Removing and installing badges at front	542
9.3	Removing and installing lettering	544
9.4	Renewing lettering and badges at rear	546
9.5	Renewing lettering and badges on sides	546
9.6	Removing and installing lettering and emblems for radiator grille	548
10	Special add-on parts	549
10.1	Assembly overview – special add-on parts	549
11	Towing bracket	550
11.1	Assembly overview – towing bracket	550
11.2	Removing and installing towing bracket	552
11.3	Removing and installing trigger unit	554
12	Heat shields	556
12.1	Overview of fitting locations - heat shields	556
12.2	Removing and installing underbody heat shield	556