



Contents

00 - Technical data	1
1 Basic instructions	1
1.1 Original joint	1
1.2 Used joining techniques	1
2 Vehicle identification data	2
2.1 Vehicle identification number	2
2.2 Type plate	3
2.3 Vehicle data sticker	4
3 Safety information	6
4 Moulded foam inserts	7
5 Galvanized body parts, high- and higher-strength and hot-formed body panels	9
6 Laser welding	12
7 Gaps/shut lines	13
7.1 Body - front	13
7.2 Body, centre	17
7.3 Body, rear	20
8 Body dimensions	23
8.1 Body - front	23
8.2 Body, centre	24
8.3 Body, rear	29
8.4 Floor panel, front	30
8.5 Floor panel, centre	31
8.6 Floor panel, rear	32
9 Straightening bracket set	34
9.1 Setup overview of complete body	34
10 Portal gauge	36
10.1 Setup overview of complete body	36
50 - Body - front	38
1 Renewing right bracket	38
1.1 Tools	38
1.2 Removing	38
1.3 Installing	40
2 Repairing threads for securing subframe	43
2.1 Contents of thread repair kit	44
2.2 Repairing threads	45
3 Renewing mounting bracket for subframe	49
3.1 Tools	50
3.2 Removing	50
3.3 Installing	51
4 Renewing front bumper carrier	55
4.1 Tools	56
4.2 Removing	56
4.3 Installing	57
5 Renewing upper wheel housing longitudinal member	60
5.1 Tools	61
5.2 Removing	61
5.3 Installing	62
6 Renewing upper inner wheel housing longitudinal member	67
6.1 Tools	68



6.2	Removing	68
6.3	Installing	70
7	Renewing front wheel housing	74
7.1	Tools	75
7.2	Removing	75
7.3	Installing	78
8	Renewing front longitudinal member	82
8.1	Tools	83
8.2	Removing	83
8.3	Installing	84
9	Renewing front longitudinal member (left part section)	88
9.1	Tools	89
9.2	Removing	89
9.3	Installing	91
10	Renewing front longitudinal member (right part section)	97
10.1	Tools	98
10.2	Removing	98
10.3	Installing	100
51 - Body - centre		105
1	Renewing roof - vehicles with no panorama tilting sunroof	105
1.1	Tools	106
1.2	Removing	107
1.3	Installing	109
2	Renewing roof - vehicles with panorama tilting sunroof	120
2.1	Tools	121
2.2	Removing	121
2.3	Installing	123
3	Renewing A-pillar	134
3.1	Tools	135
3.2	Removing	136
3.3	Installing	137
4	Renewing A-pillar reinforcement (part section)	142
4.1	Tools	143
4.2	Removing	143
4.3	Installing	146
5	Renewing upper A-pillar reinforcement (part section)	150
5.1	Tools	151
5.2	Removing	152
5.3	Installing	154
6	Renewing B-pillar	163
6.1	Tools	165
6.2	Type plate	165
6.3	Removing	166
6.4	Installing	168
7	Renewing B-pillar reinforcement	173
7.1	Tools	174
7.2	Type plate	174
7.3	Removing	175
7.4	Installing	177
8	Renewing B-pillar reinforcement (part section)	181
8.1	Tools	182
8.2	Removing	183
8.3	Installing	186



9	Renewing outer side member	193
9.1	Tools	194
9.2	Type plate	194
9.3	Removing	195
9.4	Installing	197
10	Renewing gusset plate	202
10.1	Tools	202
10.2	Removing	202
10.3	Installing	204
53 - Body - rear		207
1	Renewing rear cross panel	207
1.1	Tools	208
1.2	Removing	208
1.3	Installing	210
2	Renewing rear cross member	214
2.1	Tools	215
2.2	Removing	215
2.3	Installing	216
3	Renewing luggage compartment floor	221
3.1	Tools	222
3.2	Removing	222
3.3	Installing	224
4	Renewing rear longitudinal member (part section)	229
4.1	Tools	230
4.2	Removing	230
4.3	Installing	232
5	Renewing rear longitudinal member (second parting cut - part section)	236
5.1	Tools	237
5.2	Removing	237
5.3	Installing	241
6	Renewing side panel (part section)	252
6.1	Removing	254
6.2	Installing	257
7	Renewing outer wheel housing liner	263
7.1	Tools	264
7.2	Removing	264
7.3	Installing	265