



Contents

00 - Technical data	1
1 Safety information	1
2 Identification	2
3 Technical data	3
3.1 Allocation gearbox - engine	3
3.2 Capacities	3
4 Overview - power transmission	4
5 Electrical components	6
6 Repair instructions	7
6.1 General repair instructions	7
30 - Clutch	11
1 Clutch mechanism	11
1.1 Assembly overview - clutch release mechanism	11
1.2 Repairing clutch release mechanism	13
2 Clutch	15
2.1 Assembly overview - clutch	15
2.2 Removing and installing clutch	17
34 - Controls, housing	33
1 Selector mechanism	33
2 Removing and installing gearbox	34
3 Transporting gearbox	35
4 Gear oil	37
5 Securing to engine and gearbox support	38
6 Dismantling and assembling gearbox	43
6.1 Schematic overview - gearbox	43
6.2 Assembly overview - gearbox	44
6.3 Assembly overview - cover for gearbox housing and 5th/6th gear	45
6.4 Assembly overview - gearbox housing and selector mechanism	48
6.5 Assembly overview - shafts, differential, selector mechanism	50
6.6 Assembly overview - selector forks	52
6.7 Repairing selector forks	55
6.8 Removing cover for gearbox housing and 5th and 6th gears	60
6.9 Dismantling and assembling gearbox	66
6.10 Installing cover for gearbox housing and 5th and 6th gears	86
7 Gearbox housing, clutch housing	96
7.1 Assembly overview - gearbox housing and clutch housing	96
7.2 Assembly overview - gearbox housing cover	99
7.3 Repairing gearbox housing	99
7.4 Repairing gearbox housing cover	106
35 - Gears, shafts	109
1 Input shaft	109
1.1 Assembly overview - input shaft	109
1.2 Dismantling and assembling input shaft	111
1.3 Adjusting input shaft	117
1.4 Renewing input shaft seal	122
2 Output shaft	124
2.1 Assembly overview - output shaft	124
2.2 Dismantling and assembling output shaft	127



2.3	Adjusting output shaft	144
3	Reverse shaft	150
3.1	Assembly overview - reverse shaft	150
3.2	Dismantling and assembling reverse shaft	152
39	Final drive - differential	156
1	Oil seals	156
1.1	Overview of fitting locations - seals	156
2	Differential	157
2.1	Assembly overview - differential	157
2.2	Dismantling and assembling differential	159
2.3	Adjusting differential	167
3	Adjustment overview	172