



Contents

00 - Technical data	1
1 Safety information	1
2 Identification	2
3 Technical data	3
3.1 Allocation gearbox - engine	3
3.2 Calculation of gear ratios	3
3.3 Capacities	3
4 Overview - power transmission	4
5 Electrical components	6
6 Repair notes	7
6.1 General repair instructions	7
30 - Clutch	10
1 Clutch operation	10
1.1 Assembly overview - clutch release mechanism	10
1.2 Checking clutch master cylinder and clutch slave cylinder	11
1.3 Removing and installing clutch slave cylinder together with release bearing	11
1.4 Repairing clutch release mechanism	12
2 Clutch	15
2.1 Assembly overview - clutch	15
2.2 Removing and installing clutch	18
34 - Controls, housing	32
1 Selector mechanism	32
2 Removing and installing gearbox	33
3 Transporting gearbox	34
3.1 Transporting manual gearbox	34
4 Gear oil	35
5 Installing to engine and gearbox support	36
5.1 Installing manual gearbox to engine and gearbox support	36
6 Dismantling and assembling gearbox	38
6.1 Schematic overview - gearbox	38
6.2 Assembly overview - gearbox	39
6.3 Assembly overview - gearbox housing and selector mechanism	40
6.4 Assembly overview - shafts, differential, selector mechanism	42
6.5 Assembly overview - selector forks	44
6.6 Dismantling and assembling gearbox	44
7 Gearbox housing, clutch housing	61
7.1 Assembly overview - gearbox housing	61
7.2 Assembly overview - clutch housing	63
7.3 Repairing gearbox housing	64
7.4 Repairing clutch housing	72
35 - Gears, shafts	76
1 Input shaft	76
1.1 Assembly overview - input shaft	76
1.2 Dismantling and assembling input shaft	77
1.3 Renewing input shaft seal	81
2 Output shaft	83
2.1 Assembly overview - output shaft	83
2.2 Dismantling and assembling output shaft	90



2.3	Adjusting output shaft	112
39	Final drive - differential	123
1	Oil seals	123
1.1	Overview of fitting locations - seals	123
2	Differential	124
2.1	Assembly overview - differential	124
2.2	Dismantling and assembling differential	126
2.3	Adjusting differential	131
3	Adjustment overview	136