



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Notes on tow-starting/towing	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
2 Identification	3
2.1 Gearbox identification	3
3 Repair notes	6
3.1 General repair instructions	6
3.2 Gaskets and seals	7
3.3 Nuts and bolts	7
4 Technical data	9
4.1 Allocation gearbox - engine	9
4.2 Capacities	12
5 Electrical components	14
5.1 Overview of fitting locations - electrical components	14
30 - Clutch	16
1 Clutch	16
1.1 Assembly overview - dual clutch	16
1.2 Removing and installing clutch end cover	18
1.3 Removing dual clutch	23
1.4 Installing dual clutch	25
34 - Controls, housing	33
1 Mechatronic unit	33
1.1 Assembly overview - mechatronic unit	33
1.2 Removing and installing sump	38
1.3 Removing and installing mechatronic unit for dual clutch gearbox J743	45
2 Bevel box	68
2.1 Assembly overview - bevel box	68
2.2 Removing bevel box	69
2.3 Installing bevel box	76
3 Selector mechanism	81
3.1 Assembly overview - selector mechanism	81
3.2 Emergency release from position P	84
3.3 Removing and installing selector lever handle	89
3.4 Moving push-button in the handle to installation position	108
3.5 Removing and installing selector mechanism	111
3.6 Adjusting selector mechanism	120
3.7 Removing and installing gear selector cable	127
3.8 Checking selector mechanism	133
3.9 Checking and adjusting selector lever cable	134
3.10 Renewing selector shaft seal	137
4 Removing and installing gearbox	140
4.1 Removing gearbox	140
4.2 Installing gearbox	281
4.3 Specified torques for gearbox	287
5 Assembly mountings	290
5.1 Assembly overview - assembly mountings	290



6	Transporting gearbox	294
6.1	Transporting gearbox	294
6.2	Transporting front differential lock	294
7	Dismantling and assembling gearbox	296
7.1	Assembly overview - gearbox	296
8	Securing to engine and gearbox support	300
8.1	Installing gearbox to engine and gearbox support	300
8.2	Securing front differential lock to engine and gearbox support	301
9	Gear oil circuit	303
9.1	Removing and installing gear oil cooler	303
9.2	Removing and installing cover for gear oil pump	306
9.3	Removing and installing gear oil pump	308
9.4	Removing and installing gear oil filter	310
10	Gear oil	313
10.1	Checking gear oil level	313
10.2	Draining and filling gear oil	317
11	Front differential lock	321
11.1	Assembly overview - front differential lock	321
11.2	Removing front differential lock	321
11.3	Installing front differential lock	325
11.4	Removing and installing differential lock control unit J647	327
35 - Gears, shafts		329
1	Currently, no repairs can be made to gears and shafts	329
39 - Final drive - differential		330
1	Gear oil	330
1.1	Checking gear oil level	330
2	Oil for front differential lock	334
2.1	Checking oil level for front differential lock	334
2.2	Draining and filling oil for front differential lock	335
3	Oil seals	340
3.1	Overview of fitting locations - seals	340
3.2	Renewing left seal	342
3.3	Renewing right seal	346
4	Components of front differential lock	363
4.1	Assembly overview - components of front differential lock	363
4.2	Checking function	365
4.3	Removing and installing pump for front differential lock V181	365
4.4	Removing and installing coupling for front differential lock	367
4.5	Renewing seals for front differential lock	367
4.6	Renewing ball bearing for flange shaft	376
5	Bevel box	379
5.1	Assembly overview - bevel box	379
5.2	Removing and installing right flange shaft	381
5.3	Renewing needle bearing (polygon bearing) for right flange shaft	384
5.4	Renewing output flange and redetermining thickness of shim, bevel box removed	385