



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Notes on tow-starting/towing	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
<b>2 Identification</b>	<b>4</b>
2.1 Gearbox identification	4
<b>3 Repair instructions</b>	<b>6</b>
3.1 General information	6
3.2 Rules for cleanliness	7
3.3 General repair instructions	7
3.4 Gaskets and seals	9
3.5 Nuts and bolts	9
<b>4 Technical data</b>	<b>10</b>
4.1 Allocation gearbox - engine	10
4.2 Capacities	10
<b>5 Electrical components</b>	<b>12</b>
5.1 Overview of fitting locations - electrical components	12
<b>30 - Clutch</b>	<b>13</b>
<b>1 Clutch</b>	<b>13</b>
1.1 Assembly overview - dual clutch	13
1.2 Removing and installing clutch end cover	14
1.3 Removing dual clutch	17
1.4 Installing dual clutch	20
<b>34 - Controls, housing</b>	<b>28</b>
<b>1 Mechatronic unit</b>	<b>28</b>
1.1 Assembly overview - mechatronic unit	28
1.2 Removing and installing sump	29
1.3 Removing and installing mechatronic unit	31
<b>2 Bevel box</b>	<b>34</b>
2.1 Assembly overview - bevel box	34
2.2 Distinguishing between different types of bevel boxes	35
2.3 Removing and installing bevel box	36
<b>3 Selector mechanism</b>	<b>45</b>
3.1 Assembly overview - selector mechanism	45
3.2 Emergency release from position P	46
3.3 Removing and installing selector lever handle	47
3.4 Moving push-button in the handle to installation position	49
3.5 Removing and installing selector mechanism	51
3.6 Removing and installing gear selector cable	55
3.7 Checking selector mechanism	57
3.8 Checking and adjusting selector lever cable	58
3.9 Renewing selector shaft seal	60
<b>4 Removing and installing gearbox</b>	<b>64</b>
4.1 Specified torques for gearbox	64
4.2 Removing gearbox	65
4.3 Installing gearbox	168
<b>5 Assembly mountings</b>	<b>170</b>
5.1 Assembly overview - assembly mountings	170



<b>6</b>	<b>Transporting gearbox</b>	<b>172</b>
<b>7</b>	<b>Securing to engine and gearbox support</b>	<b>174</b>
<b>8</b>	<b>Gear oil circuit</b>	<b>175</b>
8.1	Assembly overview - gear oil circuit	175
8.2	Removing and installing gear oil cooler	175
8.3	Removing and installing gear oil filter	178
8.4	Removing and installing motor for auxiliary hydraulic pump 1 for gearbox oil V475	179
<b>9</b>	<b>Gear oil</b>	<b>181</b>
9.1	Overview of oil drain and inspection plugs	181
9.2	Tools for gear oil change	181
9.3	Checking gear oil level	183
9.4	Draining and filling gear oil	186
<b>35 - Gears, shafts</b>		<b>189</b>
1	Currently, no repairs can be made to gears and shafts	189
<b>39 - Final drive - differential</b>		<b>190</b>
<b>1</b>	<b>Gear oil</b>	<b>190</b>
1.1	Checking gear oil level	190
1.2	Draining and filling gear oil	192
<b>2</b>	<b>Oil seals</b>	<b>199</b>
2.1	Overview of fitting locations - seals	199
2.2	Renewing left seal	199
2.3	Renewing right oil seal	202
<b>3</b>	<b>Differential</b>	<b>207</b>
3.1	Removing and installing right flange shaft	207
<b>4</b>	<b>Components of bevel box</b>	<b>209</b>
4.1	Assembly overview - components of bevel box	209
4.2	Renewing bevel box seals	212
4.3	Renewing seal on right of bevel box	212
4.4	Renewing left seal	213
4.5	Renewing needle bearing for right flange shaft	215
4.6	Removing and installing output flange	216