



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on ignition system	2
1.5 Safety precautions when working on the cooling system	2
1.6 Safety precautions when working on exhaust system	3
2 Identification	4
2.1 Engine number/engine data	4
3 Repair notes	6
3.1 Rules for cleanliness	6
3.2 Foreign objects in engine	6
3.3 Contact corrosion	6
3.4 Routing and attachment of lines	6
3.5 Fitting radiator and condensers	7
3.6 Checking vacuum system	7
10 - Removing and installing engine	8
1 Removing and installing motor	8
1.1 Removing motor	8
1.2 Separating engine and gearbox	24
1.3 Securing engine on engine and gearbox support	34
1.4 Installing engine	37
2 Assembly mountings	41
2.1 Assembly overview - assembly mountings	41
2.2 Removing and installing engine mounting	43
2.3 Removing and installing gearbox mountings	44
2.4 Removing and installing pendulum support	46
2.5 Supporting engine in installation position	47
2.6 Checking adjustment of assembly mountings (engine and gearbox mountings)	69
2.7 Adjusting assembly mountings	69
3 Engine cover panel	72
3.1 Removing and installing engine cover	72
13 - Crankshaft group	73
1 Cylinder block (pulley end)	73
1.1 Assembly overview - cylinder block (pulley end)	73
1.2 Removing and installing poly-V belt	76
1.3 Removing and installing tensioner for poly V-belt	77
1.4 Removing and installing vibration damper	78
1.5 Renewing seal for vibration damper	85
1.6 Removing and installing bracket for ancillaries	88
1.7 Removing and installing engine support	90
2 Cylinder block, gearbox end	93
2.1 Assembly overview - cylinder block, gearbox end	93
2.2 Removing and installing flywheel	94
2.3 Removing and installing sealing flange on gearbox side	95
3 Crankshaft	100
3.1 Assembly overview - crankshaft	100
3.2 Crankshaft dimensions	103
3.3 Allocation of main bearing shells	103



3.4	Renewing needle bearing in crankshaft	105
3.5	Measuring axial clearance of crankshaft	107
3.6	Measuring radial clearance of crankshaft	108
3.7	Removing and installing sender wheel	109
4	Balancer shaft	111
4.1	Assembly overview - balance shaft	111
4.2	Removing and installing balance shaft	113
4.3	Renewing oil seal for balance shaft (inlet side)	118
5	Pistons and conrods	120
5.1	Assembly overview - pistons and conrods	120
5.2	Removing and installing pistons	124
5.3	Checking pistons and cylinder bores	126
5.4	Separating new conrod	128
5.5	Checking radial clearance of conrods	128
5.6	Removing and installing oil spray jets	129
15	- Cylinder head, valve gear	131
1	Cylinder head	131
1.1	Assembly overview - cylinder head	131
1.2	Removing and installing cylinder head	134
1.3	Assembly overview - vacuum pump	140
1.4	Removing and installing vacuum pump	141
1.5	Checking compression	143
2	Cover for timing chain	146
2.1	Assembly overview - cover for timing chain	146
2.2	Removing and installing upper timing chain cover	149
2.3	Removing and installing timing chain cover (bottom)	151
3	Chain drive	156
3.1	Assembly overview - camshaft timing chains	156
3.2	Assembly overview - drive chain for balance shaft	159
3.3	Removing and installing camshaft timing chain	161
3.4	Removing and installing drive chain for balance shaft	174
3.5	Checking timing chain	177
4	Valve gear	179
4.1	Assembly overview - valve gear	179
4.2	Removing and installing camshaft	183
4.3	Installing ball for sliding piece	194
4.4	Removing and installing actuators for camshaft adjustment	194
4.5	Removing and installing camshaft control valve 1 N205	196
4.6	Removing and installing exhaust camshaft control valve 1 N318	196
4.7	Removing and installing valve stem seals	197
5	Inlet and exhaust valves	209
5.1	Checking valve guides	209
5.2	Checking valves	210
5.3	Valve dimensions	210
17	- Lubrication	211
1	Sump, oil pump	211
1.1	Assembly overview - sump/oil pump	211
1.2	Engine oil:	214
1.3	Removing and installing lower part of sump	214
1.4	Removing and installing upper part of sump	220
1.5	Removing and installing oil pump	226
1.6	Removing and installing oil level and oil temperature sender G266	229
2	Engine oil cooler	231



2.1	Assembly overview - engine oil cooler	231
2.2	Removing and installing engine oil cooler	231
2.3	Removing and installing mechanical switching valve	233
3	Crankcase ventilation	234
3.1	Assembly overview - crankcase breather system	234
3.2	Removing and installing oil separator	235
4	Oil filter, oil pressure switch	237
4.1	Assembly overview - oil filter	237
4.2	Assembly overview - oil pressure switches/oil pressure control	237
4.3	Removing and installing piston cooling jet control valve N522	239
4.4	Removing and installing oil pressure switch F1	240
4.5	Removing and installing oil pressure switch for reduced oil pressure F378	241
4.6	Removing and installing stage 3 oil pressure switch F447	242
4.7	Checking oil pressure	243
4.8	Removing and installing oil pressure regulating valve N428	248
19	Cooling	250
1	Cooling system/coolant	250
1.1	Connection diagram - coolant hoses	250
1.2	Checking cooling system for leaks	252
1.3	Draining and adding coolant	256
1.4	Flushing cooling system	264
1.5	Flushing cooling system, quick reference guide	286
2	Coolant pump, regulation of cooling system	288
2.1	Assembly overview - coolant pump, thermostat	288
2.2	Assembly overview - electric coolant pump	290
2.3	Assembly overview - coolant temperature sender	293
2.4	Removing and installing auxiliary pump for heating V488	294
2.5	Removing and installing coolant pump	297
2.6	Removing and installing toothed belt for coolant pump	299
2.7	Removing and installing coolant shut-off valve N82	301
2.8	Removing and installing coolant valve for gearbox N488	303
2.9	Removing and installing actuator for engine temperature regulation N493	307
2.10	Removing and installing coolant temperature sender G62	310
2.11	Removing and installing radiator outlet coolant temperature sender G83	311
3	Coolant pipes	313
3.1	Assembly overview - coolant pipes	313
3.2	Removing and installing front coolant pipe	313
3.3	Removing and installing upper coolant pipes	315
4	Radiator, radiator fan	317
4.1	Assembly overview - radiator	317
4.2	Assembly overview - radiator cowl and radiator fan	321
4.3	Removing and installing radiator	323
4.4	Removing and installing radiator cowl	330
4.5	Removing and installing radiator fan	336
21	Turbocharging/supercharging	339
1	Turbocharger	339
1.1	Assembly overview - turbocharger	339
1.2	Removing and installing turbocharger	343
2	Charge air system	349
2.1	Assembly overview - charge air system	349
2.2	Assembly overview - charge-air hose connections	352
2.3	Removing and installing charge air cooler	352
2.4	Removing and installing charge pressure sender G31	357



2.5	Checking charge air system for leaks	358
2.6	Removing and installing air intake pipe between turbocharger and charge air cooler	360
24	Mixture preparation - injection	362
1	Injection system	362
1.1	Overview of fitting locations - injection system	362
2	Injectors	374
2.1	Assembly overview - fuel rail with injectors	374
2.2	Removing and installing fuel rail	376
2.3	Removing and installing injectors	377
2.4	Renewing seals on injectors	384
2.5	Cleaning injectors	387
3	Air filter	389
3.1	Assembly overview - air filter housing	389
3.2	Removing and installing air filter housing	392
3.3	Removing air duct on lock carrier	394
4	Intake manifold	397
4.1	Assembly overview - intake manifold	397
4.2	Removing and installing intake manifold	399
4.3	Removing and installing throttle valve module GX3	404
4.4	Cleaning throttle valve module	407
4.5	Checking intake manifold change-over	408
5	Senders and sensors	410
5.1	Removing and installing fuel pressure sender G247	410
5.2	Checking fuel pressure sender G247	413
5.3	Removing and installing fuel pressure sender for low-pressure G410	415
5.4	Removing and installing intake manifold sender GX9	416
5.5	Removing and installing air mass meter G70	417
5.6	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound, Polo	419
5.7	Removing and installing pressure differential sender for particulate filter G1037	421
6	Engine control unit	423
6.1	Removing and installing engine control unit J623	423
6.2	Removing and installing engine (motor) control unit J623 with protective housing	424
7	High-pressure pump	428
7.1	Assembly overview - high-pressure pump	428
7.2	Removing and installing high-pressure pump	430
7.3	Removing and installing high-pressure pipe	433
8	Lambda probe	437
8.1	Assembly overview - Lambda probe	437
8.2	Removing and installing Lambda probe 1 before catalytic converter GX10	438
8.3	Removing and installing Lambda probe 1 after catalytic converter GX7	439
26	Exhaust system	442
1	Exhaust pipes and silencers	442
1.1	Assembly overview - silencers	442
1.2	Removing and installing silencer	447
1.3	Separating exhaust pipes from silencers	454
1.4	Aligning exhaust system free of stress	460
1.5	Checking exhaust system for leaks	460
2	Emission control	461
2.1	Assembly overview - emission control	461
2.2	Assembly overview - bracket and pipes for pressure differential sender for particulate filter G1037	469
2.3	Removing and installing bracket for catalytic converter, Tiguan	470



2.4	Removing and installing catalytic converter	473
2.5	Removing and installing holder of pressure differential sender for particulate filter G1037	493
3	Exhaust gas temperature regulation	494
3.1	Assembly overview - exhaust gas temperature regulation	494
3.2	Removing and installing parts of exhaust gas temperature regulation	495
28	Ignition system	500
1	Ignition system	500
1.1	Assembly overview - ignition system	500
1.2	Removing and installing ignition coils with output stage	502
1.3	Removing and installing knock sensor I G61	504
1.4	Removing and installing Hall sender	505
1.5	Removing and installing engine speed sender G28	506