



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on the SCR system	2
1.6 Safety precautions when working on exhaust system	3
2 Identification	5
2.1 Engine number/engine data	5
3 Repair instructions	7
3.1 Rules for cleanliness	7
3.2 Foreign objects in engine	7
3.3 Contact corrosion	7
3.4 Routing and attachment of lines	8
3.5 Fitting radiator and condensers	8
4 Technical data	10
4.1 Coolant	11
10 - Removing and installing engine	13
1 Removing and installing motor	13
1.1 Removing motor	13
1.2 Separating engine and gearbox	25
1.3 Securing engine on engine and gearbox support	28
1.4 Installing engine	29
2 Assembly mountings	33
2.1 Assembly overview – assembly mountings	33
2.2 Removing and installing engine mounting	37
2.3 Removing and installing gearbox mountings	39
2.4 Removing and installing pendulum support	43
2.5 Supporting engine in installation position	44
2.6 Adjusting assembly mountings	64
2.7 Checking adjustment of assembly mountings (engine and gearbox mountings)	67
3 Engine cover panel	69
3.1 Removing and installing engine cover	69
13 - Crankshaft group	70
1 Cylinder block (pulley end)	70
1.1 Assembly overview - cylinder block (pulley end)	70
1.2 Assembly overview - sealing flange, belt pulley end	73
1.3 Removing and installing poly-V belt	75
1.4 Removing and installing tensioner for poly V-belt	76
1.5 Removing and installing vibration damper	77
1.6 Removing and installing bracket for ancillaries	78
1.7 Removing and installing engine support	80
1.8 Removing and installing sealing flange on pulley end	82
2 Cylinder block, gearbox end	86
2.1 Assembly overview - cylinder block, gearbox end	86
2.2 Removing and installing flywheel	89
2.3 Removing and installing sealing flange on gearbox side	90
3 Crankshaft	101
3.1 Assembly overview - crankshaft	101



3.2	Crankshaft dimensions	101
3.3	Renewing needle bearing in crankshaft	101
3.4	Measuring axial clearance of crankshaft	104
4	Pistons and conrods	106
4.1	Assembly overview - pistons and conrods	106
4.2	Removing and installing pistons	109
4.3	Measuring piston projection at TDC	111
4.4	Checking pistons and cylinder bores	113
4.5	Separating new conrod	115
4.6	Checking radial clearance of conrods	116
15	Cylinder head, valve gear	117
1	Cylinder head	117
1.1	Assembly overview - cylinder head	117
1.2	Assembly overview - cylinder head cover	121
1.3	Removing and installing cylinder head	124
1.4	Removing and installing cylinder head cover	130
1.5	Removing and installing injector seals	133
1.6	Removing and installing camshaft housing	135
1.7	Checking compression	139
2	Toothed belt drive	142
2.1	Assembly overview - toothed belt cover	142
2.2	Assembly overview - toothed belt	142
2.3	Removing and installing toothed belt guard	144
2.4	Removing and installing toothed belt	150
2.5	Removing toothed belt from camshaft	165
3	Valve gear	171
3.1	Assembly overview - valve gear	171
3.2	Measuring axial play of camshaft	173
3.3	Removing and installing camshaft oil seal	174
3.4	Checking hydraulic compensation elements	176
3.5	Removing and installing valve stem seals	177
4	Inlet and exhaust valves	186
4.1	Checking valve guides	186
4.2	Checking valves	187
4.3	Valve dimensions	187
17	Lubrication	188
1	Sump, oil pump	188
1.1	Assembly overview - sump/oil pump	188
1.2	Engine oil:	190
1.3	Removing and installing sump	190
1.4	Removing and installing oil pump	195
1.5	Removing and installing oil level and oil temperature sender G266	196
2	Engine oil cooler	198
3	Oil filter, oil pressure switch	199
3.1	Assembly overview - oil filter housing, oil pressure switch	199
3.2	Removing and installing oil pressure switch F1	201
3.3	Removing and installing oil pressure switch for reduced oil pressure F378	203
3.4	Checking oil pressure	205
3.5	Removing and installing oil filter housing	205
3.6	Removing and installing oil pressure regulating valve N428	209
19	Cooling	211
1	Cooling system/coolant	211



1.1	Connection diagram - coolant hoses	211
1.2	Checking cooling system for leaks	213
1.3	Draining coolant	217
1.4	Filling with coolant	219
1.5	Checking filling quality of cooling system	231
1.6	Checking electric vacuum pump VAS 6096/2	234
1.7	Flushing cooling system	235
1.8	Flushing cooling system, quick reference guide	257
2	Coolant pump, regulation of cooling system	259
2.1	Assembly overview - coolant pump, thermostat	259
2.2	Assembly overview - electric coolant pump	263
2.3	Assembly overview - coolant temperature sender	265
2.4	Assembly overview - actuator for engine temperature regulation N493	266
2.5	Removing and installing electric coolant pump	268
2.6	Removing and installing coolant pump	274
2.7	Removing and installing thermostat	275
2.8	Checking thermostat	279
2.9	Removing and installing coolant valve for cylinder head N489	280
2.10	Removing and installing coolant temperature sender G62	280
2.11	Removing and installing coolant temperature sender 2 G802	282
2.12	Removing and installing actuator for engine temperature regulation N493	284
3	Coolant pipes	291
3.1	Assembly overview - coolant pipes	291
3.2	Removing and installing coolant pipes	295
4	Radiator, radiator fan	320
4.1	Assembly overview - radiator/radiator fan	320
4.2	Assembly overview - auxiliary radiator	322
4.3	Assembly overview - radiator cowl and radiator fan	323
4.4	Removing and installing radiator	324
4.5	Removing and installing water radiator for charge air cooling circuit	327
4.6	Removing and installing radiator cowl	330
4.7	Removing and installing radiator fan	333
4.8	Removing and installing auxiliary radiator	334
21	Turbocharging/supercharging	338
1	Turbocharger	338
1.1	Assembly overview - turbocharger	338
1.2	Removing and installing turbocharger	351
1.3	Removing and installing vacuum unit for turbocharger	363
1.4	Removing and installing turbocharger 1 control unit J724	369
2	Charge air system	374
2.1	Assembly overview - charge air system	374
2.2	Removing and installing charge pressure sender G31	376
2.3	Removing and installing charge pressure sender 2 G447	376
2.4	Checking charge air system for leaks	377
2.5	Removing and installing air pipe	379
2.6	Checking charge air cooler for leaks	386
23	Mixture preparation - injection	392
1	Injection system	392
1.1	Schematic overview - fuel system	392
1.2	Overview of fitting locations - injection system	393
1.3	Filling/bleeding fuel system	407
1.4	Checking fuel system for leaks	407
2	Vacuum system	409



2.1	Connection diagram - vacuum system	409
2.2	Checking vacuum system	412
3	Injectors/high-pressure accumulator (rail)	414
3.1	Assembly overview - injectors	414
3.2	Assembly overview - fuel rail	416
3.3	Adapting correction values for injectors	418
3.4	Testing injectors	419
3.5	Checking return flow rate of injectors with engine running	419
3.6	Checking return flow rate of injectors at starter speed	422
3.7	Removing and installing injectors	425
3.8	Removing and installing high-pressure lines	428
3.9	Removing and installing fuel rail	434
4	Air filter	438
4.1	Assembly overview - air filter housing	438
4.2	Removing and installing air filter housing	440
5	Intake manifold	444
5.1	Assembly overview - intake manifold	444
5.2	Removing and installing intake manifold	447
5.3	Removing and installing throttle valve module J338	453
6	Senders and sensors	456
6.1	Removing and installing fuel pressure regulating valve N276	456
6.2	Checking fuel pressure regulating valve N276	458
6.3	Removing and installing fuel pressure sender G247	460
6.4	Removing and installing air mass meter G70	461
6.5	Removing and installing pressure differential sender G505	463
6.6	Removing and installing exhaust gas pressure sensor 1 G450	464
6.7	Removing and installing charge air temperature sender ahead of charge air cooler G810	466
6.8	Removing and installing charge air temperature sender after charge air cooler G811	466
6.9	Removing and installing fuel temperature sender G81	467
6.10	Removing and installing control unit for NOx sender GX30	468
6.11	Assembly overview - NOx sender control unit GX30	472
6.12	Removing and installing control unit 2 for NOx sender GX46	473
6.13	Removing and installing particle sensor G784	475
7	Engine control unit	477
7.1	Removing and installing engine control unit J623	477
8	High-pressure pump	485
8.1	Assembly overview - high-pressure pump	485
8.2	Removing and installing high-pressure pump	487
9	Lambda probe	491
9.1	Assembly overview - Lambda probe	491
9.2	Removing and installing Lambda probe	491
26	Exhaust system	494
1	Exhaust pipes and silencers	494
1.1	Assembly overview - silencers	494
1.2	Removing and installing front exhaust pipe	498
1.3	Removing and installing rear silencer	501
1.4	Aligning exhaust system free of stress	505
1.5	Checking exhaust system for leaks	505
1.6	Installation position of clamp	506
1.7	Assembly overview - front exhaust pipe	506
1.8	Assembly overview - front exhaust pipe, vehicles with control unit 2 for NOx sender GX46 and particulate sensor G784	509
1.9	Removing and installing bracket for front exhaust pipe	511
2	Emission control	512



2.1	Assembly overview - emission control	512
2.2	Removing and installing emission control module	519
2.3	Removing and installing exhaust flap control unit J883	523
3	SCR system (selective catalytic reduction)	526
3.1	Assembly overview - tank for reducing agent	526
3.2	Assembly overview - reducing agent supply line	530
3.3	Assembly overview - delivery module for reducing agent	531
3.4	Removing and installing reducing agent tank	532
3.5	Removing and installing front section of reducing agent supply line	538
3.6	Removing and installing delivery module for reducing agent	553
3.7	Removing and installing injector for reduction agent N474	555
3.8	Removing and installing control unit for reducing-agent heater J891	558
3.9	Assembly overview - injector for reducing agent	562
3.10	Draining reducing agent tank	563
3.11	Removing and installing rear section of reducing agent supply line	570
3.12	Removing and installing filler pipe for reducing agent tank	572
3.13	Disconnecting reducing agent supply line	576
3.14	SCR - resetting learnt values	579
4	Exhaust gas temperature regulation	580
4.1	Assembly overview - exhaust gas temperature regulation	580
4.2	Removing and installing exhaust gas temperature sender 1 G235	582
4.3	Removing and installing exhaust gas temperature sender 2 G448	588
4.4	Removing and installing exhaust gas temperature sender 3 G495	590
4.5	Removing and installing exhaust gas temperature sender 4 G648	591
5	Exhaust gas recirculation	594
5.1	Assembly overview - exhaust gas recirculation	594
5.2	Assembly overview - exhaust gas recirculation valve 1 GX5	596
5.3	Removing and installing exhaust gas recirculation cooler	597
5.4	Removing and installing exhaust gas recirculation valve 1 GX5	603
5.5	Removing and installing exhaust gas recirculation valve 2 GX6	605
5.6	Checking exhaust gas recirculation cooler for leaks	608
6	Exhaust manifold	609
6.1	Assembly overview - exhaust manifold	609
6.2	Removing and installing exhaust manifold	610
28	Glow plug system	612
1	Glow plug system	612
1.1	Assembly overview - glow plug system	612
1.2	Removing and installing glow plug	613
1.3	Removing and installing automatic glow period control unit J179	617
1.4	Removing and installing Hall sender G40	617
1.5	Removing and installing engine speed sender G28	618