



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety precautions when working on high-voltage system	1
1.3 Safety precautions when working in the vicinity of high-voltage components	2
2 Identification	3
2.1 Allocation of PR number - brakes	3
3 Technical data	5
3.1 Technical data for brakes	5
4 Brake test	7
4.1 General information	7
4.2 Checking vehicles with front-wheel drive	7
4.3 Checking vehicles with all-wheel drive	7
4.4 Checking parking brake	8
45 - Anti-lock brake system	10
1 General information	10
1.1 Repair instructions for repair work on ABS	10
2 Overview of fitting locations	13
2.1 Overview of fitting locations - ABS/ESP	13
3 Control unit and hydraulic unit	16
3.1 Assembly overview - control unit and hydraulic unit	16
3.2 Removing and installing ABS control unit J104 and ABS hydraulic unit N55	21
3.3 Connecting brake lines to hydraulic unit	36
3.4 Separating control unit from hydraulic unit	39
3.5 Fitting control unit to hydraulic unit	40
4 Sensors	42
4.1 Assembly overview - speed sensor on front axle	42
4.2 Assembly overview - speed sensor on rear axle	43
4.3 Removing and installing ESP sensor unit G419	44
4.4 Removing and installing speed sensors on front axle G45/G47	44
4.5 Removing and installing speed sensors on rear axle G44/G46	45
4.6 Checking ABS sensor ring	47
4.7 Removing and installing steering angle sender G85	48
46 - Brakes - mechanism	49
1 Front brake	49
1.1 Assembly overview - front brake	49
1.2 Removing and installing brake pads	51
1.3 Removing and installing brake caliper	54
2 Rear brake	57
2.1 Assembly overview - rear brakes	57
2.2 Removing and installing brake pads	59
2.3 Removing and installing brake caliper	65
3 Parking brake	70
3.1 Overview of fitting locations - parking brake	70
3.2 Removing and installing control unit for electromechanical parking brake J540	71
3.3 Removing and installing parking brake motor V282/V283	71
4 Brake pedal	74
4.1 Assembly overview - brake pedal	74
4.2 Removing and installing mounting bracket	77



4.3	Separating brake pedal from brake servo	80
4.4	Connecting brake pedal to brake servo	81
4.5	Removing and installing brake pedal	82
47	- Brakes - hydraulics	86
1	Front brake caliper	86
1.1	Assembly overview – front brake caliper	86
1.2	Removing and installing brake caliper piston	88
2	Rear brake caliper	91
2.1	Assembly overview – rear brake caliper	91
2.2	Removing and installing protective cap	92
3	Brake servo and brake master cylinder	96
3.1	Assembly overview - brake servo/brake master cylinder	96
3.2	Removing and installing brake servo	100
3.3	Removing and installing brake master cylinder	106
3.4	Removing and installing brake fluid level warning contact F34	120
4	Brake lines	122
4.1	Repairing brake lines	122
5	Hydraulic system	126
5.1	General notes on brake fluid	126
5.2	Bleeding hydraulic system following standard procedure	126
5.3	Subsequent bleeding of hydraulic system	127
5.4	Testing for leaks	128