



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with start/stop system	1
1.2 Safety precautions when working on high-voltage system	1
1.3 Safety precautions when working in the vicinity of high-voltage components	2
1.4 Safety precautions when working on subframe	2
2 Repair instructions	3
2.1 Leaks at shock absorbers	3
2.2 Noises from shock absorbers	3
2.3 Checking shock absorbers when removed	4
2.4 Steering rack	4
2.5 Gaskets and seals	5
2.6 Nuts and bolts	5
2.7 Electrical components	5
2.8 Raising suspension to unladen position (vehicles with spring)	6
3 Evaluating accident vehicles	13
3.1 Check list for evaluating running gear on accident vehicles	13
4 Disposal	15
4.1 Releasing gas and draining front gas-filled shock absorbers	15
4.2 Releasing gas and draining rear gas-filled shock absorbers	16
40 - Front suspension	18
1 Front axle	18
1.1 Overview of fitting locations - front axle	18
2 Subframe	21
2.1 Assembly overview – subframe	21
2.2 Removing and installing subframe without steering rack	21
2.3 Removing and installing subframe with steering rack	27
2.4 Repairing subframe	35
2.5 Repairing thread in longitudinal member	47
2.6 Fixing position of subframe	47
2.7 Lowering subframe	51
3 Anti-roll bar	56
3.1 Assembly overview - anti-roll bar	56
3.2 Removing and installing anti-roll bar	56
3.3 Removing and installing coupling rod	62
4 Suspension strut, upper suspension link	64
4.1 Assembly overview - suspension strut, upper suspension link	64
4.2 Removing and installing suspension strut	65
4.3 Repairing suspension strut	76
5 Lower suspension link, swivel joint	80
5.1 Assembly overview - lower suspension link, swivel joint	80
5.2 Removing and installing lower suspension link	81
5.3 Checking swivel joint	95
5.4 Removing and installing swivel joint	95
5.5 Renewing front bonded rubber bush for lower suspension link	100
5.6 Renewing rear bonded rubber bush for lower suspension link	103
6 Wheel bearing	108
6.1 Assembly overview - wheel bearing	108
6.2 Removing and installing wheel bearing housing	108
6.3 Removing and installing wheel bearing unit	115



7	Drive shaft	120
7.1	Overview - drive shaft	120
7.2	Assembly overview - drive shaft	121
7.3	Removing and installing drive shaft	127
7.4	Loosening and tightening threaded connections of drive shaft	147
7.5	Removing and installing drive shaft heat shield	148
7.6	Dismantling and assembling drive shaft	149
7.7	Checking outer constant velocity joint	175
7.8	Checking inner constant velocity joint	176
42	- Rear suspension	179
1	Rear axle	179
1.1	Overview - rear axle	179
1.2	Lowering rear axle	181
1.3	Removing and installing rear axle	191
1.4	Removing and installing shield for rear axle	204
2	Subframe	206
2.1	Assembly overview – subframe	206
2.2	Assembly overview - add-on parts for subframe	207
2.3	Fixing position of subframe	208
2.4	Repairing subframe	223
3	Anti-roll bar	238
3.1	Assembly overview - anti-roll bar	238
3.2	Removing and installing anti-roll bar	239
3.3	Removing and installing coupling rod	241
4	Suspension link, track rod	244
4.1	Assembly overview - transverse link	244
4.2	Assembly overview - track rod	248
4.3	Removing and installing upper transverse link	249
4.4	Removing and installing lower transverse link	250
4.5	Removing and installing track rod	252
5	Suspension strut, shock absorber, spring	254
5.1	Assembly overview - suspension strut, shock absorber, spring	254
5.2	Removing and installing shock absorbers	255
5.3	Repairing shock absorber	258
5.4	Removing and installing spring	260
6	Wheel bearing assembly, trailing arm	267
6.1	Assembly overview - wheel bearing	267
6.2	Assembly overview - trailing arm	269
6.3	Removing and installing wheel bearing housing	270
6.4	Removing and installing wheel bearing unit	282
6.5	Renewing bonded rubber bush for wheel bearing housing	289
6.6	Removing and installing trailing arm with mounting bracket	293
6.7	Repairing trailing arm	296
7	Drive shaft	301
7.1	Assembly overview - drive shaft	301
7.2	Loosening and tightening threaded connections of drive shaft	305
7.3	Removing and installing drive shaft	306
7.4	Dismantling and assembling drive shaft	314
7.5	Checking outer constant velocity joint	321
7.6	Checking inner constant velocity joint	322
43	- Self-levelling suspension	325
1	Electronically controlled damping system	325
1.1	Overview of fitting locations - electronically controlled damping system	325



1.2	Removing and installing electronically controlled damping control unit J250	327
1.3	Removing and installing front body acceleration senders G341/G342	330
1.4	Removing and installing rear left body acceleration sender G699	332
2	Vehicle level sender	336
2.1	Assembly overview - front vehicle level senders	336
2.2	Assembly overview - rear vehicle level senders	337
2.3	Removing and installing front vehicle level senders G78/G289	338
2.4	Removing and installing rear vehicle level senders G76/G77	340
44	- Wheels, tyres, vehicle geometry	342
1	Wheel alignment	342
1.1	Notes for wheel alignment	342
1.2	Conditions for testing	343
1.3	Test preparations	343
1.4	Specifications for wheel alignment	345
1.5	Wheel alignment procedure	347
1.6	Necessity of wheel alignment	349
1.7	Vehicle data sticker	350
1.8	Adjusting camber at front wheels	351
1.9	Adjusting camber on rear axle	353
1.10	Adjusting toe at rear axle	354
1.11	Adjusting front axle toe	355
1.12	Wheel runout compensation	356
1.13	Checking maximum wheel lock	357
48	- Steering	358
1	Steering wheel	358
1.1	Assembly overview - steering wheel	358
1.2	Removing and installing steering wheel	359
2	Steering column	361
2.1	Assembly overview - steering column	361
2.2	Checking steering column for damage	362
2.3	Handling and transporting steering column	363
2.4	Removing and installing steering column	364
2.5	Removing and installing control unit for electronic steering column lock J764	373
3	Steering rack	376
3.1	Assembly overview - steering rack	376
3.2	Removing and installing steering rack	381
3.3	Removing and installing boot	392
3.4	Removing and installing track rod	394
3.5	Removing and installing track rod ball joint	399
3.6	Repairing steering rack	400
4	Sensors	406
4.1	Removing and installing steering angle sender G85	406