



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions for when using test instruments and measuring equipment during a road test	1
2 Repair instructions	2
2.1 Rules for cleanliness	2
2.2 General information	2
2.3 Contact corrosion	2
2.4 Routing and attachment of lines	2
98 - Assist systems	4
1 Fitting locations	4
1.1 Overview of fitting locations - senders, sensors and control units in front area of vehicle	4
1.2 Overview of fitting locations - senders, sensors and control units in centre section of vehicle	5
1.3 Overview of fitting locations - senders, sensors and control units in rear section of vehicle	6
2 Senders/sensors/control units	8
2.1 Removing and installing adaptive cruise control unit J428	8
2.2 Removing and installing parking aid/park assist steering control unit	9
2.3 Removing and installing front parking aid senders G252/G253/G254/G255	10
2.4 Removing and installing rear parking aid senders G203/G204/G205/G206	11
2.5 Removing and installing front park assist steering sender G568/G569	12
2.6 Removing and installing rear park assist steering sender G716/G717	13
2.7 Assembly overview - lane change assist	13
2.8 Removing and installing lane change assist control unit J769/J770	14
2.9 Removing and installing lane change assist warning lamp in exterior mirror K311/K312	16
2.10 Removing and installing front camera for driver assist systems R242	16
2.11 Removing and installing reversing camera R189	17
2.12 Removing and installing overhead view camera control unit J928	17
2.13 Removing and installing front overhead view camera R243	18
2.14 Removing and installing left / right overhead view camera R244 / R245	18
2.15 Removing and installing rear overhead view camera R246	19
3 Adaptive cruise control	20
3.1 Components of adaptive cruise control	20
3.2 Calibrating adaptive cruise control	20
4 Parking aid / park assist steering / autonomous parking system	26
4.1 Components of parking aid / park assist steering / autonomous parking system	26
5 Lane change assist	27
5.1 Components of lane change assist	27
6 Front camera for driver assist systems	28
6.1 Components of front camera for driver assist systems	28
6.2 Calibrating front camera for driver assist systems	28
7 Reversing camera system	37
7.1 Components of reversing camera system	37
8 Overhead view camera	38
8.1 Overview - overhead view camera	38
8.2 Calibrating overhead view camera	39