



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions for working on vehicles with auxiliary/supplementary heater	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when working on fuel system	2
1.4 Safety precautions when working on the cooling system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	3
<b>2 General information</b>	<b>4</b>
2.1 Starting conditions for auxiliary/supplementary heater	4
2.2 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	5
2.3 Type plates	5
<b>3 Repair notes</b>	<b>7</b>
3.1 General repair instructions	7
<b>82 - Supplementary heating</b>	<b>8</b>
<b>1 Overview of fitting locations - auxiliary/supplementary heater</b>	<b>8</b>
1.1 Overview of fitting locations - auxiliary/supplementary heater components	8
<b>2 Auxiliary/supplementary heater</b>	<b>11</b>
2.1 Overview of fitting locations - auxiliary/supplementary heater	11
2.2 Assembly overview - auxiliary/supplementary heater attachments	12
2.3 Assembly overview - auxiliary/supplementary heater, internal	13
2.4 Removing and installing auxiliary/supplementary heater	15
2.5 Dismantling and assembling auxiliary/supplementary heater	19
2.6 Removing and installing air intake silencer	21
2.7 Removing and installing circulation pump V55	22
2.8 Removing and installing exhaust system	24
2.9 Removing and installing auxiliary/supplementary heater bracket	25
2.10 Removing and installing covers for auxiliary heater control unit J364	26
2.11 Removing and installing glow plug with flame monitor Q8	27
2.12 Removing and installing temperature sensor G18 and overheating sensor G189	28
2.13 Connector pin assignment for auxiliary heater	29
2.14 Dismantling and assembling burner unit	30
2.15 Removing and installing auxiliary heater control unit J364 with combustion air blower V6	31
<b>3 Coolant circuit with auxiliary/supplementary heater</b>	<b>32</b>
3.1 Connection diagram - coolant hoses	32
3.2 Bleeding coolant circuit of auxiliary/supplementary heater	34
3.3 Removing and installing coolant pipes for auxiliary heater	35
<b>4 Fuel supply system</b>	<b>40</b>
4.1 Overview of fitting locations - fuel supply system	40
4.2 Checking fuel delivery rate	42
4.3 Removing and installing metering pump V54	43
4.4 Checking metering pump V54 with end sealing valve	45
4.5 Bleeding fuel line to metering pump V54 (filling with fuel)	45
<b>5 Regulation of auxiliary/supplementary heater</b>	<b>47</b>
<b>6 Other controlling and regulating components</b>	<b>48</b>
6.1 Removing and installing ambient temperature sensor G17	48
6.2 Removing and installing remote control receiver for auxiliary coolant heater R64	48