



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using test instruments and measuring equipment during a road test	1
2 Repair instructions	2
2.1 Rules for cleanliness	2
2.2 General repair instructions	2
2.3 Repair instructions	3
2.4 Gaskets and seals	3
2.5 Nuts and bolts	4
3 Technical data	5
3.1 Capacities	5
4 Identification	6
4.1 Gearbox identification	6
5 Overview of fitting locations – electrical components	7
5.1 Overview of fitting locations – electrical components	7
39 - Final drive - rear differential	8
1 Final drive	8
1.1 Assembly overview – final drive	8
1.2 Removing and installing final drive	8
2 Assembly mountings	11
2.1 Assembly overview – assembly mountings	11
2.2 Removing and installing bonded rubber mounting	13
3 Gear oil	19
3.1 Oil filler plugs – overview	19
3.2 Checking oil level in clutch chamber	19
3.3 Draining and filling oil in clutch chamber	22
3.4 Checking oil level in hypoid chamber	24
4 Seals	27
4.1 Removing and installing seals	27
5 All-wheel drive coupling	34
5.1 Removing and installing control motor for selective wheel torque control, rear axle	34
6 Propshaft	36
6.1 Assembly overview – propshaft	36
6.2 Removing and installing propshaft	37
6.3 Removing and installing propshaft from final drive	41
6.4 Removing and installing front flexible coupling	44
6.5 Removing and installing rear flexible coupling	45