



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety provisions	1
1.2 Notes on tow-starting/towing	1
2 Identification	2
2.1 Gearbox identification	2
2.2 Identification of torque converter	2
3 Repair instructions	4
3.1 General repair instructions	4
3.2 Gaskets and seals	5
3.3 Nuts and bolts	5
4 Technical data	7
4.1 Capacities	7
5 Electrical components	8
5.1 Overview of fitting locations - electrical components	8
32 - Torque converter	12
1 Torque converter	12
1.1 Assembly overview - torque converter	12
1.2 Removing and installing torque converter	13
1.3 Draining torque converter	14
1.4 Removing and installing torque converter oil seal	14
37 - Controls, housing	17
1 ATF circuit	17
1.1 Assembly overview - ATF circuit	17
1.2 Removing and installing ATF cooler	17
2 ATF	21
2.1 Checking ATF level	21
2.2 Draining and filling ATF	25
2.3 Bleeding ATF system	28
3 Removing and installing gearbox	29
3.1 Removing gearbox	29
3.2 Installing gearbox	37
3.3 Specified torques for gearbox	38
4 Assembly mountings	40
4.1 Assembly overview - assembly mountings	40
5 Transporting gearbox	43
6 Securing to engine and gearbox support	45
7 Bevel box	47
7.1 Removing bevel box	47
7.2 Installing bevel box	55
8 Selector mechanism	59
8.1 Assembly overview - selector mechanism	59
8.2 Emergency release from position P	61
8.3 Removing and installing selector lever handle	61
8.4 Moving push-button in the handle to installation position	64
8.5 Removing and installing selector mechanism	66
8.6 Checking selector mechanism	69
8.7 Checking and adjusting selector lever cable	70
8.8 Removing and installing multifunction switch	72



8.9	Adjusting multifunction switch	75
8.10	Renewing selector shaft seal	77
38	- Gears, control	79
1	ATF system	79
1.1	Removing and installing oil pan	79
1.2	Removing and installing ATF strainer	81
2	Valve body	83
2.1	Assembly overview - valve body	83
2.2	Removing and installing valve body	86
39	- Final drive - differential	93
1	Gear oil	93
1.1	Checking gear oil level	93
1.2	Draining and filling gear oil	94
2	Seals	98
2.1	Overview of fitting locations - seals	98
2.2	Renewing left seal	100
2.3	Renewing right oil seal	102
3	Components of bevel box	108
3.1	Assembly overview - components of bevel box	108
3.2	Renewing bevel box seals	110
3.3	Renewing needle bearing (polygon bearing) for stub shaft	125
4	Gearbox control system	131
4.1	Removing and installing gearbox control unit	131