



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Notes on tow-starting/towing	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
2 Identification	3
2.1 Gearbox identification	3
3 Repair instructions	4
3.1 General information	4
3.2 Rules for cleanliness	4
3.3 General repair instructions	4
3.4 Gaskets and seals	5
3.5 Nuts and bolts	6
4 Technical data	7
4.1 Capacities	7
30 - Clutch	8
1 Clutch	8
1.1 Assembly overview - dual clutch	8
1.2 Removing and installing clutch end cover	8
1.3 Removing dual clutch	12
1.4 Installing dual clutch	15
34 - Controls, housing	23
1 Mechatronic unit	23
1.1 Assembly overview - mechatronic unit	23
1.2 Removing and installing sump	24
1.3 Removing and installing mechatronic unit	26
2 Bevel box	29
2.1 Assembly overview - bevel box	29
2.2 Distinguishing between different types of bevel boxes	30
2.3 Removing and installing bevel box	31
3 Selector mechanism	40
3.1 Assembly overview - selector mechanism	40
3.2 Emergency release from position P	41
3.3 Removing and installing selector lever handle	42
3.4 Moving push-button in the handle to installation position	43
3.5 Removing and installing selector mechanism	45
3.6 Checking selector mechanism	47
3.7 Checking and adjusting selector lever cable	48
3.8 Renewing selector shaft seal	50
4 Removing and installing gearbox	54
4.1 Specified torques for gearbox	54
4.2 Removing gearbox	55
4.3 Installing gearbox	87
5 Assembly mountings	90
5.1 Assembly overview – assembly mountings	90
6 Transporting gearbox	92
7 Securing to engine and gearbox support	94
8 Gear oil circuit	95



8.1	Assembly overview - gear oil circuit	95
8.2	Removing and installing gear oil cooler	95
8.3	Removing and installing gear oil filter	98
8.4	Removing and installing motor for auxiliary hydraulic pump 1 for gearbox oil V475	99
9	Gear oil	101
9.1	Overview of oil drain and inspection plugs	101
9.2	Tools for gear oil change	101
9.3	Checking gear oil level	103
9.4	Draining and filling gear oil	106
35 - Gears, shafts		109
1	Currently, no repairs can be made to gears and shafts	109
39 - Final drive - differential		110
1	Gear oil	110
1.1	Checking gear oil level	110
1.2	Draining and filling gear oil	112
2	Oil seals	119
2.1	Overview of fitting locations - seals	119
2.2	Renewing left seal	119
2.3	Renewing right oil seal	122
3	Differential	127
3.1	Removing and installing right flange shaft	127
4	Components of bevel box	129
4.1	Assembly overview - components of bevel box	129
4.2	Renewing bevel box seals	132
4.3	Renewing seal on right of bevel box	132
4.4	Renewing left seal	133
4.5	Renewing needle bearing for right flange shaft	135
4.6	Removing and installing output flange	136