



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on the SCR system	2
1.6 Safety precautions when working on exhaust system	3
2 Identification	5
2.1 Engine number/engine data	5
3 Repair instructions	7
3.1 Rules for cleanliness	7
3.2 Foreign objects in engine	7
3.3 Contact corrosion	7
3.4 Routing and attachment of lines	8
3.5 Fitting radiator and condensers	8
10 - Removing and installing engine	9
1 Removing and installing motor	9
1.1 Removing motor	9
1.2 Separating engine and gearbox	22
1.3 Securing engine on engine and gearbox support	27
1.4 Installing engine	29
2 Assembly mountings	34
2.1 Assembly overview - assembly mountings	34
2.2 Removing and installing engine mounting	36
2.3 Removing and installing gearbox mountings	37
2.4 Removing and installing pendulum support	39
2.5 Supporting engine in installation position	40
2.6 Adjusting assembly mountings	45
2.7 Checking adjustment of assembly mountings (engine and gearbox mountings)	47
3 Engine cover panel	49
3.1 Removing and installing engine cover	49
13 - Crankshaft group	50
1 Cylinder block (pulley end)	50
1.1 Assembly overview - cylinder block (pulley end)	50
1.2 Assembly overview - sealing flange, belt pulley end	53
1.3 Removing and installing poly-V belt	54
1.4 Removing and installing tensioner for poly V-belt	56
1.5 Removing and installing vibration damper	56
1.6 Removing and installing bracket for ancillaries	57
1.7 Removing and installing engine support	59
1.8 Removing and installing sealing flange on pulley end	61
2 Cylinder block, gearbox end	66
2.1 Assembly overview - cylinder block, gearbox end	66
2.2 Removing and installing flywheel	69
2.3 Removing and installing sealing flange on gearbox side	70
3 Crankshaft	95
3.1 Assembly overview - crankshaft	95
3.2 Crankshaft dimensions	97
3.3 Measuring axial clearance of crankshaft	97



3.4	Renewing needle bearing in crankshaft	98
4	Pistons and conrods	102
4.1	Assembly overview - pistons and conrods	102
4.2	Removing and installing pistons	107
4.3	Measuring piston projection at TDC	109
4.4	Checking pistons and cylinder bores	111
4.5	Checking radial clearance of conrods	114
15	- Cylinder head, valve gear	115
1	Cylinder head	115
1.1	Assembly overview - cylinder head	115
1.2	Assembly overview - cylinder head cover	119
1.3	Removing and installing cylinder head	121
1.4	Removing and installing cylinder head cover	133
1.5	Removing and installing injector seals	134
1.6	Removing and installing camshaft housing	135
1.7	Checking compression	143
2	Toothed belt drive	146
2.1	Assembly overview - toothed belt cover	146
2.2	Assembly overview - toothed belt	147
2.3	Removing and installing toothed belt guard	149
2.4	Removing and installing toothed belt	153
2.5	Removing toothed belt from camshaft	166
3	Valve gear	176
3.1	Assembly overview - valve gear	176
3.2	Measuring axial play of camshaft	178
3.3	Removing and installing camshaft oil seal	179
3.4	Checking hydraulic compensation elements	181
3.5	Removing and installing valve stem seals	182
4	Inlet and exhaust valves	199
4.1	Checking valve guides	199
4.2	Checking valves	200
4.3	Valve dimensions	200
17	- Lubrication	202
1	Sump, oil pump	202
1.1	Assembly overview - sump/oil pump	202
1.2	Engine oil:	206
1.3	Removing and installing lower part of sump	206
1.4	Removing and installing upper part of sump	211
1.5	Removing and installing oil pump	215
1.6	Removing and installing oil level and oil temperature sender G266	215
2	Engine oil cooler	217
3	Oil filter, oil pressure switch	218
3.1	Assembly overview - oil filter housing	218
3.2	Exploded view - oil pressure switches	220
3.3	Removing and installing oil pressure sender G10	221
3.4	Checking oil pressure	222
3.5	Removing and installing oil filter housing	223
3.6	Removing and installing oil pressure regulating valve N428	225
3.7	Removing and installing piston cooling jet control valve N522	226
4	Oil circuit	227
4.1	Removing and installing oil supply line	227
4.2	Removing and installing oil return line for turbocharger	228



19 - Cooling	230
1 Cooling system/coolant	230
1.1 Connection diagram - coolant hoses	230
1.2 Checking cooling system for leaks	232
1.3 Draining coolant	235
1.4 Filling with coolant	237
1.5 Checking filling quality of cooling system	256
1.6 Checking electric vacuum pump VAS 6096/2	258
1.7 Flushing cooling system	259
2 Coolant pump, regulation of cooling system	281
2.1 Assembly overview - coolant pump, thermostat	281
2.2 Assembly overview - electric coolant pump	284
2.3 Assembly overview - coolant temperature sender	286
2.4 Removing and installing electric coolant pump	288
2.5 Removing and installing coolant pump	296
2.6 Removing and installing coolant distribution module	298
2.7 Removing and installing coolant regulating valve N515	301
2.8 Removing and installing coolant temperature sender G62	302
2.9 Removing and installing engine outlet coolant temperature sender G82	304
2.10 Removing and installing coolant temperature sender for charge air cooler G1130	306
3 Coolant pipes	309
3.1 Assembly overview - coolant pipes	309
3.2 Removing and installing coolant pipes	310
4 Radiator, radiator fan	318
4.1 Assembly overview - radiator/radiator fan	318
4.2 Assembly overview - radiator cowl and radiator fan	321
4.3 Removing and installing radiator	322
4.4 Removing and installing water radiator for charge air cooling circuit	324
4.5 Removing and installing radiator cowl	330
4.6 Removing and installing radiator fan	331
21 - Turbocharging/supercharging	333
1 Turbocharger	333
1.1 Assembly overview - turbocharger	333
1.2 Removing and installing turbocharger	336
1.3 Removing and installing connection for turbocharger	341
2 Charge air system	343
2.1 Assembly overview - charge air system	343
2.2 Removing and installing charge pressure sender GX26	343
2.3 Checking charge air system for leaks	343
2.4 Removing and installing air pipe	346
2.5 Checking charge air cooler for leaks	347
23 - Mixture preparation - injection	353
1 Injection system	353
1.1 Schematic overview - fuel system	353
1.2 Overview of fitting locations - injection system	355
1.3 Filling/bleeding fuel system	367
1.4 Checking fuel system for leaks	367
2 Injectors/high-pressure accumulator (rail)	369
2.1 Assembly overview - injectors	369
2.2 Assembly overview - fuel rail	371
2.3 Adapting correction values for injectors	372
2.4 Testing injectors	373



2.5	Checking return flow rate of injectors with engine running	374
2.6	Checking return flow rate of injectors at starter speed	377
2.7	Testing jammed-open injectors	379
2.8	Removing and installing injectors	380
2.9	Removing and installing high-pressure lines	385
2.10	Removing and installing fuel rail	390
3	Air filter	395
3.1	Assembly overview - air filter housing	395
3.2	Removing and installing air filter housing	397
3.3	Removing and installing air guide on lock carrier	399
4	Intake manifold	401
4.1	Assembly overview - intake manifold	401
4.2	Removing and installing intake manifold	406
4.3	Removing and installing throttle valve module GX3	413
5	Senders and sensors	416
5.1	Removing and installing fuel pressure regulating valve N276	416
5.2	Checking fuel pressure regulating valve N276	418
5.3	Removing and installing fuel pressure sender G247	420
5.4	Removing and installing air mass measurement module GX35	422
5.5	Removing and installing pressure differential sender G505	424
5.6	Removing and installing NOx sender 2 G687	425
5.7	Removing and installing NOx sender 3 G932	427
5.8	Removing and installing charge air temperature sender ahead of charge air cooler G810	429
5.9	Removing and installing charge air temperature sender after charge air cooler G811	429
5.10	Removing and installing NOx sender G295	430
5.11	Removing and installing particle sensor G784	432
5.12	Removing and installing temperature and pressure sender for low-pressure fuel system GX20	434
6	Engine control unit	436
6.1	Removing and installing engine control unit J623	436
6.2	Removing and installing engine control unit J623 (with protective housing)	437
7	High-pressure pump	444
7.1	Assembly overview - high-pressure pump	444
7.2	Removing and installing high-pressure pump	444
8	Lambda probe	449
8.1	Assembly overview - Lambda probe	449
8.2	Removing and installing Lambda probe	450
26 - Exhaust system		452
1	Exhaust pipes and silencers	452
1.1	Assembly overview - silencers	452
1.2	Assembly overview - front exhaust pipe	453
1.3	Separating exhaust pipes from silencers	457
1.4	Removing and installing silencer	458
1.5	Aligning exhaust system free of stress	460
1.6	Checking exhaust system for leaks	460
1.7	Installation position of clamp	460
1.8	Align end exhaust pipes	462
2	Emission control	463
2.1	Assembly overview - emission control	463
2.2	Removing and installing emission control module	465
2.3	Removing and installing exhaust flap control unit J883	473
2.4	Removing and installing ammonia traps	475
3	SCR system (selective catalytic reduction)	478
3.1	Assembly overview - tank for reducing agent	478



3.2	Assembly overview - reducing agent supply line	480
3.3	Assembly overview - delivery unit for reducing agent metering system GX19	483
3.4	Removing and installing reducing agent tank	484
3.5	Removing and installing front section of reducing agent supply line	486
3.6	Removing and installing delivery unit for reducing agent metering system GX19	488
3.7	Removing and installing injector for reduction agent N474	490
3.8	Removing and installing injector 2 for reducing agent N758	493
3.9	Removing and installing control unit for reducing-agent heater J891	495
3.10	Assembly overview - injector for reducing agent N474	498
3.11	Assembly overview – injector 2 for reducing agent N758	499
3.12	Draining reducing agent tank	500
3.13	Removing and installing middle section of reducing agent supply line	504
3.14	Removing and installing rear section of reducing agent supply line	505
3.15	Removing and installing filler pipe for reducing agent tank	508
3.16	Disconnecting reducing agent supply line	509
3.17	SCR - resetting learnt values	515
4	Exhaust gas temperature regulation	516
4.1	Assembly overview - exhaust gas temperature regulation	516
4.2	Removing and installing exhaust gas temperature sender 1 G235	517
4.3	Removing and installing exhaust gas temperature sender 2 G448	519
4.4	Removing and installing exhaust gas temperature sender 3 G495	521
4.5	Removing and installing exhaust gas temperature sender 4 G648	523
5	Exhaust gas recirculation	527
5.1	Assembly overview - exhaust gas recirculation	527
5.2	Removing and installing exhaust gas recirculation cooler	530
5.3	Removing and installing exhaust gas recirculation valve 1 GX5	533
5.4	Removing and installing exhaust gas recirculation valve 2 GX6	534
5.5	Removing and installing exhaust gas recirculation temperature sensor G98	536
5.6	Checking exhaust gas recirculation cooler for leaks	537
28	Glow plug system	542
1	Glow plug system	542
1.1	Assembly overview - glow plug system	542
1.2	Removing and installing glow plug	544
1.3	Removing and installing automatic glow period control unit J179	548
1.4	Removing and installing Hall sender G40	549
1.5	Removing and installing engine speed sender G28	550