



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety measures when working on vehicles with a start/stop system	2
1.4 Safety notes and safety precautions when working on vehicles with a high-voltage system	2
1.5 Safety precautions when working in the vicinity of high-voltage components	4
2 Identification	5
2.1 Engine number/engine data	5
3 General information	6
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	6
4 Repair instructions	7
4.1 Routing and attachment of lines	7
4.2 General repair notes	7
20 - Fuel supply system	8
1 Fuel	8
1.1 Assembly overview - fuel tank	8
1.2 Removing and installing fuel tank	13
1.3 Emptying fuel tank	18
2 Fuel delivery unit, fuel gauge sender	26
2.1 Assembly overview - fuel delivery unit/fuel gauge sender	26
2.2 Removing and installing fuel delivery unit, fuel gauge sender	28
2.3 Removing and installing fuel gauge sender G	35
2.4 Removing and installing assembly opening cover	36
3 Plug-in connectors	38
3.1 Separating plug-in connectors	38
4 Activated charcoal filter system	45
4.1 Connection diagram - activated charcoal filter system	45
4.2 Assembly overview – activated charcoal filter system	46
4.3 Removing and installing activated charcoal filter	48
4.4 Checking fuel tank breather	49
4.5 Assembly overview - fuel tank shut-off valve N288	55
4.6 Removing and installing tank shut-off valve N288	57
5 Accelerator pedal	58
5.1 Assembly overview - accelerator module	58
5.2 Removing and installing accelerator pedal module GX2	58
6 Fuel pump	60
6.1 Checking fuel system pressurisation pump G6	60
6.2 Removing and installing fuel pump control unit J538	74
7 Senders and sensors	76
7.1 Removing and installing tank pressure sensor G400	76