

002 - Convenience system , (L0L)	1-29
1. Convenience system , (L0L)	1
2. Fuse holder C	2
3. Driver door control unit, Driver side exterior mirror	3
4. Driver door control unit, Driver side exterior mirror	4
5. Driver exterior door handle, Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit, Central locking SAFELOCK function warning lamp	5
6. Exterior mirror adjuster, Operating unit for window regulator in driver door, Driver door control unit, Driver side door warning lamp	6
7. Driver door control unit, Driver door lock unit, Driver side window regulator motor	7
8. Driver door control unit	8
9. Driver door control unit	9
10. Front passenger door control unit	10
11. Front passenger side window regulator button, Front passenger door control unit, Front passenger door lock unit, Front passenger side door warning lamp	11
12. Front passenger exterior door handle, Front passenger door control unit, Front passenger side window regulator motor	12
13. Front passenger door control unit, Passenger side exterior mirror	13
14. Front passenger door control unit, Passenger side exterior mirror	14
15. Rear driver side door control unit, Rear left door lock unit, Rear driver side window regulator motor	15
16. Rear left exterior door handle, Rear driver side window regulator button, Rear driver side door control unit	16
17. Rear passenger side door control unit, Rear right door lock unit, Rear passenger side window regulator motor	17
18. Rear right exterior door handle, Rear passenger side window regulator button, Rear passenger side door control unit	18
19. Interior mirror	19
20. Rain and light sensor, Front interior light	20
21. Rear lid handle, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Rear interior light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	21
22. Rear lid handle, Rear lid lock unit	22
23. Button to close rear lid in luggage compartment, Control unit for overhead view camera	23
24. Rear lid warning buzzer, Rear lid control unit, Power latching for rear lid	24
25. Rear lid control unit, Motor 1 for rear lid, Motor 2 for rear lid	25
26. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid control unit, Rear lid power opening control unit, Interface for entry and start system	26
27. Data bus diagnostic interface	27
28. Tyre Pressure Monitoring System control unit, Onboard supply control unit	28
29. Onboard supply control unit, Coupling point for front right door	29
003 - Convenience system , (L0R)	30-58
1. Convenience system , (L0R)	30
2. Fuse holder C	31
3. Driver door control unit, Driver side exterior mirror	32
4. Driver door control unit, Driver side exterior mirror	33
5. Driver exterior door handle, Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit, Central locking SAFELOCK function warning lamp	34
6. Exterior mirror adjuster, Operating unit for window regulator in driver door, Driver door control unit, Driver side door warning lamp	35
7. Driver door control unit, Driver door lock unit, Driver side window regulator motor	36
8. Driver door control unit	37
9. Driver door control unit, Coupling point for front right door	38
10. Front passenger door control unit	39
11. Front passenger side window regulator button, Front passenger door control unit, Front passenger door lock unit, Front passenger side door warning lamp	40
12. Front passenger exterior door handle, Front passenger door control unit, Front passenger side window regulator motor	41
13. Front passenger door control unit, Passenger side exterior mirror	42
14. Front passenger door control unit, Passenger side exterior mirror	43
15. Rear left door lock unit, Rear passenger side window regulator motor	44
16. Rear left exterior door handle, Rear passenger side window regulator button	45
17. Rear right door lock unit, Rear driver side window regulator motor	46
18. Rear right exterior door handle, Rear driver side window regulator button	47
19. Interior mirror	48
20. Rain and light sensor. Front interior light	49

21. Rear lid handle, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Rear interior light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	50
22. Rear lid handle, Rear lid lock unit	51
23. Button to close rear lid in luggage compartment, Control unit for overhead view camera	52
24. Rear lid warning buzzer, Rear lid control unit, Power latching for rear lid	53
25. Rear lid control unit, Motor 1 for rear lid, Motor 2 for rear lid	54
26. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid control unit, Rear lid power opening control unit, Interface for entry and start system	55
27. Data bus diagnostic interface	56
28. Tyre Pressure Monitoring System control unit, Onboard supply control unit	57
29. Onboard supply control unit, Coupling point for front left door	58
004 - Anti-lock brake system (ABS) , (L0L)	59-65
1. Anti-lock brake system (ABS) , (L0L)	59
2. ABS control unit, Fuse holder B, Fuse holder C	60
3. ABS control unit, Left parking brake motor	61
4. Rear right speed sensor, Rear left speed sensor, ABS control unit, Right parking brake motor	62
5. Electromechanical parking brake button, Front right speed sensor, Front left speed sensor, Vacuum sender, ABS control unit	63
6. Electromechanical parking brake button	64
7. Switch module 1 in centre console, Onboard supply control unit, Data bus diagnostic interface, Dash panel insert	65
005 - Anti-lock brake system (ABS) , (L0R)	66-72
1. Anti-lock brake system (ABS) , (L0R)	66
2. ABS control unit, Fuse holder B, Fuse holder C	67
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, Vacuum sender, ABS control unit	68
4. ABS control unit, Left parking brake motor, Right parking brake motor	69
5. Electromechanical parking brake button, ABS control unit	70
6. Switch module 1 in centre console, Electromechanical parking brake button, Onboard supply control unit	71
7. Data bus diagnostic interface, Dash panel insert	72
006 - Airbag systems , (L0L)	73-84
1. Airbag systems , (L0L)	73
2. Centre switch module in dash panel, Airbag control unit, Fuse holder C	74
3. Airbag control unit, Front left seat belt, Front right seat belt, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	75
4. Crash sensor for front airbag, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	76
5. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Steering column electronics control unit, Fuse holder G, Diagnostic connection	77
6. Key operated switch to deactivate airbag on front passenger side, Twin belt buckle, Belt switch for seat row 2, passenger side, Airbag control unit, Airbag igniter 1 on front passenger side	78
7. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	79
8. Driver side belt switch, Front passenger side belt switch, Operating unit for front right seat adjustment, Seat occupied sensor on front passenger side, Airbag control unit, Emergency call module control unit and communication unit	80
9. Front pressure hose sensor for pedestrian protection, Airbag control unit	81
10. Driver side crash sensor for pedestrian protection, Front passenger side crash sensor for pedestrian protection, Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit	82
11. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	83
12. Airbag control unit, Data bus diagnostic interface, Dash panel insert	84
007 - Airbag systems , (L0R)	85-96
1. Airbag systems , (L0R)	85
2. Airbag control unit, Fuse holder C, Fuse holder G	86
3. Airbag control unit, Front left seat belt, Front right seat belt, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	87
4. Centre switch module in dash panel, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	88
5. Crash sensor for front airbag, Front pressure hose sensor for pedestrian protection, Airbag control unit	89

6. Driver side crash sensor for pedestrian protection, Front passenger side crash sensor for pedestrian protection, Trigger 2 for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit	90
7. Front passenger side belt switch, Operating unit for front left seat adjustment, Seat occupied sensor, front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Emergency call module control unit and communication unit, Diagnostic connection	91
8. Trigger 1 for pedestrian protection, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	92
9. Key operated switch to deactivate airbag on front passenger side, Twin belt buckle, Belt switch for seat row 2, driver side, Airbag control unit, Airbag igniter 1 on front passenger side	93
10. Side airbag crash sensor on driver side, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	94
11. Side airbag crash sensor on front passenger side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	95
12. Airbag control unit, Data bus diagnostic interface, Dash panel insert	96
008 - Fuse assignment	97-137
1. Fuse assignment	97
2. Auxiliary heater control unit, Wiper motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder D, Positive connection (30a), in automatic gearbox wiring harness	98
3. Automatic glow period control unit, Low heat output relay, Relay and fuse carrier 1, Auxiliary air heating fuse	99
4. Heated windscreen relay, Engine component current supply relay, Relay and fuse carrier 3	100
5. Heated windscreen relay, Heated windscreen relay 2, Relay and fuse carrier 3, Heated windscreen	101
6. Battery, Starter, Fuse holder B, Jump start connection, Radiator fan	102
7. Alternator, Power steering control unit, Fuse holder B	103
8. Alarm horn, Battery monitor control unit, Brake servo, Fuse holder B	104
9. Clutch position sender, Starter relay 1, Starter relay 2, Fuse holder B, Connection (diagnosis terminal 50), in main wiring harness	105
10. Left horn, Right horn, High heat output relay, Horn relay, Fuse holder B, Auxiliary air heater element	106
11. ABS control unit, Main relay, Terminal 30 voltage supply relay, Fuse holder B	107
12. Oil level and oil temperature sender, Turbine changeover valve, Fuse holder B, Auxiliary pump for heating	108
13. Brake light switch, Fuse holder B, Charge air cooling pump	109
14. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Control unit for NOx sender, Control unit 2 for NOx sender, Air mass meter, Particulate sensor, NOx sender 3, Heater element for crankcase breather, Coolant valve for gearbox, Fuse holder B	110
15. Fuel pump control unit, Exhaust flap control unit, Exhaust flap control unit 2, Fuse holder B, Auxiliary hydraulic pump 1 for gearbox oil	111
16. Engine/motor control unit	112
17. Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Coolant valve for cylinder head, Actuator for engine temperature regulation, Piston cooling jet control valve, Glow plug 1, Glow plug 2	113
18. Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Ignition coil 2 with output stage, Camshaft control valve 1, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Exhaust camshaft control valve 1, Glow plug 3, Glow plug 4, Auxiliary pump for heating	114
19. Coolant shut-off valve, Fuel pressure regulating valve, Fuel metering valve	115
20. Inlet cam actuator A for cylinder 1, Inlet cam actuator B for cylinder 1, Inlet cam actuator A for cylinder 2, Inlet cam actuator B for cylinder 2, Inlet cam actuator A for cylinder 3, Inlet cam actuator B for cylinder 3, Inlet cam actuator A for cylinder 4, Inlet cam actuator B for cylinder 4	116
21. Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3, Exhaust cam actuator A for cylinder 4, Exhaust cam actuator B for cylinder 4	117
22. Onboard supply control unit	118
23. Operating and display unit for rear air conditioning system, Selector lever, Data bus diagnostic interface, Fuse holder C	119
24. Rotary light switch, Heater and air conditioning controls, Electromechanical parking brake button, Rain and light sensor, Tyre Pressure Monitoring System control unit, Remote control receiver for auxiliary coolant heater, Fuse holder C, Analogue clock	120
25. Anti-theft alarm sensor, Left background lighting LED, Right background lighting LED, Fuse holder C, Diagnostic connection, Front interior light	121
26. Driver door control unit, Adaptive cruise control unit, Control unit for cornering light and headlight range control. Liht for front left door contour lihtina. Fuse holder C	122

27. Front passenger door control unit, Rear driver side door control unit, Rear passenger side door control unit, Light for front right door contour lighting, Light for rear left door contour lighting, Light for rear right door contour lighting, Fuse holder C	123
28. Steering column electronics control unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Control unit for navigation system, Control unit for head-up display, Fuse holder C	124
29. Fresh air blower control unit, Trailer detector control unit, Front left seat belt, Front right seat belt, Fuse holder C	125
30. Heated rear window relay, Relay for power sockets, Frequency modulation (FM) frequency filter in positive wire, Fuse holder C, 12 V socket, 12 V socket 2, 12 V socket 3	126
31. Airbag control unit, Terminal 15 voltage supply relay, Parking aid control unit, Lane change assist control unit, Lane change assist control unit 2, Front camera for driver assist systems, Fuse holder C	127
32. Interior mirror, Centre switch module in dash panel, Switch module 1 in centre console, Reversing light switch, Pressure sender for refrigerant circuit, External air quality and air humidity sensor, Control unit for structure-borne sound, Control unit for fuel tank leak detection, Front left headlight, Front right headlight, Fuse holder C	128
33. Emergency call module control unit and communication unit, Dash panel insert, Fuse holder C, Positive connection (15a), in dash panel wiring harness	129
34. Rear lid handle, Delivery unit for reducing agent metering system, Control unit for overhead view camera, Relay for reducing agent metering system, Interface for entry and start system, Fuse holder C	130
35. Sliding sunroof adjustment control unit, Digital sound package control unit, Fuse holder C	131
36. All-wheel drive control unit, Control unit for electronic steering column lock, Driver seat adjustment control unit, Control unit for reducing agent heater, Fuse holder C, Front left seat backrest fan 1, Front left seat cushion fan 1	132
37. Fuse holder C, DC/AC converter with socket, 12 V - 230 V	133
38. Electronically controlled damping control unit, Rear lid control unit, Fuse holder C	134
39. Remote starting system relay, Fuse holder C, Fuse carrier 1, USB charging socket fuse	135
40. Operating unit for front right seat adjustment, Seat occupied recognition control unit, Fuse carrier 2, Front passenger seat adjustment thermal fuse 1, Front right seat backrest fan 1, Front right seat cushion fan 1	136
41. Two-way signal amplifier for mobile telephone/data services, Battery isolation igniter, Storage compartment with interface for mobile telephone, USB hub, Fuse holder G, USB charging socket 1	137
009 - Earthing concept	138-162
1. Earthing concept	138
2. Battery, ABS control unit, Power steering control unit, Radiator fan	139
3. Oil pressure switch, Oil pressure switch for reduced oil pressure, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Auxiliary pump for heating	140
4. Alarm horn, Left horn, Automatic gearbox control unit, Mechatronic unit for dual clutch gearbox, Gearbox, Terminal 30 wiring junction, Auxiliary hydraulic pump 1 for gearbox oil	141
5. Brake light switch, Brake fluid level warning contact, Control unit for NOx sender, Control unit 2 for NOx sender, Oil level and oil temperature sender, Clutch position sender, Particulate sensor, NOx sender 3, Adaptive cruise control unit, Relay and fuse carrier 1	142
6. Bonnet contact switch 2, Wiper motor control unit, Control unit for cornering light and headlight range control, Front left headlight, Relay and fuse carrier 3, Headlight washer system pump, Left washer jet heater element, Right washer jet heater element	143
7. Engine/motor control unit, Air conditioner compressor regulating valve, Charge air cooling pump	144
8. Bonnet contact switch, Front right brake pad wear sender, Pressure sender for refrigerant circuit, External air quality and air humidity sensor, Anti-theft alarm system horn, Right horn, Auxiliary heater control unit, Control unit for structure-borne sound, Brake servo	145
9. Operating unit for front left seat adjustment, Driver seat adjustment control unit, Front right headlight, Front left seat backrest fan 1, Front left seat cushion fan 1, Heated seat cushion for driver seat	146
10. Driver exterior door handle, Onboard supply control unit	147
11. Starter button, Parking aid control unit, Steering column electronics control unit, Data bus diagnostic interface, Control unit for electronic steering column lock, Dash panel insert, Front left footwell light, Fuse holder C	148
12. Rotary light switch, Rear left exterior door handle, Rear driver side door control unit, Light for rear left door contour lighting, Front left seat belt, Fuse holder C, Diagnostic connection, Rear left door lock unit	149
13. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Selector lever, Electromechanical parking brake button, Digital sound package control unit, 12 V socket, DC/AC converter with socket, 12 V - 230 V, 12 V socket 3	150
14. Centre switch module in dash panel. Switch module 1 in centre console. Switch module 2 in centre	151

console, Control unit for head-up display, Interface for entry and start system, Cup holder illumination bulb, Left background lighting LED, Right background lighting LED, 12 V socket 2	
15. Interior mirror, Telematics button module, Rain and light sensor, Sliding sunroof adjustment control unit, Front camera for driver assist systems, Front interior light, Rear interior light, Heated windscreen	152
16. Operating unit for front right seat adjustment, Front passenger seat lumbar support adjustment switch, Seat occupied recognition control unit, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat, Heating element with seat occupied recognition, front passenger side	153
17. Front passenger exterior door handle, Fresh air blower control unit, Dash panel right vent illumination bulb, Glove compartment light, Analogue clock	154
18. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Control unit for navigation system, Emergency call module control unit and communication unit, Two-way signal amplifier for mobile telephone/data services, Front right footwell light, Dash panel left vent illumination bulb, Storage compartment with interface for mobile telephone	155
19. Rear right exterior door handle, Rear passenger side door control unit, Control unit for overhead view camera, Light for rear right door contour lighting, Front right seat belt, Frequency modulation (FM) frequency filter in negative wire, USB hub, USB charging socket 1, Rear right door lock unit, Heated backrest for rear right seat	156
20. Rear lid handle, Button to close rear lid in luggage compartment, Left tail light cluster 2, Right tail light cluster 2, High-level brake light bulb, Power latching for rear lid, Rear lid lock unit, Rear left seat heating, Heated backrest for rear left seat, Rear right seat heating	157
21. Trailer detector control unit, All-wheel drive control unit, Rear lid control unit, Exhaust flap control unit, Left tail light cluster, Trailer socket	158
22. Fuel delivery unit, Delivery unit for reducing agent metering system, Tyre Pressure Monitoring System control unit, Fuel pump control unit, Exhaust flap control unit 2, Right tail light cluster, Metering pump, Heater for reducing agent line (heater circuit 2)	159
23. Electronically controlled damping control unit, Lane change assist control unit, Lane change assist control unit 2, Rear lid power opening control unit, Remote control receiver for auxiliary coolant heater, 12 V socket, Left number plate light, Right number plate light	160
24. Driver door control unit, Driver side exterior mirror, Driver door lock unit	161
25. Front passenger door control unit, Passenger side exterior mirror, Front passenger door lock unit	162
010 - LED headlights , (8IU),(8Q5)	163-167
1. LED headlights , (8IU),(8Q5)	163
2. Rear left vehicle level sender, Onboard supply control unit, Fuse holder C	164
3. Onboard supply control unit, Front left headlight	165
4. Onboard supply control unit, Control unit for cornering light and headlight range control, Front right headlight	166
5. Data bus diagnostic interface, Control unit for cornering light and headlight range control	167
011 - Electromechanical steering , (1N3),(1N7)	168-170
1. Electromechanical steering , (1N3),(1N7)	168
2. Power steering control unit, Fuse holder B	169
3. Data bus diagnostic interface	170
012 - Electric seat adjustment with memory function , (2R2),(2R9),(8I0),(L0L)	171-177
1. Electric seat adjustment with memory function , (2R2),(2R9),(8I0),(L0L)	171
2. Data bus diagnostic interface, Driver seat adjustment control unit, Fuse carrier 2, Fuse holder C, Driver seat backrest adjustment motor	172
3. Operating unit for front left seat adjustment, Operating unit 2 for front left seat adjustment, Driver seat lumbar support adjustment switch, Driver seat adjustment control unit	173
4. Driver seat adjustment control unit, Lumbar support for driver seat, Driver seat rake adjustment motor, Driver seat height adjustment motor	174
5. Operating unit for front right seat adjustment, Airbag control unit, Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Front passenger seat rake adjustment motor	175
6. Operating unit for front right seat adjustment, Front passenger seat lumbar support adjustment switch, Lumbar support for front passenger seat, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat height adjustment motor	176
7. Front passenger seat lumbar support adjustment switch, Lumbar support for front passenger seat	177
013 - Electric seat adjustment with memory function , (2R8),(3E0),(L0R)	178-183
1. Electric seat adjustment with memory function , (2R8),(3E0),(L0R)	178
2. Data bus diagnostic interface, Driver seat adjustment control unit, Fuse holder C, Fuse carrier 2, Driver seat backrest adjustment motor	179
3. Operating unit for front right seat adjustment, Operating unit 2 for front right seat adjustment, Driver seat lumbar support adjustment switch, Driver seat adjustment control unit	180
4. Driver seat adjustment control unit. Lumbar support for driver seat. Driver seat rake adjustment	181

motor, Driver seat height adjustment motor	
5. Operating unit for front left seat adjustment, Airbag control unit, Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Front passenger seat rake adjustment motor	182
6. Operating unit for front left seat adjustment, Front passenger seat lumbar support adjustment switch, Lumbar support for front passenger seat, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat height adjustment motor	183
014 - Electrically adjustable lumbar support on seat without electric adjustment , (8I2),(L0L)	184-187
1. Electrically adjustable lumbar support on seat without electric adjustment , (8I2),(L0L)	184
2. Driver seat lumbar support adjustment switch, Massage control unit, Fuse holder C	185
3. Driver seat massage function button, Massage control unit, Lumbar support for driver seat, Driver seat backrest adjustment motor	186
4. Massage control unit	187
015 - Electrically adjustable lumbar support on seat without electric adjustment , (8I3),(7P8), (L0R)	188-191
1. Electrically adjustable lumbar support on seat without electric adjustment , (8I3),(7P8),(L0R)	188
2. Driver seat lumbar support adjustment switch, Massage control unit, Fuse holder C	189
3. Driver seat massage function button, Massage control unit, Lumbar support for driver seat, Driver seat backrest adjustment motor	190
4. Massage control unit	191
016 - Backrest adjustment , (3PW),(L0L)	192-194
1. Backrest adjustment , (3PW),(L0L)	192
2. Operating unit for front left seat adjustment, Fuse holder C, Lumbar support for driver seat	193
3. Operating unit for front left seat adjustment, Driver seat backrest adjustment motor	194
017 - Backrest adjustment , (3PX),(L0R)	195-196
1. Backrest adjustment , (3PX),(L0R)	195
2. Operating unit for front right seat adjustment, Fuse holder C, Lumbar support for driver seat, Driver seat backrest adjustment motor	196
018 - Seat heating , (4A3),(4A4),(L0L)	197-203
1. Seat heating , (4A3),(4A4),(L0L)	197
2. Onboard supply control unit, Fuse holder C, Heated seat cushion for driver seat, Heated backrest for driver seat	198
3. Airbag control unit, Onboard supply control unit, Heated seat cushion for front passenger seat	199
4. Seat occupied recognition control unit, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	200
5. Seat occupied recognition control unit, Heating element with seat occupied recognition, front passenger side	201
6. Operating and display unit for rear air conditioning system, Rear left seat heating, Heated backrest for rear left seat, Rear right seat heating, Heated backrest for rear right seat	202
7. Heater and air conditioning controls, Data bus diagnostic interface	203
019 - Seat heating , (4A3),(4A4),(L0R)	204-207
1. Seat heating , (4A3),(4A4),(L0R)	204
2. Onboard supply control unit, Fuse holder C, Heated seat cushion for driver seat	205
3. Operating and display unit for rear air conditioning system, Onboard supply control unit, Heated seat cushion for front passenger seat, Rear left seat heating	206
4. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Data bus diagnostic interface, Heated backrest for rear left seat, Rear right seat heating, Heated backrest for rear right seat	207
021 - Entry and start authorisation , (4F2),(4I3),(4I6),(4I7),(4F6)	208-213
1. Entry and start authorisation , (4F2),(4I3),(4I6),(4I7),(4F6)	208
2. Starter button, Data bus diagnostic interface, Engine/motor control unit, Interface for entry and start system, Fuse holder C	209
3. Onboard supply control unit, Interface for entry and start system, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	210
4. Driver exterior door handle, Interface for entry and start system	211
5. Front passenger exterior door handle, Interface for entry and start system	212
6. Rear left exterior door handle, Rear right exterior door handle, Rear lid power opening control unit, Interface for entry and start system	213
022 - Heated windscreen , (4GW)	214-215
1. Heated windscreen , (4GW)	214
2. Heated windscreen relay, Onboard supply control unit, Fuse holder B, Relay and fuse carrier 3, Heated windscreen	215
023 - Heated windscreen , (4GX)	216-218
1. Heated windscreen , (4GX)	216
2. Heated windscreen relay, Onboard supply control unit, Fuse holder B, Relay and fuse carrier 3	217
3. Heated windscreen relay 2. Relay and fuse carrier 3. Heated windscreen	218

024 - Window wash/wipe system, headlight washer system , (8N4),(8N6),(8X1),(9T1)	219-221
1. Window wash/wipe system, headlight washer system , (8N4),(8N6),(8X1),(9T1)	219
2. Wiper motor control unit, Onboard supply control unit, Fuse holder B, Fuse holder D, Left washer jet heater element, Right washer jet heater element	220
3. Windscreen washer fluid level sender, Onboard supply control unit, Washer pump, Headlight washer system pump	221
025 - Dual clutch gearbox 0DL , (0EX)	222-227
1. Dual clutch gearbox 0DL , (0EX)	222
2. Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C, Fuse holder D	223
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	224
4. Selector lever, Onboard supply control unit, Steering column electronics control unit, Mechatronic unit for dual clutch gearbox	225
5. Selector lever, Data bus diagnostic interface	226
6. Selector lever, Selector lever position display	227
026 - Multifunction steering wheel , (1XX),(2PK),(2PU),(2ZD),(2ZH),(2ZW)	228-230
1. Multifunction steering wheel , (1XX),(2PK),(2PU),(2ZD),(2ZH),(2ZW)	228
2. Tiptronic switch in steering wheel to shift down, Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side	229
3. Tiptronic switch in steering wheel to shift up, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Heated steering wheel sender, Multifunction steering wheel control unit	230
027 - Climatronic , (KH0),(KH7)	231-241
1. Climatronic , (KH0),(KH7)	231
2. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Fuse holder C, Fuse carrier 1	232
3. Heater and air conditioning controls, Fresh air blower control unit, Fresh air blower	233
4. Heater and air conditioning controls, Pressure sender for refrigerant circuit, External air quality and air humidity sensor, Data bus diagnostic interface	234
5. Heater and air conditioning controls, Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Rear vent temperature sender, Onboard supply control unit	235
6. Heater and air conditioning controls	236
7. Heater and air conditioning controls, Air conditioner compressor regulating valve	237
8. Heater and air conditioning controls, Front left temperature flap, Front right temperature flap	238
9. Heater and air conditioning controls, Air distribution flap, Air recirculation flap	239
10. Heater and air conditioning controls, Temperature flap, Defroster flap	240
11. Heater and air conditioning controls, Footwell vent temperature sender, Evaporator temperature sensor	241
028 - Air conditioning system , (KH6)	242-248
1. Air conditioning system , (KH6)	242
2. Fresh air blower control unit, Fuse holder C, Fuse carrier 1, Fresh air blower	243
3. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Air recirculation flap control motor	244
4. Heater and air conditioning controls, Data bus diagnostic interface	245
5. Heater and air conditioning controls	246
6. Heater and air conditioning controls, Evaporator temperature sensor, Air conditioner compressor regulating valve	247
7. Heater and air conditioning controls, Temperature flap, Air distribution flap	248
030 - Parking aid (PDC) , (7X2),(7X5)	249-254
1. Parking aid (PDC) , (7X2),(7X5)	249
2. Centre switch module in dash panel, Parking aid control unit, Onboard supply control unit, Fuse holder C	250
3. Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit, Data bus diagnostic interface	251
4. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left sender for park assist steering on left side of vehicle, Parking aid control unit	252
5. Rear left parking aid sender, Front left parking aid sender, Front right sender for park assist steering on right side of vehicle, Rear left park assist steering sender, Parking aid control unit	253
6. Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Rear right park assist steering sender, Parking aid control unit	254
031 - Dynamic Chassis Control , (2I0)	255-258
1. Dynamic Chassis Control , (2I0)	255
2. Rear left vehicle level sender, Rear body acceleration sender, Electronically controlled damping control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve, Fuse holder C	256
3. Front left vehicle level sender. Front right vehicle level sender. Front left body acceleration	257

sender, Front right body acceleration sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve	
4. Switch module 1 in centre console, Electronically controlled damping control unit, Onboard supply control unit, Data bus diagnostic interface	258
033 - Reversing camera (Rear Assist) , (KA2)	259-261
1. Reversing camera (Rear Assist) , (KA2)	259
2. Rear lid handle, Fuse holder C	260
3. Rear lid handle, Data bus diagnostic interface, Control unit 1 for information electronics	261
034 - Overhead view camera , (KA6)	262-265
1. Overhead view camera , (KA6)	262
2. Data bus diagnostic interface, Control unit 1 for information electronics, Control unit for overhead view camera, Fuse holder C	263
3. Control unit for overhead view camera, Driver side exterior mirror, Passenger side exterior mirror	264
4. Rear lid handle, Control unit for overhead view camera, Front overhead view camera	265
035 - Auxiliary coolant heater , (9M9)	266-269
1. Auxiliary coolant heater , (9M9)	266
2. Auxiliary heater control unit, Data bus diagnostic interface, Fuse holder C, Fuse holder D, Metering pump	267
3. Auxiliary heater control unit	268
4. Roof aerial, Remote control receiver for auxiliary coolant heater	269
036 - Radiator fan	270-272
1. Radiator fan	270
2. Fuse holder B, Radiator fan	271
3. Engine/motor control unit, Radiator fan	272
037 - All-wheel drive , (1X1)	273-274
1. All-wheel drive , (1X1)	273
2. All-wheel drive control unit, Data bus diagnostic interface, Fuse holder C, All-wheel drive coupling pump	274
038 - Data bus network	275-293
1. Data bus network	275
2. Fuse holder B, Fuse holder C, Diagnostic connection	276
3. Data bus diagnostic interface, TV tuner	277
4. Digital sound package control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Control unit for navigation system, Connection 1 (diagnosis), in main wiring harness, Connection 2, in diagnosis wiring harness	278
5. Rear lid handle, Pressure sender for refrigerant circuit, Electronically controlled damping control unit, Auxiliary heater control unit, Parking aid control unit, All-wheel drive control unit, Data bus diagnostic interface	279
6. ABS control unit, Power steering control unit, Data bus diagnostic interface, Control unit for overhead view camera	280
7. Control unit for NOx sender, Data bus diagnostic interface, Engine/motor control unit, Control unit for structure-borne sound, Control unit for NOx sender 2	281
8. Selector lever, Automatic gearbox control unit, Airbag control unit, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Front left seat belt, Front right seat belt, Auxiliary hydraulic pump 1 for gearbox oil	282
9. Battery monitor control unit, Data bus diagnostic interface, Front left headlight, Front right headlight, DC/AC converter with socket, 12 V - 230 V	283
10. Adaptive cruise control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control	284
11. Data bus diagnostic interface, Control unit for head-up display, Rear passenger side door control unit, Emergency call module control unit and communication unit, Interface for entry and start system, Light for rear right door contour lighting	285
12. Front passenger door control unit, Data bus diagnostic interface, Light for front right door contour lighting	286
13. Sliding sunroof adjustment control unit, Data bus diagnostic interface, Driver seat adjustment control unit, Front left seat backrest fan 1, Front left seat cushion fan 1	287
14. Driver door control unit, Data bus diagnostic interface, Light for front left door contour lighting	288
15. Steering column electronics control unit, Data bus diagnostic interface, Control unit for electronic steering column lock, Rear driver side door control unit, Light for rear left door contour lighting	289
16. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Fresh air blower control unit, Trailer detector control unit, Data bus diagnostic interface, Rear lid control unit. Lane change assist control unit 2	290

17. Interior mirror, Tyre Pressure Monitoring System control unit, Lane change assist control unit, Front camera for driver assist systems	291
18. Rotary light switch, Rain and light sensor, Anti-theft alarm sensor, Wiper motor control unit, Onboard supply control unit, Dash panel insert, Front interior light	292
19. Alternator with voltage regulator, Onboard supply control unit, Front right seat backrest fan 1, Front right seat cushion fan 1	293
039 - Trailer coupling , (1M5),(1M6)	294-298
1. Trailer coupling , (1M5),(1M6)	294
2. Trailer detector control unit, Onboard supply control unit, Fuse holder C	295
3. Trailer detector control unit, Trailer towing coupling	296
4. Electric hinged tow coupling attachment button, Trailer detector control unit, Trailer socket	297
5. Trailer detector control unit, Data bus diagnostic interface, Coupling point in interior, right	298
040 - Heads-up display , (KS2)	299-301
1. Heads-up display , (KS2)	299
2. Operating unit for head-up display, Control unit for head-up display, Fuse holder C	300
3. Data bus diagnostic interface, Control unit for head-up display, Open and close display motor	301
042 - Adaptive cruise control , (6K3),(6K4),(8T7),(8T8)	302-304
1. Adaptive cruise control , (6K3),(6K4),(8T7),(8T8)	302
2. Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C	303
3. Adaptive cruise control unit	304
043 - Sliding/tilting sunroof , (3FB)	305-307
1. Sliding/tilting sunroof , (3FB)	305
2. Sunroof button, Sliding sunroof adjustment control unit, Fuse holder C, Coupling point for roof	306
3. Sliding sunroof adjustment control unit, Sliding sunroof motor	307
044 - 12 V sockets , (7B6),(9JC),(9JA)	308-309
1. 12 V sockets , (7B6),(9JC),(9JA)	308
2. Onboard supply control unit, Fuse holder C, 12 V socket, 12 V socket 2, 12 V socket 3	309
045 - DC/AC converter with socket , (9Z3),(9Z4)	310-311
1. DC/AC converter with socket , (9Z3),(9Z4)	310
2. Data bus diagnostic interface, Fuse holder C, DC/AC converter with socket, 12 V - 230 V	311
046 - Front camera for driver assist systems , (QK1)	312-313
1. Front camera for driver assist systems , (QK1)	312
2. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	313
049 - Emergency call module , (EL1),(EL2),(EL5),(NZ0),(NZ4)	314-317
1. Emergency call module , (EL1),(EL2),(EL5),(NZ0),(NZ4)	314
2. Telematics button module, Emergency call module control unit and communication unit, Loudspeaker for emergency call module, Fuse holder C	315
3. Airbag control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	316
4. Emergency call module control unit and communication unit, Roof aerial, LTE aerial 2	317
050 - Tail light cluster with LED , (8SH)	318-321
1. Tail light cluster with LED , (8SH)	318
2. Onboard supply control unit, Left tail light, Right tail light	319
3. Onboard supply control unit, Left tail light 2, Right tail light 2	320
4. Onboard supply control unit	321
051 - 2.0l diesel engine , DFGA,DFHA	322-347
1. 2.0l diesel engine , DFGA,DFHA	322
2. Starter relay 1, Starter relay 2, Fuse holder B	323
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B, Auxiliary air heater element	324
4. Automatic glow period control unit, Fuse holder B, Relay and fuse carrier 1	325
5. Automatic glow period control unit, Low heat output relay, Relay for reducing agent metering system, Fuse holder C, Relay and fuse carrier 1, Auxiliary air heating fuse	326
6. Battery, Starter, Switch module 1 in centre console, Onboard supply control unit, Fuse holder C, Jump start connection	327
7. Engine/motor control unit	328
8. Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	329
9. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Injector for reducing agent	330
10. Water separator sender, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	331
11. Oil level and oil temperature sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Auxiliary pump for heating	332
12. Alternator with voltage regulator. Exhaust gas temperature sender 2. Exhaust gas temperature	333

sender 3, Temperature sensor 2 for exhaust recirculation, Engine/motor control unit, Charge air cooling pump	
13. Engine/motor control unit, Exhaust flap control unit	334
14. Lambda probe 1 before catalytic converter, Control unit for NOx sender, Engine/motor control unit, Control unit for NOx sender 2	335
15. Brake light switch, Engine/motor control unit, Brake servo, Radiator fan	336
16. Accelerator pedal module, Air mass meter, Engine/motor control unit, Heater element for crankcase breather	337
17. Clutch position sender, Gearbox neutral position sender, ABS control unit, Data bus diagnostic interface, Engine/motor control unit	338
18. Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	339
19. Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Charge pressure control solenoid valve, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	340
20. Oil pressure switch, Oil pressure switch for reduced oil pressure, Intake air temperature sender, Coolant temperature sender, Exhaust gas temperature sender 4, Engine/motor control unit	341
21. Charge air temperature sender after charge air cooler, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	342
22. Engine speed sender, Charge pressure sender, Hall sender, Fuel pressure sender, Engine/motor control unit	343
23. Exhaust gas temperature sender 1, Pressure differential sender, Engine/motor control unit	344
24. Throttle valve module, Fuel temperature sender, Position sender for charge pressure positioner, Engine/motor control unit	345
25. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	346
26. Fuel delivery unit, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	347
052 - 2.0l diesel engine , CUAA	348-372
1. 2.0l diesel engine , CUAA	348
2. High heat output relay, Starter relay 1, Starter relay 2, Fuse holder B, Auxiliary air heater element	349
3. Terminal 30 voltage supply relay, Fuse holder B	350
4. Automatic glow period control unit, Low heat output relay, Relay and fuse carrier 1, Auxiliary air heating fuse	351
5. Starter, Switch module 1 in centre console, Onboard supply control unit, Relay for reducing agent metering system, Fuse holder C, Jump start connection	352
6. Engine/motor control unit	353
7. Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	354
8. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Injector for reducing agent	355
9. Steering column electronics control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Interface for entry and start system	356
10. Oil level and oil temperature sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Auxiliary pump for heating	357
11. Alternator with voltage regulator, Engine temperature regulation module, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit, Charge air cooling pump	358
12. Engine/motor control unit, Exhaust flap control unit	359
13. Lambda probe 1 before catalytic converter, Air mass meter, Engine/motor control unit	360
14. Control unit for NOx sender, Control unit 2 for NOx sender, Engine/motor control unit	361
15. Accelerator pedal module, Data bus diagnostic interface, Engine/motor control unit, Heater element for crankcase breather, Radiator fan	362
16. Brake light switch, Water separator sender, Engine/motor control unit, Brake servo	363
17. Engine/motor control unit, Charge pressure control solenoid valve, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	364
18. Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	365
19. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender 4, Coolant temperature sender 2, Engine/motor control unit, Turbine changeover valve	366
20. Coolant temperature sender, Charge air temperature sender before charge air cooler, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	367
21. Throttle valve module, Hall sender, Fuel pressure sender, Charge air temperature sender after charge air cooler, Engine/motor control unit	368
22. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	369
23. Charge pressure sender, Fuel temperature sender, Exhaust gas temperature sender 1, Charge pressure sender 2, Exhaust gas pressure sensor 1, Pressure differential sender, Engine/motor control unit	370
24. Engine speed sender. Regulating flap potentiometer. Engine/motor control unit. Turbocharger 1	371

	control unit	372
	25. Fuel delivery unit, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	373-394
053 -	2.0l petrol engine , DJHC	373
	1. 2.0l petrol engine , DJHC	374
	2. Starter relay 1, Starter relay 2, Fuse holder B	375
	3. Main relay, Fuse holder B	376
	4. Starter, Switch module 1 in centre console, Onboard supply control unit, Engine component current supply relay, Fuse holder C, Relay and fuse carrier 3, Jump start connection	377
	5. Engine/motor control unit, Radiator fan	378
	6. Brake light switch, Accelerator pedal module, Engine/motor control unit, Brake servo	379
	7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	380
	8. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	381
	9. Steering column electronics control unit, Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2, Interface for entry and start system	382
	10. Alternator with voltage regulator, Charge pressure sender, Engine/motor control unit, Coolant valve for gearbox	383
	11. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	384
	12. Intake manifold sender, Engine/motor control unit, Coolant shut-off valve	385
	13. Throttle valve module, Engine temperature regulation module, Engine/motor control unit	386
	14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine speed sender, Hall sender 3, Engine/motor control unit, Fuel pressure regulating valve	387
	15. Charge pressure control module, Knock sensor 1, Coolant temperature sender, Fuel pressure sender for low pressure, Engine/motor control unit, Intake manifold flap valve	388
	16. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve, Auxiliary pump for heating	389
	17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	390
	18. Engine/motor control unit, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3, Exhaust cam actuator A for cylinder 4	391
	19. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Exhaust cam actuator B for cylinder 4	392
	20. Stage 3 oil pressure switch, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	393
	21. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	394
	22. Fuel delivery unit, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	395-420
054 -	2.0l petrol engine , CZPB,DKZA	395
	1. 2.0l petrol engine , CZPB,DKZA	396
	2. Starter relay 1, Starter relay 2, Fuse holder B	397
	3. Main relay, Fuse holder B	398
	4. Battery, Starter, Switch module 1 in centre console, Onboard supply control unit, Engine component current supply relay, Fuse holder C, Relay and fuse carrier 3, Jump start connection	399
	5. Engine/motor control unit	400
	6. Accelerator pedal module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	401
	7. Lambda probe 1 before catalytic converter, Engine/motor control unit	402
	8. Lambda probe 1 after catalytic converter, Air mass meter, Engine/motor control unit	403
	9. Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	404
	10. Brake light switch, Engine/motor control unit, Brake servo, Radiator fan	405
	11. Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	406
	12. Engine/motor control unit	407
	13. Alternator with voltage regulator, Charge pressure sender, Data bus diagnostic interface, Engine/motor control unit, Coolant valve for gearbox	408
	14. Engine/motor control unit, Coolant shut-off valve	409
	15. Intake manifold sender, Engine temperature regulation module, Engine/motor control unit	410
	16. Throttle valve module, Engine speed sender, Hall sender 3, Engine/motor control unit	411
	17. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Fuel pressure regulating valve	

18. Fuel pressure sender, Fuel pressure sender for low pressure, Pressure differential sender for particulate filter, Engine/motor control unit	412
19. Charge pressure control module, Hall sender, Intake manifold flap potentiometer, Engine/motor control unit	413
20. Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	414
21. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Auxiliary pump for heating	415
22. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	416
23. Engine/motor control unit, Inlet cam actuator A for cylinder 1, Inlet cam actuator B for cylinder 1, Inlet cam actuator A for cylinder 2, Inlet cam actuator B for cylinder 2, Inlet cam actuator A for cylinder 3, Inlet cam actuator B for cylinder 3, Inlet cam actuator A for cylinder 4	417
24. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Inlet cam actuator B for cylinder 4	418
25. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	419
26. Fuel delivery unit, Fuel pump control unit, Dash panel insert	420
055 - Seat ventilation , (4D3),(L0L)	421-423
1. Seat ventilation , (4D3),(L0L)	421
2. Fuse carrier 2, Fuse holder C, Front left seat backrest fan 1, Front left seat cushion fan 1	422
3. Onboard supply control unit, Front right seat backrest fan 1, Front right seat cushion fan 1	423
056 - Actuator for structure-borne sound , (GM1)	424-425
1. Actuator for structure-borne sound , (GM1)	424
2. Data bus diagnostic interface, Control unit for structure-borne sound, Actuator for structure-borne sound, Fuse holder C	425
057 - Background lighting , (QQ9),(L0L)	426-436
1. Background lighting , (QQ9),(L0L)	426
2. Interior mirror, Fuse holder C, Front interior light, Rear interior light	427
3. Onboard supply control unit, Front left footwell light, Front right footwell light, Dash panel left vent illumination bulb, Cup holder illumination bulb, Left background lighting LED	428-429
4. Driver door control unit, Right background lighting LED	430
5. Light for front left door contour lighting	431
6. Front passenger door control unit, Light 2 for front left door background lighting, Light 2 for front right door background lighting, Light for driver side interior door handle illumination, Light for passenger side interior door handle illumination	432
7. Light for front right door contour lighting	433
8. Rear driver side door control unit, Light for rear driver side interior door handle illumination, Light for rear left door contour lighting, Light for rear door background lighting, driver side	434
9. Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Light for rear right door contour lighting, Light for rear door background lighting, passenger side	435
10. Data bus diagnostic interface	436
058 - Dual clutch gearbox 0GC , (0IJ)	437-441
1. Dual clutch gearbox 0GC , (0IJ)	437
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder D, Fuse holder C	438
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Auxiliary hydraulic pump 1 for gearbox oil	439
4. Selector lever, Onboard supply control unit, Steering column electronics control unit, Mechatronic unit for dual clutch gearbox	440
5. Selector lever, Data bus diagnostic interface, Selector lever position display	441
059 - Background lighting , (L0R),(QQ9)	442-452
1. Background lighting , (L0R),(QQ9)	442
2. Interior mirror, Fuse holder C, Front interior light, Rear interior light	443
3. Onboard supply control unit, Front left footwell light, Front right footwell light, Dash panel right vent illumination bulb, Cup holder illumination bulb, Left background lighting LED, Light 2 for front left door background lighting, Light for passenger side interior door handle illumination	444-445
4. Front passenger door control unit, Onboard supply control unit, Right background lighting LED	446
5. Light for front left door contour lighting	447
6. Driver door control unit, Light 2 for front right door background lighting, Light for driver side interior door handle illumination	448
7. Light for front right door contour lighting	449
8. Rear passenger side door control unit, Light for rear passenger side interior door handle illumination. Light for rear left door contour lighting. Light for rear door background lighting.	450

driver side	
9. Rear driver side door control unit, Light for rear driver side interior door handle illumination, Light for rear right door contour lighting, Light for rear door background lighting, passenger side	451
10. Data bus diagnostic interface	452
060 - Radio and navigation system (South Korea) , (ER7)	453-457
1. Radio and navigation system (South Korea) , (ER7)	453
2. Control unit for navigation system, Telephone microphone, Connection for external audio sources	454
3. Control unit 1 for information electronics, Control unit for navigation system, Wiring open end	455
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Control unit for navigation system, Roof aerial, Left aerial module, Rear window	456
5. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	457
061 - 1.5l petrol engine , DADA	458-476
1. 1.5l petrol engine , DADA	458
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder B	459
3. Main relay, Fuse holder B, Fuse holder D	460
4. Vacuum pump relay, Fuse holder C, Vacuum pump for brakes	461
5. Switch module 1 in centre console, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	462
6. Radiator outlet coolant temperature sender, Engine/motor control unit	463
7. Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	464
8. Brake light switch, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Brake servo, Radiator fan	465
9. Accelerator pedal module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	466
10. Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	467
11. Engine/motor control unit	468
12. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	469
13. Throttle valve module, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	470
14. Intake manifold sender, Engine speed sender, Hall sender, Hall sender 3, Engine/motor control unit, Activated charcoal filter solenoid valve 1	471
15. Engine/motor control unit, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Inlet camshaft control valve 1	472
16. Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit, Fuel metering valve, Exhaust cam actuator for cylinder 3	473
17. Engine temperature regulation module, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	474
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Charge air cooling pump	475
19. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit, Dash panel insert, Injector, cylinder 3, Injector, cylinder 4	476
062 - 2.0l diesel engine , CRGA,DBGA	477-498
1. 2.0l diesel engine , CRGA,DBGA	477
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder B	478
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B, Auxiliary air heater element	479
4. Automatic glow period control unit, Fuse holder B, Relay and fuse carrier 1	480
5. Automatic glow period control unit, Low heat output relay, Onboard supply control unit, Fuse holder C, Relay and fuse carrier 1, Auxiliary air heating fuse	481
6. Engine/motor control unit	482
7. Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	483
8. Brake light switch, Engine/motor control unit, Brake servo, Radiator fan	484
9. Lambda probe 1 before catalytic converter, Exhaust gas temperature sender 3, Temperature sensor 2 for exhaust recirculation, Engine/motor control unit	485
10. Accelerator pedal module, Air mass meter, Engine/motor control unit, Heater element for crankcase breather	486
11. Engine/motor control unit, Exhaust flap control unit	487
12. Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	488

13. Alternator with voltage regulator, Oil level and oil temperature sender, Engine/motor control unit, Charge air cooling pump, Auxiliary pump for heating	489
14. Cylinder 3 combustion chamber pressure sender, Data bus diagnostic interface, Engine/motor control unit, Glow plug 3, Glow plug 3	490
15. Engine/motor control unit, Charge pressure control solenoid valve, Glow plug 1, Glow plug 2, Glow plug 4	491
16. Throttle valve module, Exhaust gas recirculation valve 1, Engine/motor control unit	492
17. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas recirculation valve 2, Exhaust gas temperature sender 1, Fuel pressure sender, Engine/motor control unit	493
18. Engine speed sender, Charge pressure sender, Hall sender, Fuel pressure sender for low pressure, Engine/motor control unit	494
19. Intake air temperature sender, Coolant temperature sender, Charge air temperature sender after charge air cooler, Engine/motor control unit, Fuel metering valve, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	495
20. Fuel temperature sender, Pressure differential sender, Position sender for charge pressure positioner, Pressure sender 2 for exhaust gas recirculation, Engine/motor control unit, Fuel pressure regulating valve	496
21. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	497
22. Fuel delivery unit	498
063 - Dual clutch gearbox 0D9 , (0ES)	499-503
1. Dual clutch gearbox 0D9 , (0ES)	499
2. Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C, Fuse holder D	500
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	501
4. Selector lever, Onboard supply control unit, Steering column electronics control unit, Mechatronic unit for dual clutch gearbox, Selector lever position display	502
5. Selector lever, Data bus diagnostic interface	503
064 - 2.0l petrol engine , DLRB,DNUA	504-530
1. 2.0l petrol engine , DLRB,DNUA	504
2. Battery, Starter, Fuse holder B, Terminal 30 wiring junction	505
3. Fuse holder B	506
4. Fuse holder C, Relay and fuse carrier 3	507
5. Switch module 1 in centre console, Selector lever, Remote starting system relay, Onboard supply control unit	508
6. Engine/motor control unit, Radiator fan	509
7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	510
8. Brake light switch, Accelerator pedal module, Engine/motor control unit, Brake servo	511
9. Automatic gearbox control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Gearbox	512
10. Data bus diagnostic interface, Engine/motor control unit, Control unit for fuel tank leak detection	513
11. Steering column electronics control unit, Engine/motor control unit, Exhaust flap control unit	514
12. Engine/motor control unit, Exhaust flap control unit 2, Interface for entry and start system	515
13. Temperature sender before particulate filter, Temperature sender after particulate filter, Engine/motor control unit	516
14. Alternator with voltage regulator, Charge pressure sender, Oil level and oil temperature sender, Engine/motor control unit	517
15. Engine/motor control unit	518
16. Intake manifold sender, Engine temperature regulation module, Engine/motor control unit, Actuator for engine temperature regulation	519
17. Throttle valve module, Engine speed sender, Hall sender 3, Engine/motor control unit	520
18. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Fuel pressure regulating valve	521
19. Charge pressure control module, Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	522
20. Pressure differential sender for particulate filter, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Auxiliary pump for heating	523
21. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	524
22. Engine/motor control unit, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3, Exhaust cam actuator A for	525

cylinder 4	
23. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Exhaust cam actuator B for cylinder 4	526
24. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	527
25. Fuel delivery unit, Fuel pump control unit	528
26. Fuel delivery unit, Fuel gauge sender 2, Dash panel insert	529
27. Fuel delivery unit	530
065 - 8-speed automatic gearbox 09P , (0EW)	531-537
1. 8-speed automatic gearbox 09P , (0EW)	531
2. Gearbox oil temperature sender, Automatic gearbox control unit, Gearbox, Solenoid valve 1, Solenoid valve 2, Fuse holder B, Fuse holder C	532
3. Automatic gearbox control unit, Gearbox, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 6, Automatic gearbox pressure regulating valve 8	533
4. Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Gearbox	534
5. Automatic gearbox control unit, Engine/motor control unit, Gearbox	535
6. Selector lever, Selector lever locked in position P switch, Automatic gearbox control unit, Remote starting system relay, Data bus diagnostic interface, Selector lever sensors control unit	536
7. Selector lever, Steering column electronics control unit, Selector lever lock solenoid	537
066 - Airbag systems , (4UT)	538-551
1. Airbag systems , (4UT)	538
2. Centre switch module in dash panel, Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Battery isolation igniter, Fuse holder G	539
3. Driver side belt force limiter, Front passenger side belt force limiter, Airbag control unit, Front left seat belt, Front right seat belt, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	540
4. Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter, Front passenger side knee airbag igniter	541
5. Front pressure hose sensor for pedestrian protection, Driver side crash sensor 2 for pedestrian protection, Front passenger side crash sensor 2 for pedestrian protection, Airbag control unit	542
6. Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit	543
7. Driver side crash sensor for pedestrian protection, Front passenger side crash sensor for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit, Side airbag igniter on driver side	544
8. Driver side belt switch, Driver side seat position sensor, Airbag control unit, Side airbag igniter on front passenger side	545
9. Front passenger side belt switch, Operating unit for front right seat adjustment, Front passenger side seat position sensor, Airbag control unit, Seat occupied recognition control unit, Heating element with seat occupied recognition, front passenger side	546
10. Side airbag crash sensor on driver side, Pressure sensor for seat occupied recognition, Airbag control unit, Seat occupied recognition control unit, Heating element with seat occupied recognition, front passenger side	547
11. Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit	548
12. Airbag control unit, Front passenger airbag unit, Airbag igniter 1 on front passenger side, Airbag igniter 2 on front passenger side, Diagnostic connection	549
13. Airbag coil connector and return ring with slip ring, Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Airbag igniter on driver side	550
14. Onboard supply control unit, Data bus diagnostic interface, Dash panel insert, Airbag warning lamp	551
067 - Background lighting , (QQ8)	552-559
1. Background lighting , (QQ8)	552
2. Interior mirror, Front interior light, Rear interior light, Automatic anti-dazzle interior mirror	553
3. Onboard supply control unit, Front left footwell light, Front right footwell light	554
4. Driver door control unit, Light 2 for front left door background lighting, Light for driver side interior door handle illumination, Driver side door warning lamp, Light for driver door background lighting	555
5. Rear driver side door control unit, Rear left door background lighting bulb, Light for rear driver side interior door handle illumination, Light for rear door background lighting, driver side	556
6. Front passenger door control unit, Light 2 for front right door background lighting, Light for passenger side interior door handle illumination. Front passenger side door warning lamp. Light for	557

passenger door background lighting	
7. Rear passenger side door control unit, Rear right door background lighting bulb, Light for rear passenger side interior door handle illumination, Light for rear door background lighting, passenger side	558
8. Data bus diagnostic interface	559
068 - Adjustable driver and front passenger seats , (3L5)	560-562
1. Adjustable driver and front passenger seats , (3L5)	560
2. Operating unit for front left seat adjustment, Fuse holder C, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	561
3. Operating unit for front right seat adjustment, Airbag control unit, Fuse carrier 2, Front passenger seat adjustment thermal fuse 1, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	562
069 - Electrically adjustable lumbar support on seat without electric adjustment , (7P1)	563-566
1. Electrically adjustable lumbar support on seat without electric adjustment , (7P1)	563
2. Operating unit for front left seat adjustment, Driver seat lumbar support adjustment switch, Fuse holder C, Lumbar support for driver seat	564
3. Operating unit for front right seat adjustment, Driver seat lumbar support adjustment switch, Airbag control unit, Fuse carrier 2, Front passenger seat adjustment thermal fuse 1, Front passenger seat backrest adjustment motor	565
4. Front passenger seat lumbar support adjustment switch, Lumbar support for front passenger seat	566
070 - Tail light clusters with LEDs , (8SL)	567-569
1. Tail light clusters with LEDs , (8SL)	567
2. Onboard supply control unit, Left tail light cluster, Right tail light cluster, Rear left side marker bulb, Rear right side marker bulb, Left tail light bulb 2, Right tail light bulb 2, Left brake, turn signal and tail light bulb, Right brake, turn signal and tail light bulb	568
3. Onboard supply control unit, Left tail light cluster 2, Right tail light cluster 2, Left reversing light bulb, Right reversing light bulb, High-level brake light bulb, Right tail light bulb 3, Left tail light bulb 3	569
071 - Anti-theft alarm system , (7AG),(7AL)	570-572
1. Anti-theft alarm system , (7AG),(7AL)	570
2. Anti-theft alarm system horn, Alarm horn, Onboard supply control unit, Fuse holder B, Fuse holder C	571
3. Anti-theft alarm sensor	572
072 - Air conditioning/heater remote start function , (7U1),(7U2)	573-575
1. Air conditioning/heater remote start function , (7U1),(7U2)	573
2. Starter relay 1, Starter relay 2, Fuse holder B, Fuse holder C, Fuse carrier 1, Remote starting system fuse 1	574
3. Selector lever, Remote starting system relay, Onboard supply control unit, Data bus diagnostic interface	575
073 - Basic equipment	576-592
1. Basic equipment	576
2. Horn relay, Fuse holder B, Fuse holder C	577
3. Heated rear window relay, Onboard supply control unit, Fuse holder C	578
4. Brake fluid level warning contact, Bonnet contact switch, Bonnet contact switch 2, Front right brake pad wear sender, Left horn, Right horn, Onboard supply control unit	579
5. Onboard supply control unit, Front left headlight, Front left side marker bulb, Front right side marker bulb	580
6. Onboard supply control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control, Front right headlight	581
7. Rotary light switch, Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit, Control unit for cornering light and headlight range control	582
8. Centre switch module in dash panel, Reversing light switch, Onboard supply control unit, Front interior light	583
9. Onboard supply control unit, Rear interior light, Luggage compartment light, Luggage compartment light 2	584
10. Glove compartment light switch, Onboard supply control unit, Dash panel left vent illumination bulb, Dash panel right vent illumination bulb, Glove compartment light	585
11. Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Airbag igniter on driver side, Analogue clock	586
12. Horn plate, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Ignition key withdrawal lock solenoid	587
13. Interior mirror, Onboard supply control unit, Left tail light cluster, Right tail light cluster	588
14. Onboard supply control unit, Left tail light cluster 2, Right tail light cluster 2	589
15. Rear lid handle, Onboard supply control unit, High-level brake light bulb, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear lid lock unit. Rear window	590

16. Tank flap release, Onboard supply control unit, Left number plate light, Right number plate light	591
17. Immobiliser reader coil, Dash panel insert	592
074 - Data bus network	593-612
1. Data bus network	593
2. Fuse holder B, Fuse holder C, Diagnostic connection	594
3. Battery monitor control unit, Data bus diagnostic interface, TV tuner, DC/AC converter with socket, 12 V - 230 V	595
4. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics	596
5. Rear lid handle, Pressure sender for refrigerant circuit, Electronically controlled damping control unit, Auxiliary heater control unit, Parking aid control unit, All-wheel drive control unit, Data bus diagnostic interface	597
6. ABS control unit, Power steering control unit, Data bus diagnostic interface, Control unit for overhead view camera, Brake servo	598
7. Control unit for NOx sender, Control unit 2 for NOx sender, Particulate sensor, NOx sender 3, Data bus diagnostic interface, Engine/motor control unit	599
8. Selector lever, Automatic gearbox control unit, Airbag control unit, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Control unit for structure-borne sound, Auxiliary hydraulic pump 1 for gearbox oil	600
9. Data bus diagnostic interface, Front left headlight, Front right headlight, Front left seat belt, Front right seat belt	601
10. Adaptive cruise control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control	602
11. Data bus diagnostic interface, Control unit for head-up display, Rear passenger side door control unit, Emergency call module control unit and communication unit, Interface for entry and start system, Light for rear right door contour lighting	603
12. Front passenger door control unit, Data bus diagnostic interface, Light for front right door contour lighting	604
13. Sliding sunroof adjustment control unit, Data bus diagnostic interface, Driver seat adjustment control unit, Front left seat backrest fan 1, Front left seat cushion fan 1	605
14. Driver door control unit, Data bus diagnostic interface, Light for front left door contour lighting	606
15. Heater and air conditioning controls, Trailer detector control unit, Data bus diagnostic interface, Rear lid control unit, Control unit for electronic steering column lock, Rear driver side door control unit, Light for rear left door contour lighting	607
16. Operating and display unit for rear air conditioning system, Fresh air blower control unit, Tyre Pressure Monitoring System control unit, Steering column electronics control unit, Data bus diagnostic interface	608
17. Lane change assist control unit, Lane change assist control unit 2	609
18. Interior mirror, Display unit for front information display and operating unit control unit, Control unit for navigation system, Front camera for driver assist systems, Connection 1 (diagnosis), in main wiring harness, Connection 2, in diagnosis wiring harness	610
19. Rotary light switch, Rain and light sensor, Anti-theft alarm sensor, Wiper motor control unit, Onboard supply control unit, Dash panel insert, Front interior light	611
20. Alternator with voltage regulator, Onboard supply control unit, Front right seat backrest fan 1, Front right seat cushion fan 1	612
075 - Steering column electronics for heated steering wheel , (2ZD),(2ZW)	613-615
1. Steering column electronics for heated steering wheel , (2ZD),(2ZW)	613
2. Airbag control unit, Steering column electronics control unit, Engine/motor control unit, Fuse holder C	614
3. Switch module 2 in centre console, Steering wheel heater button, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Heated steering wheel	615
076 - Mobile telephone systems , (9IP)	616-618
1. Mobile telephone systems , (9IP)	616
2. Control unit 1 for information electronics, Two-way signal amplifier for mobile telephone/data services, Roof aerial, Storage compartment with interface for mobile telephone, Fuse holder C	617
3. Onboard supply control unit, Interface for entry and start system, Two-way signal amplifier for mobile telephone/data services, Storage compartment with interface for mobile telephone	618
077 - Lane change assist , (7Y1),(7Y5)	619-622
1. Lane change assist , (7Y1),(7Y5)	619
2. Data bus diagnostic interface, Lane change assist control unit, Fuse holder C	620
3. Lane change assist control unit 2, Driver side exterior mirror	621
4. Passenger side exterior mirror	622
078 - Radio navigation system	623-639
1. Radio navigation system	623

2. Control unit 1 for information electronics, Fuse holder C, Fuse carrier 1	624
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Connection for external audio sources, Wiring screen	625
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	626
5. Onboard supply control unit, Control unit 1 for information electronics, USB charging socket 1	627
6. Control unit 1 for information electronics, USB hub, USB connection 2	628
7. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	629
8. Control unit 1 for information electronics, USB hub, USB connection 1	630
9. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	631
10. Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	632
11. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker	633
12. Data bus diagnostic interface, Control unit 1 for information electronics, Rear right treble loudspeaker, Rear right bass loudspeaker	634
13. Toll collection sender, Chip card reader control unit, Control unit 1 for information electronics, Two-way signal amplifier for mobile telephone/data services, Traffic data aerial, Storage compartment with interface for mobile telephone	635
14. Control unit 1 for information electronics, Dash panel insert, TV tuner, Aerial amplifier 2 for TV, Aerial amplifier 3 for TV, Right aerial module	636
15. Control unit 1 for information electronics, Roof aerial, Telephone microphone, Left aerial module, LTE aerial 1	637
16. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	638
17. Control unit 1 for information electronics, Left aerial module	639
079 - Sound system DYNAUDIO , (9VC)	640-646
1. Sound system DYNAUDIO , (9VC)	640
2. Digital sound package control unit, Subwoofer, Fuse holder C	641
3. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Centre loudspeaker	642
4. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker	643
5. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker	644
6. Digital sound package control unit, Front right treble loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker	645
7. Digital sound package control unit, Rear right treble loudspeaker, Rear right bass loudspeaker	646
080 - Emergency call module , (EL2),(EL5),(NZ0),(NZ3),(NZ4)	647-651
1. Emergency call module , (EL2),(EL5),(NZ0),(NZ3),(NZ4)	647
2. Emergency call module control unit and communication unit, Loudspeaker for emergency call module, Fuse holder C	648
3. Telematics button module, Airbag control unit, Onboard supply control unit, Emergency call module control unit and communication unit	649
4. Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit	650
5. Emergency call module control unit and communication unit, Aerial, Telephone microphone, Emergency call module aerial	651
081 - Electromechanical brake servo , (1AQ)	652-654
1. Electromechanical brake servo , (1AQ)	652
2. Onboard supply control unit, Brake servo, Fuse holder B	653
3. Data bus diagnostic interface, Engine/motor control unit, Brake servo	654
082 - 2.0l diesel engine , DSRA,DSRB	655-682
1. 2.0l diesel engine , DSRA,DSRB	655
2. High heat output relay, Starter relay 1, Starter relay 2, Fuse holder B	656
3. Terminal 30 voltage supply relay, Fuse holder B	657
4. Automatic glow period control unit, Low heat output relay, Relay and fuse carrier 1	658
5. Fuse holder C	659
6. Engine/motor control unit, Radiator fan	660
7. Clutch position sender, Engine/motor control unit, Brake servo	661
8. Control unit for NOx sender, Control unit 2 for NOx sender, Particulate sensor, Engine/motor control unit, Control unit for NOx sender 2	662
9. Lambda probe 1 before catalytic converter, NOx sender 3, Engine/motor control unit	663
10. Air mass measurement module, Oil level and oil temperature sender, Engine/motor control unit, Injector for reducing agent, Injector 2 for reducing agent	664
11. Accelerator pedal module, Exhaust gas temperature sender 4, Engine/motor control unit, Heater element for crankcase breather	665

12. Water separator sender, Gearbox neutral position sender, Engine/motor control unit	666
13. Engine/motor control unit, Exhaust flap control unit, Valve for oil pressure control, Charge air cooling pump	667
14. Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	668
15. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater	669
16. Onboard supply control unit, Engine/motor control unit, Interface for entry and start system	670
17. Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	671
18. Engine/motor control unit, Fuel pressure regulating valve, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	672
19. Engine/motor control unit, Coolant valve for cylinder head, Actuator for engine temperature regulation, Piston cooling jet control valve	673
20. Engine speed sender, Fuel pressure sender, Inlet camshaft position sender, Engine/motor control unit	674
21. Oil pressure sender, Charge pressure sender, Pressure differential sender for particulate filter, Engine/motor control unit	675
22. Temperature sensor, Engine temperature sender, Intake air temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine temperature sender 2, Engine/motor control unit	676
23. Fuel pressure sender for low pressure, Temperature sensor 2 for exhaust recirculation, Charge air temperature sender after charge air cooler, Engine/motor control unit	677
24. Throttle valve module, Exhaust gas recirculation valve 1, Engine/motor control unit	678
25. Exhaust gas recirculation valve 2, Engine/motor control unit, Turbocharger 1	679
26. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4	680
27. Fuel pump control unit, Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3	681
28. Fuel delivery unit, Fuel pump control unit, Dash panel insert	682
801 - - Fitting locations: Earth points - 3	683-699
1. Earth points	683-699
1.1 Earth points in front part of vehicle	683-691
1.1.1 Front from left	684-685
1.1.2 Front from right	686
1.1.3 1.5l petrol engine, DADA	687
1.1.4 2.0l petrol engine, CZPB, DJHC, DKZA, DLRB, DNUA	688
1.1.5 Dual clutch gearbox, 0GC, 0D9, 0DL	689
1.1.6 Manual gearbox	690
1.1.7 Automatic gearbox, 09P	691
1.2 Earth points in middle part of vehicle	692-696
1.2.1 Front left of interior	692-693
1.2.2 Front right of interior	694
1.2.3 Front middle of interior	695
1.2.4 Roof	696
1.2.5 Front passenger seat	697
1.3 Earth points in rear part of vehicle	697-699
1.3.1 On left in luggage compartment	698
1.3.2 On right in luggage compartment, rear lid	699
802 - -Fitting locations: Fuses - 3	700-779
1. Fuses	700-779
1.1 Multifuse fuse strip on fuse holder B -SB-, from March 2017	701-703
1.1.1 Fitting location of multifuse fuse strip on fuse holder B -SB-, from March 2017	701-702
1.1.2 Fuse assignment for multifuse fuse strip on fuse holder B -SB-, battery at front, from March 2017	703
1.1.3 Fuse assignment for multifuse fuse strip on fuse holder B -SB-, battery at rear, from March 2017	704
1.2 Fuse holder B -SB-, from March 2017	704-707
1.2.1 Fitting location of fuse holder B -SB-, from March 2017	704-705
1.2.2 Fuse assignment for fuse holder B -SB-, from March 2017	706-707
1.3 Fuse holder B -SB-, from November 2017	708-712
1.3.1 Fitting location of fuse holder B -SB-, from November 2017	709
1.3.2 Fuse assignment for fuse holder B -SB-, from November 2017	710-712
1.4 Fuse holder B -SB-, from July 2018	713-717
1.4.1 Fitting location of fuse holder B -SB-, from July 2018	713-714
1.4.2 Fuse assignment for fuse holder B -SB-, from July 2018	715-717
1.5 Fuse holder B -SB-, from November 2019	718-721
1.5.1 Fitting location of fuse holder B -SB-. from November 2019	718

1.5.2 Fuse assignment for fuse holder B -SB-, from November 2019	719-721
1.6 Fuse holder C -SC-, from March 2017	722-729
1.6.1 Fitting location of fuse holder C -SC- LHD models, from March 2017	722-723
1.6.2 Fitting location of fuse holder C -SC- RHD models, from March 2017	724-725
1.6.3 Fuse assignment for fuse holder C -SC-, from March 2017	726-729
1.7 Fuse holder C -SC-, from November 2017	730-737
1.7.1 Fitting location of fuse holder C -SC-, left-hand drive models, from November 2017	730-731
1.7.2 Fitting location of fuse holder C -SC-, right-hand drive models, from November 2017	732-733
1.7.3 Fuse assignment for fuse holder C -SC-, from November 2017	734-737
1.8 Fuse holder C -SC-, from July 2018	738-745
1.8.1 Fitting location of fuse holder C -SC- left-hand drive models, from July 2018	738-739
1.8.2 Fitting location of fuse holder C -SC- right-hand drive models, from July 2018	740-741
1.8.3 Fuse assignment for fuse holder C -SC-, from July 2018	742-745
1.9 Fuse holder C -SC-, from November 2018	746-753
1.9.1 Fitting location of fuse holder C -SC-, left-hand drive models, from November 2018	746-747
1.9.2 Fitting location of fuse holder C -SC-, right-hand drive models, from November 2018	748-749
1.9.3 Fuse assignment for fuse holder C -SC-, from November 2018	750-753
1.10 Fuse holder C -SC-, from July 2019	754-761
1.10.1 Fitting location of fuse holder C -SC- left-hand drive models, from July 2019	754-755
1.10.2 Fitting location of fuse holder C -SC- right-hand drive models, from July 2019	756-757
1.10.3 Fuse assignment for fuse holder C -SC-, from July 2019	758-761
1.11 Fuse holder D -SD-, from March 2017	762-763
1.11.1 Fitting location of fuse holder D -SD-, from March 2017	762-763
1.11.2 Fuse assignment for fuse holder D -SD-, from March 2017	764
1.12 Fuse holder D -SD-, from July 2018	764-765
1.12.1 Fitting location of fuse holder D -SD-, from July 2018	764-765
1.12.2 Fuse assignment for fuse holder D -SD-, from July 2018	766
1.13 Fuse holder G -SG-, from March 2017	766-768
1.13.1 Fitting location of fuse holder G -SG-, from March 2017	767
1.13.2 Fuse assignment for fuse holder G -SG-	768
1.14 Relay and fuse carrier 1 -SR1-, from March 2017	769-770
1.14.1 Fitting location of relay and fuse carrier 1 -SR1-, from March 2017	769
1.14.2 Fuse assignment for relay and fuse carrier 1 -SR1-, from March 2017	770
1.15 Individual fuses, from March 2017	771-774
1.15.1 Fitting location of individual fuses, LHD models, from March 2017	771-772
1.15.2 Fitting location of individual fuses, RHD models, from March 2017	773
1.15.3 Fuse assignment for individual fuses, LHD models, from March 2017	774
1.15.4 Fuse assignment for individual fuses, RHD models, from March 2017	774
1.16 Individual fuses, from November 2018	775-779
1.16.1 Fitting location of individual fuses, LHD models, from November 2018	775-776
1.16.2 Fitting location of individual fuses, RHD models, from November 2018	777
1.16.3 Fuse assignment of individual fuses, LHD models, from November 2018	778
1.16.4 Fuse assignment of individual fuses, RHD models, from November 2018	778-779
803 - - Fitting locations: Relays - 3	780-793
1. Relays	780-793
1.1 Relays on fuse holder B -SB-, from March 2017	781
1.1.1 Relays on fuse holder B -SB-, from March 2017	781
1.2 Relays on fuse holder C -SC-, from March 2017	782-783
1.2.1 Relays on fuse holder C -SC-, LHD models, from March 2017	783
1.2.2 Relays on fuse holder C -SC-, RHD models, from March 2017	784
1.3 Relays on fuse holder C -SC-, from July 2018	784-785
1.3.1 Relays on fuse holder C -SC-, LHD models, from July 2018	785
1.3.2 Relays on fuse holder C -SC-, RHD models, from July 2018	786
1.4 Relays on fuse holder C -SC-, from July 2019	786-788
1.4.1 Relays on fuse holder C -SC-, LHD models, from July 2019	787
1.4.2 Relays on fuse holder C -SC-, RHD models, from July 2019	788
1.5 Relay and fuse carrier 1 -SR1-, from March 2017	789
1.5.1 Relay and fuse carrier 1 -SR1-, from March 2017	789
1.6 Relay and fuse carrier 3 -SR3-, from March 2017	790-791
1.6.1 Relay and fuse carrier 3 -SR3-, variant 1, from March 2017	791
1.6.2 Relay and fuse carrier 3 -SR3-, variant 2, from March 2017	792
1.7 Remote starting system relay -J471-, from November 2017	792-793
1.7.1 Remote starting system relay -J471-, from November 2017	793
804 - - Fitting locations: front part of vehicle - 3	794-849
1. Fitting location: front part of vehicle	794-849
1.1 Front. view from front	811

1.2 Front, view from left	812-814
1.2.1 Front, view from left, part 1	813
1.2.2 Front, view from left, part 2	814
1.3 Front, view from right	815-818
1.3.1 Front, view from right, part 1	816-817
1.3.2 Front, view from right, part 2	818
1.4 1.5l petrol engine, DADA	819-822
1.4.1 1.5l petrol engine, DADA, from front	820
1.4.2 1.5l petrol engine, DADA, from above	821
1.4.3 1.5l petrol engine, DADA, from right	822
1.4.4 1.5l petrol engine, DADA, from rear	823
1.5 2.0l petrol engine, CZPB, DJHC, DKZA, DLRB, DNUA	823-830
1.5.1 2.0l petrol engine, CZPB, DJHC, DKZA, DLRB, DNUA, from front	824-825
1.5.2 2.0l petrol engine, CZPB, DKZA, from above	826
1.5.3 2.0l petrol engine, DJHC, DLRB, DNUA, from above	827
1.5.4 2.0l petrol engine, CZPB, DKZA, from left	828
1.5.5 2.0l petrol engine, DJHC, DLRB, DNUA, from left	829
1.5.6 2.0l petrol engine, CZPB, DJHC, DKZA, DLRB, DNUA, from right	830
1.5.7 2.0l petrol engine, CZPB, DJHC, DKZA, DLRB, DNUA, from rear	831
1.6 2.0l diesel engine, CRGA, DBGA, DFGA, DFHA	831-835
1.6.1 2.0l diesel engine, CRGA, DBGA, DFGA, DFHA, from front	832
1.6.2 2.0l diesel engine, CRGA, DBGA, DFGA, DFHA, from above	833
1.6.3 2.0l diesel engine, CRGA, DBGA, DFGA, DFHA, from left	834
1.6.4 2.0l diesel engine, CRGA, DBGA, DFGA, DFHA, from rear	835
1.7 2.0l diesel engine, DSRA, DSRB	836-838
1.7.1 2.0l diesel engine, DSRA, DSRB, from front	836-837
1.7.2 2.0l diesel engine, DSRA, DSRB, from above	838
1.7.3 2.0l diesel engine, DSRA, DSRB, from rear	839
1.8 2.0l bi-turbo diesel engine, CUAA	839-842
1.8.1 2.0l bi-turbo diesel engine, CUAA, from front	840
1.8.2 2.0l bi-turbo diesel engine, CUAA, from above	841
1.8.3 2.0l bi-turbo diesel engine, CUAA, from left	842
1.8.4 2.0l bi-turbo diesel engine, CUAA, from rear	843
1.9 Dual clutch gearbox	843-845
1.9.1 Dual clutch gearbox, 0GC	844
1.9.2 Dual clutch gearbox, 0DL	845
1.9.3 Dual clutch gearbox, 0D9	846
1.10 Manual gearbox	846-848
1.10.1 Manual gearbox, 02S	847
1.10.2 Manual gearbox, 0FB	848
1.11 Automatic gearbox, 09P	849
805 - - Fitting locations: middle part of vehicle - 3	850-916
1. Fitting locations: middle part of vehicle	850-916
1.1 At front of interior	867-890
1.1.1 Front left of interior, LHD models	867-869
1.1.2 Front left of interior, RHD models	870-872
1.1.3 Left footwell, LHD models	873-874
1.1.4 Right footwell, RHD models	875-876
1.1.5 Front right of interior, LHD models	877-878
1.1.6 Front right of interior, RHD models	879
1.1.7 Dash panel, LHD models	880-881
1.1.8 Dash panel, RHD models	882
1.1.9 Steering wheel	883
1.1.10 Steering column	884
1.1.11 Front centre console, LHD models	885
1.1.12 Front centre console, RHD models	886
1.1.13 Left front seat	887-888
1.1.14 Right front seat	889-890
1.2 Rear interior	891-892
1.2.1 Rear interior, view from left	891
1.2.2 Rear interior, view from right	892
1.2.3 Rear centre console	893
1.3 Roof	893-897
1.3.1 Roof, part 1	894-895
1.3.2 Roof, part 2, with no sliding/tilting sunroof, 3FA	896
1.3.3 Roof part 2. with slidina/tiltina sunroof. 3FB	897

1.4 Doors	898-909
1.4.1 Driver door, left-hand drive models	898-900
1.4.2 Driver door, right-hand drive models	901-902
1.4.3 Front passenger door, left-hand drive models	903-904
1.4.4 Front passenger door, right-hand drive models	905-906
1.4.5 Rear left door	907-908
1.4.6 Rear right door	909
1.5 Heater and air conditioning unit	910-914
1.5.1 Air conditioning system, KH6, part 1	911
1.5.2 Air conditioning system, KH6, part 2	912
1.5.3 Climatronic, KH0, KH7, part 1	913
1.5.4 Climatronic, KH0, KH7, part 2	914
1.6 Connector assignments	915-916
1.6.1 Onboard supply control unit -J519-	915-916
806 - - Fitting locations: rear part of vehicle - 3	917-923
1. Fitting locations: rear part of vehicle	917-923
1.1 Rear lid	919-920
1.2 Rear bumper	921
1.3 Rear side, view from left	922
1.4 Rear side, view from right	923
807 - -Fitting locations: vehicle underbody - 3	924-930
1. Fitting locations: vehicle underbody	924-930
1.1 Underbody	925-926
1.2 Underbody, for models with diesel engine, CRGA, CUA, CZPB, DADA, DBGA, DFGA, DFHA, DJHC, 927	927
March 2017	
1.3 Underbody, for models with diesel engine, CRGA, CUA, CZPB, DADA, DBGA, DFGA, DFHA, DJHC, 928	928
July 2018	
1.4 Underbody, for models with diesel engine, DSRA, DSRB, from November 2019	929-930
830 - -Connector views: parts with prefix A to D - 3	931-933
1. Connector views: parts with prefix A to D	931-933
1.1 Starter -B-	931
1.2 Alternator -C-	931
1.3 Alternator with voltage regulator -CX1-	932
1.4 Immobiliser reader coil -D2-	932-933
831 - -Connector views: parts with prefix E - 3	934-960
1. Connector views: parts with prefix E	934-960
1.1 Driver side belt switch -E24-	935
1.2 Front passenger side belt switch -E25-	935
1.3 Glove compartment light switch -E26-	936
1.4 Driver seat lumbar support adjustment switch -E176-	936
1.5 Front passenger seat lumbar support adjustment switch -E177-	937
1.6 Key operated switch to deactivate airbag on front passenger side -E224-	938
1.7 Rear lid remote release button -E233-	938
1.8 Operating and display unit for rear air conditioning system -E265-	939
1.9 Driver side interior locking button for central locking system -E308-	940
1.10 Selector lever -E313-	941
1.11 Starter button -E378-	941
1.12 Button to close rear lid in luggage compartment -E406-	942
1.13 Electric hinged tow coupling attachment button -E474-	942
1.14 Electromechanical parking brake button -E538-	943
1.15 Button for deactivating interior monitoring and vehicle inclination sensor -E616-	943
1.16 Driver seat massage function button -E670-	944
1.17 Rear driver side window regulator button -E711-	944
1.18 Rear passenger side window regulator button -E713-	945
1.19 Front passenger side window regulator button -E716-	945
1.20 Telematics button module -E734-	946
1.21 Operating unit for head-up display -E837-	946-947
1.22 Rotary light switch -EX1-	948
1.23 Interior mirror -EX5-	948
1.24 Exterior mirror adjuster -EX11-	948
1.25 Tank flap release -EX13-	949
1.26 Heater and air conditioning controls -EX21-	949-950
1.27 Centre switch module in dash panel -EX22-	951
1.28 Switch module 1 in centre console -EX23-	951
1.29 Switch module 2 in centre console -EX30-	952
1.30 Operating unit for front left seat adjustment -EX33-	952-953

1.31 Operating unit for front right seat adjustment -EX34-	954-955
1.32 Operating unit for window regulator in driver door -EX36-	956
1.33 Rear lid handle -EX37-	957-958
1.34 Operating unit 2 for front left seat adjustment -EX38-	959
1.35 Operating unit 2 for front right seat adjustment -EX39-	960
832 - -Connector views: parts with prefix F - 3	961-969
1. Connector views: parts with prefix F	961-969
1.1 Brake light switch -F-	961
1.2 Oil pressure switch -F1-	962
1.3 Reversing light switch -F4-	962
1.4 Brake fluid level warning contact -F34-	963
1.5 Driver vanity mirror contact switch -F147-	963
1.6 Front passenger vanity mirror contact switch -F148-	964
1.7 Bonnet contact switch -F266-	964
1.8 Bonnet contact switch 2 -F329-	965
1.9 Oil pressure switch for reduced oil pressure -F378-	965
1.10 Belt switch for seat row 2, driver side -F390-	966
1.11 Belt switch for seat row 2, passenger side -F392-	967
1.12 Stage 3 oil pressure switch -F447-	967
1.13 Twin belt buckle -FX4-	968-969
833 - -Connector views: parts with prefix G - 3	970-1048
1. Connector views: parts with prefix G	970-1048
1.1 Oil pressure sender -G10-	974
1.2 Ambient temperature sensor -G17-	974
1.3 Temperature sensor -G18-	975
1.4 Engine temperature sender -G27-	975
1.5 Engine speed sender -G28-	976
1.6 Charge pressure sender -G31-	977-978
1.7 Coolant shortage indicator sender -G32-	979
1.8 Windscreen washer fluid level sender -G33-	980
1.9 Front right brake pad wear sender -G35-	980
1.10 Hall sender -G40-	981
1.11 Intake air temperature sender -G42-	981
1.12 Rear right speed sensor -G44-	982
1.13 Front right speed sensor -G45-	982
1.14 Rear left speed sensor -G46-	983
1.15 Front left speed sensor -G47-	983
1.16 Knock sensor 1 -G61-	984
1.17 Coolant temperature sender -G62-	985
1.18 Water separator sender -G63-	986
1.19 Air mass meter -G70-	987
1.20 Rear left vehicle level sender -G76-	987
1.21 Front left vehicle level sender -G78-	988
1.22 Fuel temperature sender -G81-	988
1.23 Engine outlet coolant temperature sender -G82-	989
1.24 Radiator outlet coolant temperature sender -G83-	989
1.25 Sunlight penetration photosensor -G107-	990
1.26 Seat occupied sensor, front passenger side -G128-	991
1.27 Left vent temperature sender -G150-	991
1.28 Right vent temperature sender -G151-	992
1.29 Fuel gauge sender 2 -G169-	992
1.30 Rear vent temperature sender -G174-	993
1.31 Side airbag crash sensor on driver side -G179-	993
1.32 Side airbag crash sensor on front passenger side -G180-	994
1.33 Crash sensor for front airbag -G190-	994
1.34 Footwell vent temperature sender -G192-	995
1.35 Rear left parking aid sender -G203-	995
1.36 Rear centre left parking aid sender -G204-	996
1.37 Rear centre right parking aid sender -G205-	996
1.38 Rear right parking aid sender -G206-	997
1.39 Exhaust gas temperature sender 1 -G235-	997-998
1.40 Fuel pressure sender -G247-	999
1.41 Front right parking aid sender -G252-	1000
1.42 Front centre right parking aid sender -G253-	1000
1.43 Front centre left parking aid sender -G254-	1001
1.44 Front left parking aid sender -G255-	1001

1.45 Rear side airbag crash sensor on driver side -G256-	1002
1.46 Rear side airbag crash sensor on passenger side -G257-	1002
1.47 Oil level and oil temperature sender -G266-	1003
1.48 Front right vehicle level sender -G289-	1004
1.49 Hall sender 3 -G300-	1004
1.50 Evaporator temperature sensor -G308-	1005
1.51 Intake manifold flap potentiometer -G336-	1005
1.52 Front left body acceleration sender -G341-	1006
1.53 Front right body acceleration sender -G342-	1006
1.54 Rear body acceleration sender -G343-	1007
1.55 Rain and light sensor -G397-	1007
1.56 Fuel pressure sender for low pressure -G410-	1008
1.57 Charge pressure sender 2 -G447-	1009
1.58 Exhaust gas temperature sender 2 -G448-	1010
1.59 Exhaust gas pressure sensor 1 -G450-	1011
1.60 Toll collection sender -G459-	1012
1.61 Clutch position sender -G476-	1012
1.62 Exhaust gas temperature sender 3 -G495-	1013
1.63 Pressure differential sender -G505-	1013-1014
1.64 Temperature sender before particulate filter -G506-	1015
1.65 Temperature sender after particulate filter -G527-	1015
1.66 Front left sender for park assist steering on left side of vehicle -G568-	1016
1.67 Front right sender for park assist steering on right side of vehicle -G569-	1016
1.68 Driver side crash sensor for pedestrian protection -G570-	1017
1.69 Front passenger side crash sensor for pedestrian protection -G571-	1017
1.70 Anti-theft alarm sensor -G578-	1018
1.71 Front pressure hose sensor for pedestrian protection -G579-	1018
1.72 Position sender for charge pressure positioner -G581-	1019
1.73 Regulating flap potentiometer -G584-	1020
1.74 Trigger 1 for pedestrian protection -G598-	1020
1.75 Trigger 2 for pedestrian protection -G599-	1021
1.76 Vacuum sender -G608-	1021
1.77 Exhaust gas temperature sender 4 -G648-	1022
1.78 Engine temperature sender 2 -G652-	1022
1.79 Temperature sensor 2 for exhaust recirculation -G690-	1023
1.80 Pressure sender 2 for exhaust gas recirculation -G692-	1024
1.81 Centre crash sensor for pedestrian protection -G693-	1024
1.82 Gearbox neutral position sender -G701-	1025
1.83 Rear left park assist steering sender -G716-	1025
1.84 Rear right park assist steering sender -G717-	1026
1.85 Particulate sensor -G784-	1026
1.86 Coolant temperature sender 2 -G802-	1027
1.87 Pressure sender for refrigerant circuit -G805-	1027
1.88 Charge air temperature sender before charge air cooler -G810-	1028
1.89 Charge air temperature sender after charge air cooler -G811-	1028
1.90 NOx sender 3 -G932-	1029
1.91 External air quality and air humidity sensor -G935-	1029
1.92 Inlet camshaft position sender -G1002-	1030
1.93 Pressure differential sender for particulate filter -G1037-	1030-1031
1.94 Fuel delivery unit -GX1-	1032-1034
1.95 Accelerator pedal module -GX2-	1035
1.96 Throttle valve module -GX3-	1035-1036
1.97 Exhaust gas recirculation valve 1 -GX5-	1037
1.98 Exhaust gas recirculation valve 2 -GX6-	1038
1.99 Lambda probe 1 after catalytic converter -GX7-	1039
1.100 Intake manifold sender -GX9-	1039-1040
1.101 Lambda probe 1 before catalytic converter -GX10-	1041
1.102 Delivery unit for reducing agent metering system -GX19-	1042
1.103 Charge pressure sender -GX26-	1043
1.104 Control unit for NOx sender -GX30-	1044
1.105 Engine temperature regulation module -GX33-	1044-1045
1.106 Charge pressure control module -GX34-	1046
1.107 Air mass measurement module -GX35-	1047
1.108 Control unit 2 for NOx sender -GX46-	1047-1048
834 - -Connector views: parts with prefix H to I - 3	1049-1052
1. Connector views: parts with prefix H to I	1049-1052

1.1 Anti-theft alarm system horn -H8-	1049
1.2 Alarm horn -H12-	1049
1.3 Rear parking aid warning buzzer -H15-	1050
1.4 Front parking aid warning buzzer -H22-	1050
1.5 Rear lid warning buzzer -H32-	1051
1.6 Left horn -H33-	1051
1.7 Right horn -H34-	1052
835 - -Connector views: parts with prefix J - 3	1053-1119
1. Connector views: parts with prefix J	1053-1119
1.1 ABS control unit -J104-	1055
1.2 Fresh air blower control unit -J126-	1055
1.3 Automatic gearbox control unit -J217-	1055
1.4 Airbag control unit -J234-	1056-1057
1.5 Electronically controlled damping control unit -J250-	1058
1.6 Vacuum pump relay -J318-	1058
1.7 Trailer detector control unit -J345-	1059-1060
1.8 Auxiliary heater control unit -J364-	1061
1.9 Battery monitor control unit -J367-	1062
1.10 Driver door control unit -J386-	1062-1063
1.11 Front passenger door control unit -J387-	1064-1065
1.12 Wiper motor control unit -J400-	1066
1.13 Adaptive cruise control unit -J428-	1067
1.14 Parking aid control unit -J446-	1067
1.15 Remote starting system relay -J471-	1068
1.16 All-wheel drive control unit -J492-	1069
1.17 Power steering control unit -J500-	1069
1.18 Tyre Pressure Monitoring System control unit -J502-	1070
1.19 Onboard supply control unit -J519-	1071-1072
1.20 Digital sound package control unit -J525-	1073
1.21 Steering column electronics control unit -J527-	1074-1075
1.22 Data bus diagnostic interface -J533-	1076
1.23 Fuel pump control unit -J538-	1077
1.24 Rear lid control unit -J605-	1078
1.25 Engine/motor control unit -J623-	1079-1080
1.26 Chip card reader control unit -J676-	1081-1082
1.27 Display unit for front information display and operating unit control unit -J685-	1083
1.28 Seat occupied recognition control unit -J706-	1084
1.29 Turbocharger 1 control unit -J724-	1085
1.30 Massage control unit -J740-	1085
1.31 Mechatronic unit for dual clutch gearbox -J743-	1086
1.32 Control unit for cornering light and headlight range control -J745-	1087
1.33 Control unit for electronic steering column lock -J764-	1088
1.34 Lane change assist control unit -J769-	1088
1.35 Lane change assist control unit 2 -J770-	1089
1.36 Control unit 1 for information electronics -J794-	1089-1096
1.37 Driver seat adjustment control unit -J810-	1097-1100
1.38 Control unit for navigation system -J856-	1101-1102
1.39 Control unit for structure-borne sound -J869-	1103
1.40 Exhaust flap control unit -J883-	1104
1.41 Control unit for reducing agent heater -J891-	1105
1.42 Control unit for Head-up Display -J898-	1106
1.43 Control unit for fuel tank leak detection -J909-	1107
1.44 Rear driver side door control unit -J926-	1107-1108
1.45 Rear passenger side door control unit -J927-	1109-1110
1.46 Control unit for overhead view camera -J928-	1111-1113
1.47 Rear lid power opening control unit -J938-	1114
1.48 Exhaust flap control unit 2 -J945-	1115
1.49 Emergency call module control unit and communication unit -J949-	1115-1116
1.50 Interface for entry and start system -J965-	1117
1.51 Two-way signal amplifier for mobile telephone/data services -J984-	1118-1119
836 - -Connector views: parts with prefix K to M - 3	1120-1141
1. Connector views: parts with prefix K to M	1120-1141
1.1 Central locking SAFELOCK function warning lamp -K133-	1121
1.2 Front left footwell light -K268-	1121
1.3 Front right footwell light -K269-	1122
1.4 Dash panel insert -KX2-	1122

1.5 Dash panel left vent illumination bulb -L67-	1123
1.6 Dash panel right vent illumination bulb -L69-	1123-1124
1.7 Cup holder illumination bulb -L121-	1125
1.8 Rear left door background lighting bulb -L166-	1126
1.9 Rear right door background lighting bulb -L167-	1126
1.10 Left background lighting LED -L181-	1127
1.11 Right background lighting LED -L182-	1127
1.12 Light 2 for front left door background lighting -L203-	1128
1.13 Light 2 for front right door background lighting -L204-	1129
1.14 Light for driver side interior door handle illumination -L219-	1130
1.15 Light for passenger side interior door handle illumination -L220-	1130
1.16 Light for rear driver side interior door handle illumination -L221-	1131
1.17 Light for rear passenger side interior door handle illumination -L222-	1131
1.18 Light for front left door contour lighting -L251-	1132
1.19 Light for front right door contour lighting -L252-	1132
1.20 Light for rear left door contour lighting -L253-	1133
1.21 Light for rear right door contour lighting -L254-	1133
1.22 High-level brake light bulb -M25-	1134
1.23 Front left headlight -MX1-	1134
1.24 Front right headlight -MX2-	1135
1.25 Left tail light cluster -MX3-	1135-1136
1.26 Right tail light cluster -MX4-	1137
1.27 Left tail light cluster 2 -MX5-	1138-1139
1.28 Right tail light cluster 2 -MX6-	1140-1141
837 - -Connector views: parts with prefix N - 3	1142-1202
1. Connector views: parts with prefix N	1142-1202
1.1 Injector, cylinder 1 -N30-	1144-1145
1.2 Injector, cylinder 2 -N31-	1146-1147
1.3 Injector, cylinder 3 -N32-	1148-1149
1.4 Injector, cylinder 4 -N33-	1150-1151
1.5 Ignition coil 1 with output stage -N70-	1152
1.6 Charge pressure control solenoid valve -N75-	1153
1.7 Heater element for crankcase breather -N79-	1153
1.8 Activated charcoal filter solenoid valve 1 -N80-	1154
1.9 Coolant shut-off valve -N82-	1155
1.10 Ignition coil 2 with output stage -N127-	1156
1.11 Airbag igniter 1 on front passenger side -N131-	1156
1.12 Driver seat belt tensioner igniter 1 -N153-	1157
1.13 Front passenger seat belt tensioner igniter 1 -N154-	1157
1.14 Rear belt tensioner igniter on driver side -N196-	1158
1.15 Rear belt tensioner igniter on passenger side -N197-	1158
1.16 Side airbag igniter on driver side -N199-	1159
1.17 Side airbag igniter on front passenger side -N200-	1159
1.18 Rear side airbag igniter on driver side -N201-	1160
1.19 Rear side airbag igniter on passenger side -N202-	1160
1.20 Camshaft control valve 1 -N205-	1161
1.21 Turbocharger air recirculation valve -N249-	1162
1.22 Driver side curtain airbag igniter -N251-	1162
1.23 Front passenger side curtain airbag igniter -N252-	1163
1.24 Fuel pressure regulating valve -N276-	1164
1.25 Air conditioner compressor regulating valve -N280-	1165
1.26 Fuel metering valve -N290-	1166
1.27 Ignition coil 3 with output stage -N291-	1167
1.28 Ignition coil 4 with output stage -N292-	1167
1.29 Driver side knee airbag igniter -N295-	1168
1.30 Front passenger side knee airbag igniter -N296-	1169
1.31 Igniter for driver side seat belt tensioner 2 -N297-	1169
1.32 Igniter for front passenger side seat belt tensioner 2 -N298-	1170
1.33 Intake manifold flap valve -N316-	1170
1.34 Exhaust camshaft control valve 1 -N318-	1171
1.35 Front left shock absorber damping adjustment valve -N336-	1172
1.36 Front right shock absorber damping adjustment valve -N337-	1173
1.37 Rear left shock absorber damping adjustment valve -N338-	1173
1.38 Rear right shock absorber damping adjustment valve -N339-	1174
1.39 Exhaust gas recirculation cooler changeover valve -N345-	1174
1.40 Valve for oil pressure control -N428-	1175-1176

1.41 Injector for reducing agent -N474-	1177
1.42 Coolant valve for gearbox -N488-	1178
1.43 Coolant valve for cylinder head -N489-	1178
1.44 Actuator for engine temperature regulation -N493-	1179
1.45 Piston cooling jet control valve -N522-	1180
1.46 Turbine changeover valve -N529-	1181
1.47 Injector 2, cylinder 1 -N532-	1181
1.48 Injector 2, cylinder 2 -N533-	1182
1.49 Injector 2, cylinder 3 -N534-	1182
1.50 Injector 2, cylinder 4 -N535-	1183
1.51 Exhaust cam actuator A for cylinder 1 -N580-	1183
1.52 Exhaust cam actuator B for cylinder 1 -N581-	1184
1.53 Inlet cam actuator for cylinder 2 -N583-	1185
1.54 Exhaust cam actuator for cylinder 2 -N587-	1186
1.55 Exhaust cam actuator A for cylinder 2 -N588-	1186
1.56 Exhaust cam actuator B for cylinder 2 -N589-	1187
1.57 Inlet cam actuator for cylinder 3 -N591-	1188
1.58 Exhaust cam actuator for cylinder 3 -N595-	1189
1.59 Exhaust cam actuator A for cylinder 3 -N596-	1189
1.60 Exhaust cam actuator B for cylinder 3 -N597-	1190
1.61 Exhaust cam actuator A for cylinder 4 -N604-	1191
1.62 Exhaust cam actuator B for cylinder 4 -N605-	1192
1.63 Inlet camshaft control valve 1 -N727-	1193
1.64 Injector 2 for reducing agent -N758-	1194
1.65 Gearbox -NX1-	1194
1.66 Front passenger airbag unit -NX3-	1195
1.67 Brake servo -NX6-	1196-1197
1.68 Front left seat belt -NX10-	1198-1199
1.69 Front right seat belt -NX11-	1200-1202
838 - -Connector views: parts with prefix O to Q - 3	1203-1207
1. Connector views: parts with prefix O to Q	1203-1207
1.1 Glow plug 1 -Q10-	1203
1.2 Glow plug 2 -Q11-	1204
1.3 Glow plug 3 -Q12-	1205
1.4 Glow plug 4 -Q13-	1205
1.5 Glow plug 3 -QX3-	1206-1207
839 - -Connector views: parts with prefix R - 3	1208-1240
1. Connector views: parts with prefix R	1208-1240
1.1 Aerial -R11-	1209
1.2 Rear left treble loudspeaker -R14-	1210
1.3 Rear left bass loudspeaker -R15-	1211
1.4 Rear right treble loudspeaker -R16-	1211
1.5 Rear right bass loudspeaker -R17-	1212
1.6 Front left treble loudspeaker -R20-	1213
1.7 Front left bass loudspeaker -R21-	1213
1.8 Front right treble loudspeaker -R22-	1214
1.9 Front right bass loudspeaker -R23-	1215
1.10 Telephone microphone -R38-	1216
1.11 Aerial amplifier 2 for TV -R83-	1217
1.12 Aerial amplifier 3 for TV -R84-	1217
1.13 Front left mid-range loudspeaker -R103-	1218
1.14 Front right mid-range loudspeaker -R104-	1218
1.15 Left aerial module -R108-	1219
1.16 Right aerial module -R109-	1220
1.17 Rear bumper aerial for entry and start system -R136-	1221
1.18 Luggage compartment aerial for entry and start system -R137-	1222
1.19 Interior aerial 1 for entry and start system -R138-	1222
1.20 Interior aerial 2 for entry and start system -R139-	1223
1.21 Remote control receiver for auxiliary coolant heater -R149-	1223
1.22 Traffic data aerial -R173-	1224
1.23 Frequency modulation (FM) frequency filter in negative wire -R178-	1225
1.24 Frequency modulation (FM) frequency filter in positive wire -R179-	1225
1.25 Connection for external audio sources -R199-	1226
1.26 Centre loudspeaker -R208-	1226
1.27 Subwoofer -R211-	1227
1.28 Actuator for structure-borne sound -R214-	1227

1.29 Front camera for driver assist systems -R242-	1228
1.30 Front overhead view camera -R243-	1228
1.31 Emergency call module aerial -R263-	1229
1.32 Storage compartment with interface for mobile telephone -R265-	1229-1230
1.33 USB hub -R293-	1231-1234
1.34 LTE aerial 1 -R297-	1235
1.35 LTE aerial 2 -R306-	1235
1.36 Loudspeaker for emergency call module -R335-	1236
1.37 Roof aerial -RX5-	1236-1237
1.38 TV tuner -RX6-	1238-1240
840 - -Connector views: parts with prefix S to U - 3	1241-1342
1. Connector views: parts with prefix S to U	1241-1342
1.1 Fuse holder G -SG-	1242
1.2 Coupling point on rear cross member, left -TAQL-	1243
1.3 Coupling point for gearbox oil cooling -TGOK-	1244
1.4 Coupling point for roof -TH-	1245-1246
1.5 Coupling point on rear lid, left -THKL-	1247-1251
1.6 Coupling point on rear lid, centre -THKM-	1252
1.7 Coupling point on rear lid, right -THKR-	1253-1259
1.8 Coupling point in luggage compartment, left -THRL-	1260
1.9 Coupling point in luggage compartment, right -THRR-	1261-1262
1.10 Coupling point in interior -TI-	1263-1264
1.11 Coupling point in interior, centre -TIM-	1265
1.12 Coupling point in interior, right -TIR-	1266
1.13 Coupling point in front left seat -TISVL-	1267
1.14 Coupling point in front right seat -TISVR-	1268
1.15 Coupling point in interior, below left -TIUL-	1269-1278
1.16 Coupling point in interior, below centre -TIUM-	1279
1.17 Coupling point in interior, below right -TIUR-	1280-1281
1.18 Coupling point in engine compartment, left -TML-	1282-1295
1.19 Coupling point on engine, top left -TMOL-	1296-1297
1.20 Coupling point on engine, top centre -TMOM-	1298
1.21 Coupling point on engine, top right -TMOR-	1299
1.22 Coupling point for all-wheel drive -TSAA-	1300
1.23 Coupling point on front left bumper -TSFVL-	1301
1.24 Coupling point for front left seat -TSVL-	1302-1308
1.25 Coupling point for front right seat -TSVR-	1309-1314
1.26 Coupling point for rear left door -TTHL-	1315-1316
1.27 Coupling point for rear right door -TTHR-	1317
1.28 Coupling point in rear left door -TTIHL-	1318-1320
1.29 Coupling point in rear right door -TTIHR-	1321-1322
1.30 Coupling point in front left door -TTIVL-	1323-1325
1.31 Coupling point in front right door -TTIVR-	1326-1328
1.32 Coupling point for front left door -TTVL-	1329-1331
1.33 Coupling point for front right door -TTVR-	1332-1334
1.34 Terminal 30 wiring junction -TV2-	1335
1.35 12 V socket -U5-	1335
1.36 Trailer socket -U10-	1336
1.37 DC/AC converter with socket, 12 V - 230 V -U13-	1337
1.38 12 V socket 2 -U18-	1337
1.39 12 V socket 3 -U19-	1338
1.40 Diagnostic connection -U31-	1338
1.41 USB charging socket 1 -U37-	1339
1.42 USB connection 1 -U41-	1340
1.43 USB connection 2 -U42-	1341-1342
841 - -Connector views: parts with prefix V - 3	1343-1375
1. Connector views: parts with prefix V	1343-1375
1.1 Washer pump -V5-	1344
1.2 Headlight washer system pump -V11-	1345
1.3 Driver seat longitudinal adjustment motor -V28-	1345
1.4 Front passenger seat longitudinal adjustment motor -V31-	1346
1.5 Driver seat backrest adjustment motor -V45-	1346
1.6 Front passenger seat backrest adjustment motor -V46-	1347
1.7 Metering pump -V54-	1347
1.8 Air recirculation flap control motor -V113-	1348
1.9 Driver side window regulator motor -V147-	1348

1.10 Charge air cooling pump -V188-	1349
1.11 Vacuum pump for brakes -V192-	1349
1.12 Driver seat rake adjustment motor -V243-	1350
1.13 Front passenger seat rake adjustment motor -V244-	1350
1.14 Driver seat height adjustment motor -V245-	1351
1.15 Front passenger seat height adjustment motor -V246-	1351
1.16 Left parking brake motor -V282-	1352
1.17 Right parking brake motor -V283-	1352
1.18 Open and close display motor -V301-	1353
1.19 Motor 1 for rear lid -V444-	1353
1.20 Motor 2 for rear lid -V445-	1354
1.21 Rear driver side window regulator motor -V471-	1354
1.22 Rear passenger side window regulator motor -V472-	1355
1.23 Auxiliary hydraulic pump 1 for gearbox oil -V475-	1355
1.24 Auxiliary pump for heating -V488-	1356
1.25 Front left seat backrest fan 1 -V512-	1357
1.26 Front left seat cushion fan 1 -V514-	1358
1.27 Lumbar support for driver seat -VX2-	1358-1361
1.28 Lumbar support for front passenger seat -VX3-	1362
1.29 Driver side exterior mirror -VX4-	1363
1.30 Passenger side exterior mirror -VX5-	1364
1.31 Turbocharger 1 -VX12-	1365
1.32 Trailer towing coupling -VX15-	1366
1.33 Power latching for rear lid -VX16-	1366
1.34 Driver door lock unit -VX21-	1367
1.35 Front passenger door lock unit -VX22-	1367
1.36 Rear left door lock unit -VX23-	1368
1.37 Rear right door lock unit -VX24-	1368
1.38 Rear lid lock unit -VX25-	1369
1.39 Temperature flap -VX27-	1369
1.40 Air distribution flap -VX33-	1370
1.41 Front left temperature flap -VX34-	1371
1.42 Front right temperature flap -VX35-	1372
1.43 Defroster flap -VX47-	1372
1.44 Air recirculation flap -VX52-	1373
1.45 Radiator fan -VX57-	1373-1375
842 - -Connector views: parts with prefix W to Z - 3	1376-1391
1. Connector views: parts with prefix W to Z	1376-1391
1.1 Luggage compartment light -W3-	1377
1.2 Glove compartment light -W6-	1377
1.3 Front passenger side illuminated vanity mirror -W14-	1378
1.4 Driver side illuminated vanity mirror -W20-	1378
1.5 Driver side door warning lamp -W30-	1378
1.6 Light for driver door background lighting -W86-	1379
1.7 Light for passenger door background lighting -W87-	1379
1.8 Light for rear door background lighting, driver side -W88-	1380
1.9 Light for rear door background lighting, passenger side -W89-	1380
1.10 Front interior light -WX1-	1381
1.11 Rear interior light -WX2-	1382
1.12 Left number plate light -X4-	1383
1.13 Right number plate light -X5-	1383
1.14 Analogue clock -Y-	1384
1.15 Heated windscreen -Z2-	1384
1.16 Heated seat cushion for driver seat -Z6-	1385
1.17 Heated backrest for front passenger seat -Z9-	1386
1.18 Heated backrest for rear left seat -Z11-	1386
1.19 Heated backrest for rear right seat -Z13-	1387
1.20 Left washer jet heater element -Z20-	1387
1.21 Right washer jet heater element -Z21-	1388
1.22 Auxiliary air heater element -Z35-	1388
1.23 Heater for reducing agent line (heater circuit 2) -Z104-	1389
1.24 Windscreen heater for front sensors -Z113-	1389
1.25 Rear left seat heating -ZX10-	1390
1.26 Rear right seat heating -ZX12-	1390
1.27 Heating element with seat occupied recognition, front passenger side -ZX14-	1391