



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
<b>2 Identification</b>	<b>3</b>
2.1 Engine number/engine data	3
<b>3 Repair instructions</b>	<b>4</b>
3.1 Rules for cleanliness	4
3.2 Foreign objects in engine	4
3.3 Contact corrosion	4
3.4 Routing and attachment of lines	4
3.5 Fitting radiator and condensers	5
<b>10 - Removing and installing engine</b>	<b>6</b>
<b>1 Removing and installing engine</b>	<b>6</b>
1.1 Removing engine	6
1.2 Separating engine and gearbox	16
1.3 Securing engine on engine and gearbox support	18
1.4 Installing engine	19
<b>2 Assembly mountings</b>	<b>22</b>
2.1 Assembly overview - assembly mountings	22
2.2 Removing and installing engine mounting	24
2.3 Removing and installing gearbox mounting	25
2.4 Removing and installing pendulum support	27
2.5 Supporting engine in installation position	27
2.6 Adjusting assembly mountings	34
2.7 Checking adjustment of assembly mountings (engine and gearbox mountings)	36
<b>13 - Crankshaft group</b>	<b>37</b>
<b>1 Cylinder block (pulley end)</b>	<b>37</b>
1.1 Assembly overview - poly V-belt drive	37
1.2 Assembly overview - sealing flange, belt pulley end	41
1.3 Removing and installing poly-V belt	42
1.4 Removing and installing tensioner for poly V-belt	45
1.5 Removing and installing vibration damper	45
1.6 Removing and installing engine support	46
1.7 Renewing crankshaft oil seal - belt pulley end	48
1.8 Removing and installing sealing flange on pulley end	51
<b>2 Cylinder block, gearbox end</b>	<b>54</b>
2.1 Assembly overview - cylinder block, gearbox end	54
2.2 Removing and installing flywheel	55
2.3 Removing and installing sealing flange on gearbox side	56
<b>3 Crankshaft</b>	<b>64</b>
3.1 Crankshaft dimensions	64
3.2 Renewing needle bearing in crankshaft	64
3.3 Measuring axial clearance of crankshaft	67
<b>4 Pistons and conrods</b>	<b>68</b>
4.1 Assembly overview - pistons and conrods	68
4.2 Removing and installing pistons	70



4.3	Checking pistons and cylinder bores	71
4.4	Separating new conrod	72
4.5	Checking radial clearance of conrods	72
4.6	Removing and installing oil spray jets	73
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>75</b>
<b>1</b>	<b>Cylinder head</b>	<b>75</b>
1.1	Assembly overview - cylinder head	75
1.2	Assembly overview - camshaft housing	77
1.3	Removing and installing cylinder head	78
1.4	Removing and installing camshaft housing	82
1.5	Checking compression	86
<b>2</b>	<b>Toothed belt drive</b>	<b>89</b>
2.1	Assembly overview - toothed belt cover	89
2.2	Assembly overview - toothed belt	90
2.3	Removing and installing toothed belt guard	91
2.4	Removing and installing toothed belt	92
2.5	Checking valve timing	96
2.6	Adjusting valve timing	101
2.7	Removing toothed belt from camshaft	108
<b>3</b>	<b>Valve gear</b>	<b>112</b>
3.1	Assembly overview - valve gear	112
3.2	Measuring axial play of camshaft	113
3.3	Removing and installing camshaft oil seal	114
3.4	Removing and installing camshaft adjuster	119
3.5	Removing and installing camshaft control valve 1 N205	127
3.6	Removing and installing exhaust camshaft control valve 1 N318	128
3.7	Removing and installing valve stem seals	128
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>136</b>
4.1	Checking valve guides	136
4.2	Checking valves	136
4.3	Valve dimensions	137
<b>17</b>	<b>Lubrication</b>	<b>138</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>138</b>
1.1	Assembly overview - sump/oil pump	138
1.2	Engine oil:	141
1.3	Removing and installing lower part of sump	142
1.4	Removing and installing upper part of sump	146
1.5	Removing and installing oil pump	150
1.6	Removing and installing oil level and oil temperature sender G266	151
<b>2</b>	<b>Engine oil cooler</b>	<b>153</b>
2.1	Assembly overview - engine oil cooler	153
2.2	Removing and installing engine oil cooler	153
<b>3</b>	<b>Crankcase ventilation</b>	<b>155</b>
3.1	Assembly overview - crankcase breather system	155
3.2	Removing and installing oil separator	156
<b>4</b>	<b>Oil filter, oil pressure switch</b>	<b>159</b>
4.1	Assembly overview - oil filter/oil pressure switch	159
4.2	Removing and installing oil pressure switch F1	160
4.3	Removing and installing oil pressure switch for reduced oil pressure F378	161
4.4	Checking oil pressure	161
4.5	Removing and installing oil pressure regulating valve N428	163
<b>19</b>	<b>Cooling</b>	<b>165</b>



<b>1</b>	<b>Cooling system/coolant</b> .....	<b>165</b>
1.1	Connection diagram - coolant hoses .....	165
1.2	Assembly overview - engine preheater .....	166
1.3	Checking cooling system for leaks .....	166
1.4	Draining and adding coolant .....	169
1.5	Removing and installing engine preheating element Z97 .....	175
<b>2</b>	<b>Coolant pump, regulation of cooling system</b> .....	<b>178</b>
2.1	Assembly overview - coolant pump, thermostat .....	178
2.2	Assembly overview - electric coolant pump .....	180
2.3	Assembly overview - coolant temperature sender .....	182
2.4	Removing and installing electric coolant pump .....	182
2.5	Removing and installing coolant pump .....	184
2.6	Removing and installing thermostat .....	188
2.7	Removing and installing toothed belt pulley for coolant pump .....	191
2.8	Removing and installing coolant temperature sender G62 .....	192
2.9	Removing and installing radiator outlet coolant temperature sender G83 .....	193
<b>3</b>	<b>Coolant pipes</b> .....	<b>195</b>
3.1	Assembly overview - coolant pipes .....	195
3.2	Removing and installing coolant pipes .....	195
<b>4</b>	<b>Radiator, radiator fan</b> .....	<b>199</b>
4.1	Assembly overview - radiator/radiator fan .....	199
4.2	Assembly overview - radiator cowl and radiator fan .....	201
4.3	Removing and installing radiator .....	201
4.4	Removing and installing water radiator for charge air cooling circuit .....	203
4.5	Removing and installing radiator cowl .....	205
4.6	Removing and installing radiator fan V7 .....	207
4.7	Removing and installing radiator fan 2 V177 .....	207
<b>21</b>	<b>Turbocharging/supercharging</b> .....	<b>208</b>
<b>1</b>	<b>Exhaust turbocharger</b> .....	<b>208</b>
1.1	Assembly overview - turbocharger .....	208
1.2	Removing and installing turbocharger .....	211
1.3	Removing and installing charge pressure positioner V465 .....	217
<b>2</b>	<b>Charge air system</b> .....	<b>221</b>
2.1	Assembly overview - charge air system .....	221
2.2	Removing and installing charge air cooler .....	223
2.3	Removing and installing charge pressure sender GX26 .....	225
2.4	Checking charge air system for leaks .....	226
2.5	Removing and installing air intake pipe .....	227
<b>24</b>	<b>Mixture preparation - injection</b> .....	<b>229</b>
<b>1</b>	<b>Injectors</b> .....	<b>229</b>
1.1	Assembly overview - fuel rail with injectors .....	229
1.2	Removing and installing fuel rail .....	230
1.3	Removing and installing injectors .....	230
1.4	Cleaning injectors .....	234
<b>2</b>	<b>Air filter</b> .....	<b>236</b>
2.1	Assembly overview - air filter housing .....	236
2.2	Removing and installing air filter housing .....	237
2.3	Removing and installing resonator for intake air .....	238
<b>3</b>	<b>Intake manifold</b> .....	<b>239</b>
3.1	Assembly overview - intake manifold .....	239
3.2	Removing and installing intake manifold .....	240
3.3	Removing and installing throttle valve module GX3 .....	243
3.4	Cleaning throttle valve module GX3 .....	244



<b>4</b>	<b>Senders and sensors</b> .....	<b>246</b>
4.1	Removing and installing fuel pressure sender G247 .....	246
4.2	Checking fuel pressure sender G247 .....	247
4.3	Removing and installing intake manifold sender GX9 .....	249
<b>5</b>	<b>Engine (motor) control unit</b> .....	<b>251</b>
5.1	Removing and installing engine (motor) control unit J623 .....	251
<b>6</b>	<b>High-pressure pump</b> .....	<b>255</b>
6.1	Assembly overview - high-pressure pump .....	255
6.2	Removing and installing high-pressure pump .....	258
6.3	Removing and installing high-pressure pipe .....	260
<b>7</b>	<b>Lambda probe</b> .....	<b>262</b>
7.1	Assembly overview - Lambda probe .....	262
7.2	Removing and installing Lambda probe .....	263
<b>26</b>	<b>- Exhaust system</b> .....	<b>266</b>
<b>1</b>	<b>Exhaust pipes and silencers</b> .....	<b>266</b>
1.1	Assembly overview - silencers .....	266
1.2	Separating exhaust pipes from silencers .....	268
1.3	Removing and installing rear silencer .....	270
1.4	Aligning exhaust system free of stress .....	270
1.5	Check exhaust system for leaks .....	271
1.6	Installation position of clamp .....	272
<b>2</b>	<b>Exhaust gas cleaning</b> .....	<b>273</b>
2.1	Assembly overview - emission control .....	273
2.2	Removing and installing catalytic converter .....	274
<b>28</b>	<b>- Ignition system</b> .....	<b>278</b>
<b>1</b>	<b>Ignition system</b> .....	<b>278</b>
1.1	Assembly overview - ignition system .....	278
1.2	Test data, spark plugs .....	279
1.3	Removing and installing ignition coils with output stage .....	279
1.4	Removing and installing knock sensor 1 G61 .....	282
1.5	Removing and installing Hall sender .....	282
1.6	Removing and installing engine speed sender G28 .....	283