



Contents

91 - Communication	1
1 Communication systems	1
1.1 Fault finding	1
2 Radio "ALPHA" ▶ 04.98	2
2.1 General notes	2
2.2 Removing and installing radio	2
2.3 Overview of radio connectors	4
2.4 Electronic anti-theft system	4
2.5 Fitting radios ▶ 04.98 in vehicles 05.98 ▶	5
3 Radio "BETA" ▶ 04.98	7
3.1 General notes	7
3.2 Removing and installing radio	7
3.3 Overview of radio connectors	9
3.4 Electronic anti-theft system	9
3.5 Fitting radios ▶ 04.98 in vehicles 05.98 ▶	10
4 Radio "GAMMA" ▶ 04.98	12
4.1 General notes	12
4.2 Removing and installing radio	12
4.3 Overview of radio connectors	14
4.4 Electronic anti-theft system	14
4.5 Fitting radios ▶ 04.98 in vehicles 05.98 ▶	15
5 Radio "ALPHA" 5.98 ▶	17
5.1 General notes	17
5.2 Removing and installing radio	17
5.3 Overview of radio connectors	19
5.4 Electronic anti-theft system	19
5.5 Fitting radios 05.98 ▶ in vehicles ▶ 04.98	20
6 Radio "BETA" 05.98 ▶	21
6.1 General notes	21
6.2 Removing and installing radio	21
6.3 Overview of radio connectors	23
6.4 Electronic anti-theft system	24
6.5 Fitting radios 05.98 ▶ in vehicles ▶ 04.98	26
6.6 Adapting radio components	27
7 Radio "GAMMA" 05.98 ▶	28
7.1 General notes	28
7.2 Removing and installing radio	28
7.3 Overview of radio connectors	30
7.4 Electronic anti-theft system	31
7.5 Fitting radios 05.98 ▶ in vehicles ▶ 04.98	33
7.6 Adapting radio components	34
8 Radio "DELTA"	35
8.1 General notes	35
8.2 Removing and installing radio	35
8.3 Overview of radio connectors	37
8.4 Adapting radio components	38
9	39
9.1 General description	39
9.2 Fault finding	40
9.3 Overview of radio system "RCD 200"	40
9.4 Removing and installing radio "RCD 200"	41



9.5	Overview of radio unit connections "RDC 200"	43
9.6	Electronic anti-theft system	45
9.7	Adapting radio components	47
10	48
10.1	General notes	48
10.2	Wiring harness adapter set for radio "Volkswagen Individual"	49
10.3	Removing and installing radio "Volkswagen Individual"	49
10.4	Electronic anti-theft system	51
10.5	Overview of connections for radio "Volkswagen Individual"	52
11	Radio navigation system (RNS) with multifunction display and TV tuner	54
11.1	General notes	54
11.2	Removing and installing radio navigation system	55
11.3	Overview of radio navigation system connections	57
11.4	Electronic anti-theft system	60
11.5	Removing and installing traffic information control unit	61
11.6	Removing and installing TV tuner	62
11.7	Adapting navigation components	64
11.8	Adapting radio components	65
12	Radio navigation system (RNS) with monochrome display	66
12.1	General notes	66
12.2	Removing and installing radio navigation system	67
12.3	Overview of radio navigation system connections	68
12.4	Electronic anti-theft system	71
12.5	Adapting navigation components	73
12.6	Adapting radio components	73
13	CD changer/CD player	74
13.1	General notes	74
13.2	CD changer	74
13.3	CD player	76
14	Telematics system	78
14.1	General description	78
14.2	Overview of telematics system	78
14.3	Removing and installing operating unit	79
14.4	Removing and installing	80
14.5	Removing and installing aerial filter	81
14.6	Fault finding on telematics system	82
15	Telematics system (USA only, Model Year 2004 ▶)	86
15.1	General notes	86
15.2	Overview of telematics system	87
15.3	Removing and installing telematics operating unit	88
15.4	Removing and installing telematics control unit	89
15.5	Removing and installing telematics system microphone	97
15.6	Fault finding on telematics system	97
15.7	Coding telematics system	99
15.8	Deactivating transport mode	99
16	Loudspeaker systems	101
16.1	Removing and installing front treble loudspeakers	101
16.2	Removing and installing rear treble loudspeakers	101
16.3	Removing and installing front and rear bass loudspeakers	102
17	Digital Sound System (DSP)	103
17.1	General notes	103
17.2	Removing and installing amplifier	103
17.3	Removing and installing operating unit in centre console	104
17.4	Adapting Digital Sound System	106



18	Telephone systems	107
18.1	General notes	107
18.2	Telephone system for vehicles ▶10.98	107
18.3	Telephone systems for vehicles 11.98 ▶	108
18.4	Telephone system for vehicles 09.00 ▶	109
18.5	Telephone brackets	110
18.6	Telephone operating electronics control unit	114
18.7	Telephone system microphone	116
19	Aerial systems	118
19.1	General notes	118
19.2	Overview of roof mounted radio aerial	118
19.3	Overview of roof mounted radio and telephone aerial	120
19.4	Roof mounted aerial for radio, telephone, telematics and navigation system	121
19.5	Aerial system for TV reception	123
19.6	Renewal of aerial wiring	125
20	Multifunction steering wheel	126
20.1	General notes	126
20.2	Overview - multifunction steering wheel	126
20.3	Removing and installing steering wheel operating unit	127
20.4	Removing and installing multifunction steering wheel control unit	128
20.5	Overview of connectors on multifunction steering wheel control unit	129
20.6	Adapting multifunction steering wheel	130
21	Notes on operating mobile telephones and two-way radios	131
21.1	General notes	131
21.2	Notes on performing repair work	131
21.3	Overview of battery, transmitter/receiver unit, fuse and wiring harness	133
21.4	Transmitting power and aerial fitting locations	134
22	Suppression	135
22.1	Suppression measures	135