



Contents

01 - Self-diagnosis	1
1 Self-diagnosis	1
1.1 Self-diagnosis	1
1.2 Tools	1
1.3 Connecting fault reader	2
2 Self-diagnosis of airbag system	3
2.1 Self-diagnosis of airbag system	3
2.2 Function	3
2.3 Coding airbag control unit	6
2.4 Adaption	19
2.5 Read measured value block	25
2.6 Test box VAS 5056	32
2.7 Final control diagnosis	34
3 Self-diagnosis for convenience system	35
3.1 Self-diagnosis for convenience system	35
3.2 Functional description	35
3.3 Determining which source has possibly triggered the anti-theft alarm	36
3.4 Description of the interior monitoring system	36
3.5 System active indicator	37
3.6 Initiating self-diagnosis for the convenience system	37
3.7 Overview of the selectable functions	39
3.8 Interrogating control unit version	39
3.9 Coding convenience system control unit using fault reader V.A.G 1551	41
3.10 Interrogating fault memory	43
3.11 Erasing fault memory	44
3.12 Ending output	45
3.13 Fault table	45
3.14 Final control diagnosis	61
3.15 Reading measured value block	62
3.16 Display group overview	63
3.17 Matching ignition keys to radio wave remote control	77
3.18 Matching a new additional key	80
3.19 Radio wave remote control function variations >05.98	80
3.20 Radio wave remote control functional variations 06.98 >	81
3.21 Removing and installing batteries for the main key with radio wave remote control	83
3.22 Removing and installing batteries for the main key (folding) with radio wave remote control	85
4 Self-diagnosis for central locking	87
4.1 Self-diagnosis for central locking	87
4.2 Functional description	87
4.3 System active indicator	88
4.4 Initiating convenience system self-diagnosis	88
4.5 Overview of the selectable functions	89
4.6 Interrogating control unit version	89
4.7 Coding central locking control unit using fault reader V.A.G 1551	91
4.8 Interrogating fault memory	92
4.9 Erasing fault memory	93
4.10 Ending output	94
4.11 Fault table	94
4.12 Final control diagnosis	101
4.13 Read measured value block	102
4.14 Display group overview	103
4.15 Matching ignition keys to radio wave remote control	112
4.16 Radio wave remote control functional variants	115



4.17	Removing and installing batteries for the main key with radio wave remote control	117
4.18	Removing and installing batteries for the main key (folding) with radio wave remote control	119
5	Self-diagnosis for the driver's side seat adjustment	121
5.1	Self-diagnosis for the driver's side seat adjustment	121
5.2	Functional description for the seat adjustment	121
5.3	Functional description for the self-diagnosis	122
5.4	Initialising the memory system	122
5.5	Storing seat and mirror settings for normal driving	122
5.6	Storing mirror setting for reversing	123
5.7	Allocating the radio wave remote control key to the memory buttons	124
5.8	Activating seat and mirror settings for normal driving	124
5.9	Activating the mirror setting for reversing	124
5.10	Initiating self-diagnosis for the seat adjustment	125
5.11	Overview of the selectable functions	126
5.12	Interrogating control unit version	126
5.13	Interrogating fault memory	127
5.14	Erasing fault memory	128
5.15	Ending output	129
5.16	Fault table	129
5.17	Read measured value block	135
5.18	Display group overview	136