



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, gearbox allocation, ratios, capacities	2
2 Transmission layout	3
2.1 Transmission layout	3
3 Calculating overall ratio "i"	5
3.1 Calculating overall ratio "i"	5
4 General repair instructions	5
4.1 General repair instructions	5
30 - Clutch	8
1 Servicing clutch control	8
1.1 Servicing clutch control	8
1.2 Assembly overview - Pedal cluster	9
1.3 Removing and installing over-centre spring	12
1.4 Removing and installing clutch pedal	14
1.5 Assembly overview - Hydraulic system	16
1.6 Removing and installing master cylinder	19
1.7 Removing and installing slave cylinder	23
1.8 Bleeding clutch system	24
2 Servicing clutch release mechanism	26
2.1 Servicing clutch release mechanism	26
3 Servicing clutch	29
3.1 Servicing clutch	29
34 - Controls, Housing	34
1 Servicing gear selector mechanism	34
1.1 Servicing gear selector mechanism	34
1.2 Installation position of gear selector mechanism	34
1.3 Removing and installing selector lever knob and gaiter	37
1.4 Servicing gear stick and gear stick housing	39
1.5 Assembly overview - removing and installing selector cables	43
1.6 Removing and installing gear selector mechanism	47
1.7 Adjusting gear selector mechanism	50
2 Removing and installing gearbox	54
2.1 Removing and installing gearbox	54
3 Checking gear oil	68
3.1 Checking gear oil	68
4 Dismantling and assembling gearbox	69
4.1 Dismantling and assembling gearbox	69
4.2 Overview	69
4.3 Removing and installing cover for gearbox housing and 5th gear	72
4.4 Removing and installing clutch housing	74
4.5 Removing and installing input shaft, output shaft (pinion shaft), differential, selector mechanism and selector forks	75
4.6 Assembly sequence	79
5 Servicing gearbox housing and clutch housing	89
5.1 Servicing gearbox housing and clutch housing	89
6 Dismantling and assembling gearbox selector mechanism	97
6.1 Dismantling and assembling gearbox selector mechanism	97
7 Dismantling and assembling selector forks	100



7.1	Dismantling and assembling selector forks	100
35 - Gears, Shafts		108
1	Dismantling and assembling input shaft	108
1.1	Dismantling and assembling input shaft	108
2	Dismantling and assembling output shaft	124
2.1	Dismantling and assembling output shaft	124
39 - Final drive, Differential		139
1	Renewing oil seals for flanged shafts	139
1.1	Renewing oil seals for flanged shafts	139
1.2	Renewing oil seal for left flanged shaft	139
1.3	Renewing oil seal for right flanged shaft	142
2	Dismantling and assembling differential	144
2.1	Dismantling and assembling differential	144
3	Adjusting differential	157
3.1	Adjusting differential	157