



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Gearbox identification</b>	<b>1</b>
1.1 Location on gearbox through 06.99	1
1.2 Location on gearbox from 07.99	1
1.3 Codes and date of manufacture arrow 1	1
1.4 Identification code, assembly allocation, ratios, capacities	2
<b>2 Overview - power transmission</b>	<b>4</b>
<b>3 Calculating overall gear ratio "i"</b>	<b>6</b>
<b>4 General repair notes</b>	<b>7</b>
4.1 Components	7
<b>30 - Clutch</b>	<b>10</b>
<b>1 Repairing clutch mechanism</b>	<b>10</b>
1.1 Overview	10
1.2 Assembly overview - pedal cluster	11
1.3 Distinguishing between clutch pedal switches F36	12
1.4 Removing and installing clutch pedal switch F36 with rectangular housing	12
1.5 Removing and installing clutch pedal switch F36 with round housing	13
1.6 Removing and installing over-centre spring	13
1.7 Removing and installing clutch pedal	15
1.8 Assembly overview - hydraulic system	16
1.9 Removing and installing master cylinder	17
1.10 Bleeding clutch system	20
<b>2 Repairing clutch</b>	<b>22</b>
2.1 Removing and installing clutch	23
<b>34 - Controls, housing</b>	<b>26</b>
<b>1 Repairing selector mechanism</b>	<b>26</b>
1.1 Installation position of selector mechanism	26
1.2 Assembly overview - selector lever housing and selector lever	28
1.3 Removing and installing selector lever and selector rod	29
1.4 Removing selector lever from and installing in selector lever housing	31
1.5 Assembly overview - gear selector relay points on gearbox	32
1.6 Adjusting selector mechanism	37
<b>2 Removing and installing gearbox</b>	<b>42</b>
2.1 Removing gearbox	43
2.2 Transporting gearbox	48
2.3 Installing gearbox	49
<b>3 Checking gearbox oil</b>	<b>55</b>
<b>4 Dismantling and assembling gearbox</b>	<b>56</b>
4.1 Overview - gearbox	56
4.2 Assembly overview	57
4.3 Removing and installing cover for gearbox housing and 5th gear	58
4.4 Removing and installing gearbox housing and selector mechanism	59
4.5 Dismantling and assembling input shaft, output shaft, differential and selector forks	61
4.6 Dismantling and assembling procedure	63
<b>5 Repairing gearbox housing and selector shaft</b>	<b>80</b>
<b>6 Repairing clutch housing</b>	<b>84</b>
<b>7 Repairing gearbox housing cover</b>	<b>89</b>
<b>35 - Gears, shafts</b>	<b>93</b>



<b>1</b>	<b>Input shaft</b> .....	<b>93</b>
1.1	Dismantling and assembling input shaft .....	93
<b>2</b>	<b>Output shaft</b> .....	<b>101</b>
2.1	Dismantling and assembling output shaft .....	101
2.2	Adjusting output shaft .....	106
<b>39</b>	<b>Final drive - differential</b> .....	<b>109</b>
<b>1</b>	<b>Renewing flange shaft oil seals (gearbox installed)</b> .....	<b>109</b>
1.1	Removing .....	109
1.2	Installing .....	110
<b>2</b>	<b>Adjustment overview</b> .....	<b>111</b>
<b>3</b>	<b>Differential</b> .....	<b>112</b>
3.1	Dismantling and assembling differential .....	112
3.2	Adjusting differential .....	119