

Contents

00	Technical data	Page
	Rear final drive identification	00-1
	– Code letters, assembly allocation, ratios, capacities	00-3
	Transmission layout	00-17
	General repair instructions	00-19
	– Notes on brake and performance tests and towing	00-22
01	Self-diagnosis	Page
	Self-diagnosis function	01-1
	– Technical data of self-diagnosis	01-5
	– Fault finding with fault reader V.A.G 1551 or tester VAS 5051 on the Haldex coupling (flow chart)	01-7
	Locations of electrical/electronic components	01-9
	– Removing and installing four-wheel drive control unit -J492	01-14
	– Removing and installing Haldex coupling pump -V181-	01-16
	Performing self-diagnosis	01-19
	– Connecting fault reader	01-19
	– List of selectable functions	01-25
	– Interrogating fault memory	01-26
	– Automatic test sequence	01-28
	– Fault table	01-29
	– Erasing fault memory, ending output	01-35
	– Final control diagnosis	01-37
	– Read measured value block	01-41
	– Safety precautions	01-41
	– Test table with measured values	01-44
	Electrical check of Haldex coupling	01-47
39	Final drive, Differential rear	Page
	Dismantling and assembling bevel box	39-1
	Renewing needle bearing (Polygon bearing) for right flange shaft	39-2
	Adjusting shaft bevel gear and bevel gear (gear set)	39-8
	Removing and installing propshaft	39-9
	– Removing and installing front flexible coupling	39-16
	– Removing and installing rear flexible coupling	39-20
	Servicing propshaft	39-27
	Checking function of Haldex coupling	39-38
	Renewing propshaft flange oil seal on rear final drive (final drive removed)	39-39
	– Modifying gearbox support VW 353	39-40
	Renewing flange shaft oil seal (final drive installed)	39-44
	– Renewing left-hand flange shaft oil seal	39-45
	– Renewing right-hand flange shaft oil seal	39-47
	Renewing O-ring in rear final drive	39-49
	– Renewing O-ring for Haldex drive pinion housing (final drive removed)	39-49
	– Renewing O-ring for rear axle cover (final drive installed)	39-53
	Removing and installing rear final drive	39-55
	Checking rear final drive oil	39-62
	Checking oil level or changing oil in Haldex coupling	39-63
	– Checking Haldex coupling oil level	39-64
	– Changing oil in Haldex coupling	39-66
	– Changing Haldex coupling oil filter	39-68