



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Location on gearbox .....	1
1.2 Identification code, assembly allocation, ratios, capacities .....	1
<b>2 Overview - power transmission</b> .....	<b>6</b>
<b>3 Calculating overall gear ratio „i“</b> .....	<b>8</b>
<b>4 General repair notes</b> .....	<b>9</b>
4.1 Components .....	9
<b>30 - Clutch</b> .....	<b>12</b>
<b>1 Fault finding, power transmission</b> .....	<b>12</b>
<b>2 Repairing clutch mechanism</b> .....	<b>13</b>
2.1 Overview .....	13
2.2 Assembly overview - pedal cluster .....	14
2.3 Distinguishing between clutch pedal switches F36 .....	15
2.4 Removing and installing clutch pedal switch F36 with rectangular housing .....	15
2.5 Removing and installing clutch pedal switch F36 with round housing .....	16
2.6 Removing and installing over-centre spring .....	16
2.7 Removing and installing clutch pedal .....	18
2.8 Assembly overview - hydraulic system .....	19
2.9 Removing and installing master cylinder .....	21
2.10 Bleeding clutch system .....	24
<b>3 Repairing clutch release mechanism</b> .....	<b>26</b>
<b>4 Repairing clutch</b> .....	<b>29</b>
<b>34 - Controls, housing</b> .....	<b>32</b>
<b>1 Fault finding, power transmission</b> .....	<b>32</b>
<b>2 Repairing selector mechanism</b> .....	<b>33</b>
2.1 Installation position of selector mechanism .....	33
2.2 Removing and installing gear knob and cover .....	35
2.3 Separating gaiter from gear lever and assembling with gear knob .....	36
2.4 Repairing gear lever and selector housing .....	37
2.5 Assembly overview - removing and installing selector cables .....	39
2.6 Removing and installing selector mechanism .....	40
2.7 Adjusting selector mechanism, gearbox with retaining pin (through gearbox date 18 05 3) .....	44
2.8 Adjusting selector mechanism, gearbox with angled rod from gearbox date 19 05 3) . . . .	47
2.9 Functional check .....	50
<b>3 Removing and installing gearbox</b> .....	<b>51</b>
3.1 Removing .....	53
3.2 Transporting gearbox .....	58
3.3 Installing .....	58
<b>4 Checking gear oil</b> .....	<b>65</b>
<b>5 Dismantling and assembling gearbox</b> .....	<b>66</b>
5.1 Overview - gearbox .....	66
5.2 Assembly overview .....	67
5.3 Removing and installing gearbox housing and selector mechanism through gearbox date 18 05 3 .....	68
5.4 Removing and installing gearbox housing and selector mechanism from gearbox date 19 05 3 .....	69
5.5 Removing and installing input shaft, output shafts, differential and selector rods .....	71
5.6 Installing to engine and gearbox support .....	73



5.7	Dismantling and assembling procedure for gearboxes through gearbox date 18 05 3	74
5.8	Dismantling and assembling procedure for gearboxes from gearbox date 19 05 3	79
<b>6</b>	<b>Repairing gearbox housing</b>	<b>90</b>
6.1	Repairing gearbox housing, through gearbox date 18 05 3	90
6.2	Repairing gearbox housing, from gearbox date 19 05 3	94
<b>7</b>	<b>Repairing clutch housing</b>	<b>105</b>
7.1	Repairing clutch housing, through gearbox date 18 05 3	105
7.2	Repairing clutch housing, from gearbox date 19 05 3	108
<b>8</b>	<b>Dismantling and assembling selector mechanism on gearbox side</b>	<b>113</b>
8.1	Dismantling and assembling selector mechanism on gearbox side, through gearbox date 18 05 3	113
8.2	Dismantling and assembling selector mechanism on gearbox side, from gearbox date 19 05 3	115
<b>9</b>	<b>Repairing selector forks</b>	<b>119</b>
9.1	Repairing selector forks, through gearbox date 18 05 3	119
9.2	Repairing selector forks, from gearbox date 19 05 3	121
<b>35 - Gears, shafts</b>		<b>124</b>
<b>1</b>	<b>Input shaft</b>	<b>124</b>
1.1	Dismantling and assembling input shaft, through gearbox date 18 05 3	124
1.2	Adjusting input shaft (through gearbox date 18 05 3)	131
1.3	Dismantling and assembling input shaft, from gearbox date 19 05 3	135
<b>2</b>	<b>Output shaft for 1st through 4th gears</b>	<b>142</b>
2.1	Dismantling and assembling output shaft for 1st through 4th gears	142
2.2	Adjusting output shaft for 1st through 4th gears	154
<b>3</b>	<b>Output shaft for 5th, 6th and reverse gears</b>	<b>160</b>
3.1	Dismantling and assembling output shaft for 5th, 6th and reverse gears	160
3.2	Adjusting output shaft for 5th, 6th and reverse gears	171
<b>39 - Final drive - differential</b>		<b>177</b>
<b>1</b>	<b>Renewing flange shaft oil seals with gearbox installed</b>	<b>177</b>
1.1	Renewing oil seal for left flange shaft	177
1.2	Renewing seal for right flange shaft	178
<b>2</b>	<b>Adjustment overview</b>	<b>181</b>
<b>3</b>	<b>Differential</b>	<b>182</b>
3.1	Dismantling and assembling differential	182
3.2	Adjusting differential	189