



Contents

01 - Self-diagnosis, Electrical check	1
1 Self-diagnosis function	1
1.1 Self-diagnosis function	1
1.2 Data bus	1
1.3 Technical data of self-diagnosis	3
1.4 Self-diagnosis - Guide	4
2 Locations of electrical/electronic components	5
2.1 Locations of electrical/electronic components	5
3 Performing self-diagnosis	13
3.1 Performing self-diagnosis	13
3.2 Safety precautions	13
3.3 Connecting vehicle diagnosis, testing and information system VAS 5051	14
3.4 Connecting fault reader V.A.G 1551 and selecting functions	15
3.5 Automatic test sequence	15
3.6 List of selectable functions	17
3.7 Interrogating fault memory	17
4 Fault table	18
4.1 Fault table	18
5 Erasing fault memory	23
5.1 Erasing fault memory	23
6 Initiating basic setting	24
6.1 Initiating basic setting	24
7 Read measured value block	25
7.1 Read measured value block	25
7.2 Test table	26
8 Gearbox: Electrical check	31
8.1 Gearbox: Electrical check	31
8.2 Electrical check for vehicles with automatic gearbox 09A	33
8.3 Test table	34
9 Definitions	37
9.1 Definitions	37