



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Notes on removing	3
1.2 Securing engine to assembly stand	7
1.3 Notes on installing	8
1.4 Assembly mountings	10
1.5 Additional information and assembly work for vehicles with air conditioner	11
13 - Crankshaft group	13
1 Dismantling and assembling engine	13
1.1 Assembly overview	13
1.2 Removing and installing poly V-belt	16
2 Removing and installing sealing flange and pressure plate/drive plate	19
2.1 Renewing crankshaft oil seal on belt pulley end	20
2.2 Removing and installing front sealing flange	22
2.3 Removing and installing drive plate	25
3 Removing and installing crankshaft	27
3.1 Crankshaft dimensions	28
4 Dismantling and assembling pistons and conrods	30
4.1 Checking pistons, piston rings and cylinder bores	31
4.2 Piston and cylinder dimensions	33
15 - Cylinder head, valve gear	34
1 Cylinder head	34
1.1 Removing and installing cylinder head	36
1.2 Removing, installing and tensioning toothed belt	39
1.3 Checking semi-automatic toothed belt tensioning roller	43
1.4 Checking compression	44
2 Repairing valve gear	46
2.1 Reworking valve seats	48
2.2 Renewing camshaft oil seal	50
2.3 Removing and installing camshaft	53
2.4 Checking valve guides	56
2.5 Renewing valve stem seals	57
17 - Lubrication	60
1 Removing and installing parts of lubrication system	60
1.1 Engine oil	60
1.2 Assembly overview - parts of lubrication system	60
1.3 Assembly overview - oil filter bracket	62
1.4 Removing and installing oil sump	63
1.5 Checking oil pressure and oil pressure switch	65
19 - Cooling	68
1 Removing and installing parts of cooling system	68
1.1 Electronically regulated cooling system	68
1.2 Parts of cooling system, body side	69



1.3	Parts of cooling system, engine side	71
1.4	Coolant hose schematic diagram	72
1.5	Draining and filling coolant	73
1.6	Removing and installing radiator	75
1.7	Removing and installing coolant pump	77
1.8	Dismantling and assembling coolant distribution housing	78
1.9	Checking map-controlled engine cooling thermostat	79
20	- Fuel supply system	81
1	Removing and installing parts of fuel supply system	81
1.1	Removing and installing fuel tank with attachments and fuel filter	81
1.2	Safety precautions when working on fuel supply system	84
1.3	Rules for cleanliness	85
1.4	Removing and installing fuel delivery unit	85
1.5	Removing and installing fuel gauge sender G	87
1.6	Removing and installing fuel tank	87
1.7	Checking fuel pump	88
2	Accelerator mechanism	95
2.1	Repairing accelerator mechanism	95
2.2	Function of EPC system	95
3	Activated charcoal filter system	97
3.1	Function	97
3.2	Repairing parts of activated charcoal filter system	97
3.3	Checking fuel tank breather	98
24	- Mixture preparation - injection	100
1	Repairing injection system	100
1.1	General notes on injection	100
1.2	Dismantling and assembling upper part of intake manifold	100
1.3	Dismantling and assembling lower part of intake manifold	102
1.4	Dismantling and assembling fuel rail with injectors	103
1.5	Dismantling and assembling air filter	104
1.6	Safety precautions	104
1.7	Rules for cleanliness	106
1.8	Technical data	106
2	Checking components	107
2.1	Checking injectors for leaks and injection rate	107
2.2	Checking fuel pressure regulator and holding pressure	109
2.3	Checking intake manifold change-over	112
3	Engine control unit	114
3.1	Renewing engine control unit	114
3.2	Adapting functions and components	114
3.3	Reading and erasing engine control unit fault memory	115
26	- Exhaust system	117
1	Removing and installing parts of exhaust system	117
1.1	Exhaust manifold, front exhaust pipe and catalytic converter with attachments	117
1.2	Silencer with mountings	120
2	Secondary air system	122
2.1	Function	122
2.2	Removing and installing parts of secondary air system	122
2.3	Checking combination valve	123
3	Exhaust gas recirculation system	125
3.1	Repairing parts of exhaust gas recirculation system	125



28 - Ignition system	126
1 Repairing ignition system	126
1.1 General notes on ignition system	126
1.2 Removing and installing parts of ignition system	126
1.3 Safety precautions	127
1.4 Test data, spark plugs	128