



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Notes on removing	4
1.2 Securing engine to assembly stand	8
1.3 Notes on installing	9
1.4 Torque settings	11
1.5 Assembly mountings	11
1.6 Additional notes and assembly work for vehicles with air conditioner	13
13 - Crankshaft group	14
1 Dismantling and assembling engine	14
1.1 Assembly overview	14
1.2 Removing and installing poly V-belt	18
2 Removing and installing sealing flanges and flywheel or drive plate	20
2.1 Renewing crankshaft oil seal - belt pulley end	21
2.2 Removing and installing front sealing flange	23
2.3 Removing and installing drive plate	26
3 Removing and installing crankshaft	28
3.1 Crankshaft dimensions	29
4 Dismantling and assembling pistons and conrods	30
4.1 Conventional conrods	30
4.2 Industrially cracked conrods	32
4.3 Piston and cylinder dimensions	35
15 - Cylinder head, valve gear	36
1 Removing and installing cylinder head	36
1.1 Removing, installing and tensioning toothed belt	38
1.2 Removing and installing cylinder head	42
1.3 Checking compression	46
2 Repairing valve gear	49
2.1 Reworking valve seats	52
2.2 Renewing camshaft oil seal	53
2.3 Checking hydraulic bucket tappets	59
2.4 Removing and installing camshafts	60
2.5 Checking valve guides	64
2.6 Renewing valve stem seals	65
17 - Lubrication	67
1 Removing and installing parts of lubrication system	67
1.1 Engine oil	67
1.2 Assembly overview - parts of lubrication system	67
1.3 Assembly overview - oil filter bracket	69
1.4 Removing and installing oil sump	70
1.5 Checking oil pressure and oil pressure switch	73
19 - Cooling	76
1 Removing and installing parts of cooling system	76



1.1	Parts of cooling system - body side	76
1.2	Parts of cooling system - engine side	78
1.3	Coolant hose schematic diagram	79
1.4	Draining and filling coolant	83
1.5	Removing and installing radiator	85
1.6	Removing and installing coolant pump	87
1.7	Removing and installing thermostat	88
20	- Fuel supply system	91
1	Removing and installing parts of fuel supply system	91
1.1	Removing and installing fuel tank with attachments and fuel filter	91
1.2	Safety precautions when working on fuel supply system	96
1.3	Rules for cleanliness	97
1.4	Removing and installing fuel delivery unit	97
1.5	Removing and installing fuel gauge sender	98
1.6	Removing and installing fuel tank	99
1.7	Crash fuel shut-off	101
1.8	Checking fuel pump	101
2	Accelerator mechanism	107
2.1	Repairing accelerator mechanism	107
2.2	Adjusting accelerator cable	107
3	Checking electronic power control (EPC)	110
3.1	Function of EPC system	110
4	Active charcoal filter system	112
4.1	Function	112
4.2	Repairing parts of the active charcoal filter system	112
4.3	Checking fuel tank breather system	113
21	- Turbocharging/supercharging	115
1	Charge air system with turbocharger	115
1.1	Removing and installing turbocharger with attachments	115
1.2	Removing and installing parts of charge air cooling	118
1.3	Schematic diagram of turbocharging system	119
1.4	Rules for cleanliness	121
1.5	Safety precautions	121
2	Checking charge pressure system	122
2.1	Checking charge pressure regulation	122
2.2	Checking charge pressure regulating valve pressure actuator	124
2.3	Checking overrun shut-off valve	124
2.4	Checking charge air system for leaks	125
24	- Mixture preparation - injection	127
1	Repairing injection system	127
1.1	Engine codes overview ARZ, AUM and AUQ	127
1.2	Fitting locations overview AGN	128
1.3	Fitting locations overview AGU	130
1.4	Fitting locations overview AQA	131
1.5	General notes on injection	132
1.6	Removing and installing parts of injection system for ARZ, AUM, AUQ engines	132
1.7	Removing and installing parts of the injection system for AGN engine	135
1.8	Removing and installing parts of the injection system for AGU engine	137
1.9	Removing and installing parts of the injection system for AQA engine	139
1.10	Dismantling and assembling intake manifold upper part for AGN engine	141
1.11	Dismantling and assembling intake manifold lower part for AGN engine	142
1.12	Dismantling and assembling air cleaner	144



1.13	Dismantling and assembling fuel rail with injectors	145
1.14	Safety precautions	145
1.15	Rules for cleanliness	147
1.16	Technical data	147
2	Checking components	148
2.1	Checking intake manifold change-over	148
2.2	Adapting components	148
2.3	Reading and erasing engine control unit fault memory	149
2.4	Checking injectors	150
2.5	Checking fuel pressure regulator and holding pressure	154
26	- Exhaust system	158
1	Removing and installing parts of exhaust system	158
1.1	Vehicles with turbocharger	158
1.2	Engine code AGN with front-wheel drive	160
1.3	Engine code AGN with four-wheel drive	161
2	Secondary air system	164
2.1	Function	164
2.2	Removing and installing parts of secondary air system	164
2.3	Secondary air pump relay J299	166
2.4	Checking combination valve	166
28	- Ignition system	168
1	Repairing ignition system	168
1.1	General notes on ignition system	168
1.2	Removing and installing parts of ignition system	168
1.3	Safety precautions	172
1.4	Test data, spark plugs	174