



## Contents

<b>00 - Technical data . . . . .</b>	<b>1</b>
1 <b>Technical data . . . . .</b>	1
1.1    Technical data . . . . .	1
1.2    Engine number . . . . .	1
1.3    Engine data . . . . .	1
<b>10 - Removing and installing engine . . . . .</b>	<b>3</b>
1 <b>Removing and installing engine . . . . .</b>	3
1.1    Removing and installing engine . . . . .	3
1.2    Notes on removing . . . . .	4
1.3    Fastening the engine to the assembly stand . . . . .	8
1.4    Notes on installation . . . . .	8
1.5    Aligning engine and gearbox mountings . . . . .	10
1.6    Prescribed torque's . . . . .	11
1.7    Assembly mounting . . . . .	12
1.8    Additional information and assembly work on models with an air conditioning system . . . . .	13
<b>13 - Crankshaft group . . . . .</b>	<b>15</b>
1 <b>Dismantling and assembling the engine . . . . .</b>	15
1.1    Dismantling and assembling the engine . . . . .	15
1.2    Removing and installing poly V-belt . . . . .	24
2 <b>Removing and installing sealing flanges and flywheel/drive plate . . . . .</b>	26
2.1    Removing and installing sealing flanges and flywheel/drive plate . . . . .	26
2.2    Renewing crankshaft oil seal -pulley end . . . . .	31
2.3    Removing and installing front sealing flange . . . . .	34
2.4    Removing and installing drive plate . . . . .	37
3 <b>Removing and installing crankshaft . . . . .</b>	39
3.1    Removing and installing crankshaft . . . . .	39
3.2    Colour markings . . . . .	45
3.3    Crankshaft dimensions . . . . .	45
4 <b>Dismantling and assembling piston and conrod . . . . .</b>	45
4.1    Dismantling and assembling piston and conrod . . . . .	45
4.2    Piston and cylinder dimensions . . . . .	51
<b>15 - Cylinder head, Valve gear . . . . .</b>	<b>52</b>
1 <b>Removing and installing cylinder head . . . . .</b>	52
1.1    Removing and installing cylinder head . . . . .	52
1.2    Removing, installing and tensioning toothed belts . . . . .	56
1.3    Checking semi-automatic toothed belt tensioning roller . . . . .	64
1.4    Removing and installing cylinder head . . . . .	65
1.5    Check compression pressures . . . . .	69
2 <b>Servicing valve gear . . . . .</b>	71
2.1    Servicing valve gear . . . . .	71
2.2    Reworking valve seats . . . . .	78
2.3    Removing and installing camshaft . . . . .	79
2.4    Checking hydraulic bucket tappets . . . . .	81
2.5    Checking valve guides . . . . .	82
2.6    Renewing valve guides . . . . .	82
2.7    Renewing valve stem seals . . . . .	83
<b>17 - Lubrication . . . . .</b>	<b>87</b>
1 <b>Removing and installing parts of the lubrication system . . . . .</b>	87
1.1    Removing and installing parts of the lubrication system . . . . .	87



---

1.2	Dismantling and assembling oil filter housing . . . . .	92
1.3	Removing and installing oil pan . . . . .	95
1.4	Removing and installing oil pump . . . . .	98
1.5	Checking oil pressure and oil pressure switch . . . . .	99
<b>19 - Cooling system . . . . .</b>		<b>102</b>
1	<b>Removing and installing parts of cooling system . . . . .</b>	<b>102</b>
1.1	Removing and installing parts of cooling system . . . . .	102
1.2	Parts of cooling system body side . . . . .	102
1.3	Parts of cooling system engine side . . . . .	107
1.4	Coolant hose connection diagram . . . . .	111
1.5	Draining and filling coolant system . . . . .	112
1.6	Removing and installing the radiator . . . . .	115
1.7	Removing and installing coolant pump . . . . .	117
1.8	Removing and installing thermostat . . . . .	119
<b>20 - Fuel supply system . . . . .</b>		<b>122</b>
1	<b>Removing and installing parts of fuel supply system . . . . .</b>	<b>122</b>
1.1	Removing and installing parts of fuel supply system . . . . .	122
1.2	Removing and installing fuel tank with its attachments and fuel filter . . . . .	123
1.3	Safety precautions when working on the fuel supply system . . . . .	129
1.4	Rules for cleanliness . . . . .	130
1.5	Removing and installing fuel delivery unit . . . . .	130
1.6	Removing and installing fuel gauge sender . . . . .	134
1.7	Removing and installing fuel filter . . . . .	134
1.8	Removing and installing fuel tank . . . . .	136
1.9	Crash fuel shut-off . . . . .	139
1.10	Checking fuel pump . . . . .	140
1.11	Bleed fuel system . . . . .	147
2	<b>Accelerator mechanism . . . . .</b>	<b>150</b>
2.1	Accelerator mechanism . . . . .	150
2.2	Servicing accelerator mechanism . . . . .	151
2.3	Function of EPC system . . . . .	152
3	<b>Activated charcoal canister system . . . . .</b>	<b>153</b>
3.1	Activated charcoal canister system . . . . .	153
3.2	Function . . . . .	153
3.3	Servicing parts of the activated charcoal canister system . . . . .	154
3.4	Assembly overview of activated charcoal canister system . . . . .	157
<b>24 - Mixture preparation, Injection . . . . .</b>		<b>160</b>
1	<b>Servicing injection system . . . . .</b>	<b>160</b>
1.1	Servicing injection system . . . . .	160
1.2	Fitting locations overview . . . . .	160
1.3	General notes on injection . . . . .	169
1.4	Dismantling and assembling intake manifold upper part . . . . .	170
1.5	Dismantling and assembling intake manifold lower part . . . . .	172
1.6	Dismantling and assembling air cleaner . . . . .	174
1.7	Safety precautions . . . . .	176
1.8	Rules for cleanliness . . . . .	177
1.9	Removing and installing intake manifold upper part . . . . .	178
1.10	Technical data . . . . .	180
2	<b>Checking components . . . . .</b>	<b>180</b>
2.1	Checking components . . . . .	180
2.2	Checking injectors for leaks and quantity injected . . . . .	181
2.3	Checking fuel pressure regulator and holding pressure . . . . .	183
3	<b>Engine control unit . . . . .</b>	<b>188</b>

---



3.1	Engine control unit . . . . .	188
3.2	Replace engine control unit . . . . .	188
3.3	Adapting components and functions . . . . .	189
3.4	Interrogating and erasing engine control unit fault memory . . . . .	190
<b>26 -</b>	<b>Exhaust system . . . . .</b>	<b>193</b>
1	<b>Removing and installing parts of exhaust system . . . . .</b>	<b>193</b>
1.1	Removing and installing parts of exhaust system . . . . .	193
1.2	Exhaust manifold, front exhaust pipe and catalytic converter with attachments . . . . .	193
1.3	Silencer with mountings . . . . .	198
2	<b>Secondary air system . . . . .</b>	<b>202</b>
2.1	Secondary air system . . . . .	202
2.2	Function . . . . .	202
2.3	Removing and installing parts of the secondary air system . . . . .	202
2.4	Checking combination valve . . . . .	206
<b>28 -</b>	<b>Ignition system . . . . .</b>	<b>207</b>
1	<b>Servicing ignition system . . . . .</b>	<b>207</b>
1.1	Servicing ignition system . . . . .	207
1.2	General notes on ignition system . . . . .	207
1.3	Removing and installing parts of the ignition system . . . . .	207
1.4	Safety precautions . . . . .	210
1.5	Test data, spark plugs . . . . .	211