



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Notes on removing	4
1.2 Securing engine to assembly stand	8
1.3 Notes on installing	9
1.4 Aligning engine and gearbox mountings	11
1.5 Torque settings	12
1.6 Additional information and removal instructions for vehicles with air conditioner	13
13 - Crankshaft group	14
1 Dismantling and assembling engine	14
1.1 Parts I and II - Assembly overview	14
1.2 Part I: Assembly overview - Chain drive	16
1.3 Part II: Crankshaft drive	18
1.4 Removing and installing poly V-belt	20
2 Removing and installing sealing flange and dual mass flywheel/drive plate	22
2.1 Assembly overview	22
2.2 Renewing crankshaft oil seal, vibration damper end	24
2.3 Removing and installing drive plate	25
2.4 Removing and installing oil seal, flywheel end	27
3 Removing and installing crankshaft	29
3.1 Assembly overview	29
4 Dismantling and assembling pistons and conrods	32
4.1 Assembly overview	32
4.2 Piston and cylinder dimensions	35
15 - Cylinder head, valve gear	36
1 Removing and installing cylinder head	36
1.1 Assembly overview	36
1.2 Assembly overview - Cover part	39
1.3 Removing and installing cylinder head cover	42
1.4 Removing and installing cylinder head	46
1.5 Checking valve timing	52
1.6 Adjusting valve timing	53
1.7 Checking compression	58
2 Repairing valve gear	61
2.1 Assembly overview	61
2.2 Reworking valve seats	65
2.3 Removing and installing camshafts	67
2.4 Checking valve guides	73
2.5 Renewing valve stem seals	74
17 - Lubrication	77
1 Removing and installing parts of lubrication system	77
1.1 Engine oil	77
1.2 Assembly overview	77
1.3 Assembly overview - Oil filter housing	80



1.4	Assembly overview - Oil pump	81
1.5	Removing and installing sump	82
1.6	Checking oil pressure and oil pressure switch	84
19 - Cooling	87
1	Removing and installing parts of cooling system	87
1.1	Assembly overview - Parts of cooling system, body side	87
1.2	Assembly overview - Parts of cooling system, engine side	89
1.3	Coolant hose schematic diagram	91
1.4	Assembly overview - Thermostat housing	91
1.5	Draining and filling coolant	93
1.6	Removing and installing radiator and fan	96
1.7	Removing and installing coolant pump	98
1.8	Checking continued coolant circulation pump V51	99
1.9	Checking radiator fan	101
20 - Fuel supply system	103
1	Removing and installing parts of fuel supply system	103
1.1	Assembly overview - Fuel tank with attachments and fuel filter	103
1.2	Safety precautions when working on fuel supply system	109
1.3	Rules for cleanliness	110
1.4	Removing, installing and checking suction jet pump: vehicles with four-wheel drive	110
1.5	Crash fuel shut-off	113
1.6	Removing and installing fuel delivery unit	113
1.7	Removing and installing fuel gauge sender G	116
1.8	Removing and installing fuel tank	116
1.9	Checking fuel pump	118
2	Checking electronic power control (EPC)	125
2.1	Function of EPC system	125
2.2	Assembly overview	125
3	Activated charcoal filter system	127
3.1	Function	127
3.2	Assembly overview	127
3.3	Checking fuel tank breather	128
24 - Mixture preparation - injection	131
1	Repairing injection system	131
1.1	Fitting locations overview	131
1.2	General notes on injection	133
1.3	Assembly overview - Parts of injection system	134
1.4	Assembly overview - Intake manifold	137
1.5	Assembly overview - Fuel rail	138
1.6	Assembly overview - Air cleaner	139
1.7	Safety precautions	140
1.8	Rules for cleanliness	141
1.9	Technical data	141
2	Checking components	142
2.1	Checking injectors	142
2.2	Checking fuel pressure regulator and holding pressure	144
3	Engine control unit	148
3.1	Removing and installing engine control unit	148
3.2	Adapting components	148
3.3	Reading and erasing engine control unit fault memory	149
26 - Exhaust system	151



1	Removing and installing parts of exhaust system	151
1.1	Assembly overview - Exhaust manifold, front exhaust pipe with catalytic converter and attachments: vehicles with front-wheel drive	152
1.2	Assembly overview - Exhaust manifold, front exhaust pipe with catalytic converter and attachments: vehicles with four-wheel drive	153
1.3	Assembly overview - Silencer with mountings: vehicles with front-wheel drive	155
1.4	Assembly overview - Silencer with mountings: vehicles with four-wheel drive	157
2	Secondary air system	158
2.1	Function	158
2.2	Assembly overview - Parts of secondary air system	158
2.3	Checking combination valve	160
28 - Ignition system		162
1	Repairing ignition system	162
1.1	Assembly overview - Parts of ignition system	162
1.2	Safety precautions	163
1.3	Test data, spark plugs	164