



## Contents

<b>00 - Technical data</b>	1
1 <b>Technical data</b>	1
1.1    Engine number	1
1.2    Engine data	1
<b>10 - Removing and installing engine</b>	3
1 <b>Removing and installing engine</b>	3
1.1    Notes on removing	4
1.2    Securing engine on engine and gearbox support VAS 6095	8
1.3    Notes on installing	9
1.4    Tightening torque	11
1.5    Aligning engine and gearbox mountings	11
1.6    Assembly mountings	12
1.7    Additional information and assembly work for vehicles with air conditioner	13
<b>13 - Crankshaft group</b>	14
1 <b>Dismantling and assembling engine</b>	14
1.1    Parts I and II - assembly overview - engine codes AQP and AUE	14
1.2    Parts I and II - assembly overview - engine codes BDE, BFH, BJS and BML	15
1.3    Part I: chain drive - assembly overview - engine codes AQP and AUE	17
1.4    Part I: chain drive - assembly overview - engine codes BDE, BFH, BJS and BML	19
1.5    Part II: Assembly overview - crankshaft drive	21
1.6    Removing and installing poly-V belt	23
2 <b>Removing and installing sealing flanges and dual-mass flywheel</b>	24
2.1    Assembly overview	24
2.2    Removing and installing seal, flywheel end	25
2.3    Removing and installing drive plate	26
2.4    Renewing crankshaft oil seal, vibration damper end	28
2.5    Renewing crankshaft sealing flange -vibration damper side-	30
3 <b>Removing and installing crankshaft</b>	33
3.1    Assembly overview	33
3.2    Fitting sender wheel to crankshaft	34
3.3    Pulling needle bearing out of and driving into crankshaft	35
4 <b>Dismantling and assembling pistons and conrods</b>	38
4.1    Assembly overview	38
4.2    Piston and cylinder dimensions	41
<b>15 - Cylinder head, valve gear</b>	42
1 <b>Cylinder head (engine codes AQP, AUE)</b>	42
1.1    Assembly overview - cylinder head	42
1.2    Removing and installing cylinder head	45
1.3    Checking valve timing	51
1.4    Adjusting valve timing	52
1.5    Removing and installing cylinder head cover	58
1.6    Checking compression	60
2 <b>Cylinder head (engine codes BDE, BFH, BJS, BML)</b>	62
2.1    Assembly overview - cylinder head	62
2.2    Removing and installing cylinder head	66
2.3    Assembly overview - cover section	70
2.4    Checking valve timing	72
2.5    Renewing timing chains	73
2.6    Removing and installing cylinder head cover	83



2.7	Checking compression .....	85
3	<b>Repairing valve gear (engine codes AQP, AUE) .....</b>	<b>88</b>
3.1	Assembly overview .....	88
3.2	Removing and installing camshafts for engine codes AQP and AUE .....	90
3.3	Renewing valve stem seals .....	96
3.4	Checking valve guides .....	99
3.5	Reworking valve seats .....	99
4	<b>Repairing valve gear (engine codes BDE, BFH, BJS, BML) .....</b>	<b>102</b>
4.1	Assembly overview - valve gear .....	102
4.2	Removing and installing camshaft adjuster .....	104
4.3	Removing and installing camshafts .....	112
4.4	Renewing valve stem seals .....	116
4.5	Checking valve guides .....	118
4.6	Reworking valve seats (engine codes BFH, BJS, BML) .....	119
4.7	Reworking valve seats (engine code BDE) .....	121
<b>17</b>	<b>- Lubrication .....</b>	<b>124</b>
1	<b>Removing and installing parts of lubrication system .....</b>	<b>124</b>
1.1	Engine oil: .....	124
1.2	Assembly overview .....	124
1.3	Assembly overview - oil filter housing .....	127
1.4	Assembly overview - oil pump .....	129
1.5	Removing and installing oil pan .....	130
1.6	Checking oil pressure and oil pressure switch .....	132
<b>19</b>	<b>- Cooling .....</b>	<b>135</b>
1	<b>Removing and installing parts of cooling system .....</b>	<b>135</b>
1.1	Assembly overview - parts of cooling system, body side .....	135
1.2	Assembly overview - parts of cooling system, engine side .....	137
1.3	Coolant hose schematic diagram .....	139
1.4	Assembly overview - thermostat housing .....	140
1.5	Removing and installing thermostat housing .....	140
1.6	Draining and adding coolant .....	142
1.7	Removing and installing radiator .....	145
1.8	Checking continued coolant circulation pump .....	147
1.9	Checking radiator fan .....	148
1.10	Removing and installing coolant pump .....	149
<b>20</b>	<b>- Fuel supply system .....</b>	<b>153</b>
1	<b>Removing and installing parts of fuel supply system .....</b>	<b>153</b>
1.1	Assembly overview - fuel tank with attachments and fuel filter .....	153
1.2	Safety regulations for working on fuel supply .....	156
1.3	Rules for cleanliness .....	156
1.4	Removing and installing suction-jet pump .....	156
1.5	Removing and installing fuel delivery unit .....	158
1.6	Removing and installing fuel gauge sender .....	161
1.7	Removing and installing fuel tank .....	162
1.8	Crash fuel shut-off .....	164
1.9	Checking fuel pump .....	164
2	<b>Active charcoal filter system (vehicles with engine codes AQP, AUE, BDE, BFH and BML) .....</b>	<b>171</b>
2.1	Functional check .....	171
2.2	Assembly overview .....	171
2.3	Checking fuel tank breather .....	172
3	<b>Activated charcoal filter system (vehicles with engine code BJS) .....</b>	<b>174</b>



3.1	Functional check .....	174
3.2	Assembly overview - parts of activated charcoal filter system .....	175
3.3	Assembly overview - parts of fuel system diagnostic pump .....	176
3.4	Removing and installing fuel system diagnostic pump and activated charcoal filter .....	177
<b>4</b>	<b>Electronic power control (EPC) .....</b>	<b>178</b>
4.1	Function of EPC system .....	178
4.2	Assembly overview .....	178
<b>24 - Mixture preparation - injection .....</b>	<b>180</b>	
1	<b>Repairing injection system .....</b>	<b>180</b>
1.1	Overview of fitting locations .....	180
1.2	General notes on injection .....	182
1.3	Assembly overview - parts of injection system .....	183
1.4	Assembly overview - intake manifold .....	186
1.5	Removing and installing intake manifold .....	187
1.6	Assembly overview - fuel rail for engine codes AQP, AUE and BDE .....	190
1.7	Assembly overview - fuel rail for engine codes BFH, BJS and BML .....	191
1.8	Assembly overview - air filter .....	192
1.9	Safety precautions .....	193
1.10	Rules for cleanliness .....	194
1.11	Technical data .....	194
<b>2</b>	<b>Checking components .....</b>	<b>195</b>
2.1	Checking injectors .....	195
2.2	Checking fuel pressure regulator and holding pressure .....	197
<b>3</b>	<b>Engine (motor) control unit .....</b>	<b>201</b>
3.1	Removing and installing engine control unit .....	201
3.2	Adapting functions and components .....	201
3.3	Reading and erasing engine control unit fault memory .....	202
<b>26 - Exhaust system .....</b>	<b>204</b>	
1	<b>Removing and installing parts of exhaust system for engine codes AQP, AUE and BDE ..</b>	<b>204</b>
1.1	Assembly overview - exhaust manifold, front exhaust pipe with dual catalytic converter and attachments .....	204
1.2	Assembly overview - silencers with mountings .....	206
<b>2</b>	<b>Removing and installing parts of exhaust system for engine codes BFH, BJS and BML ..</b>	<b>207</b>
2.1	Assembly overview - exhaust manifold, front exhaust pipe with dual catalytic converter and attachments .....	207
2.2	Assembly overview - silencers with mountings .....	209
<b>3</b>	<b>Secondary air system .....</b>	<b>211</b>
3.1	Functional check .....	211
3.2	Assembly overview - parts of secondary air system .....	211
3.3	Checking combination valve .....	213
<b>28 - Ignition system .....</b>	<b>215</b>	
1	<b>Repairing ignition system .....</b>	<b>215</b>
1.1	Assembly overview - parts of ignition system for engine codes AQP and AUE .....	215
1.2	Assembly overview - parts of ignition system for engine codes BDE, BFH, BJS and BML .....	218
1.3	Removing and installing ignition coils with output stage .....	219
1.4	Safety precautions .....	220
1.5	Test data, spark plugs .....	221