

Contents

01	Self-diagnosis	Page
	General to self-diagnosis	01-1
	– Features of self-diagnosis.....	01-1
	– Technical data of self-diagnosis	01-3
	– Connecting fault reader V.A.G 1551 and selecting engine electronics control unit	01-5
	– Connecting Vehicle Diagnosis, Testing and Information system VAS 5051 and selecting engine electronics control unit	01-10
	Fault memory	01-14
	– Interrogating and erasing fault memory	01-14
	Fault table, fault codes 00282...01262	01-18
	Fault table, fault codes 16486...18259	01-43
	Final control diagnosis	01-77
	– Performing final control diagnosis.....	01-77
	Measured value blocks	01-90
	– Safety precautions	01-90
	– Read measured value block	01-90
	– Evaluating measured value blocks, display groups 00 - 05.....	01-93
	– Evaluating measured value blocks, display groups 06 - 11	01-109
	– Evaluating measured value blocks	01-123
24	Mixture preparation, Injection	Page
	Servicing injection system	24-1
	– Fitting locations overview	24-1
	– General notes on injection	24-7
	– Removing and installing parts of the injection system	24-9
	– Dismantling and assembling air cleaner	24-25
	– Dismantling and assembling fuel rail with injectors	24-27
	– Dismantling and assembling intake manifold upper part	24-29
	– Dismantling and assembling intake manifold lower part	24-32
	– Safety precautions	24-35
	– Rules for cleanliness.....	24-37
	– Technical data	24-38
	Checking components	24-39
	– Checking Lambda probe heating	24-39
	– Checking air mass meter.....	24-42
	– Checking throttle valve control part.....	24-47
	– Checking coolant temperature sender	24-63
	– Checking intake air temperature sender.....	24-70
	– Checking engine speed sender	24-80
	– Testing altitude sender	24-82
	– Checking injectors	24-86
	– Checking fuel pressure regulator and holding pressure	24-96
	– Checking intake air system for leaks (unmetered air).....	24-100
	Checking functions	24-102
	– Idling check	24-102
	– Adapting idling speed	24-105
	– Checking Lambda control.....	24-108
	– Checking engine operating mode.....	24-115
	– Checking intake manifold change-over	24-119
	– Checking driving characteristics after a cold start	24-121
	Engine control unit	24-125
	– Checking control unit voltage supply	24-125
	– Procedure after voltage supply open circuit	24-127
	– Replacing engine control unit.....	24-130
	– Coding engine control unit	24-132
	– Coding variations of engine control unit	24-134
	– Adapting engine control unit to throttle valve control part	24-135
	– Matching engine control unit to electronic immobilizer	24-138
	Checking additional signals	24-141

- Checking speed signal	24-141
- Checking signal from/to air conditioning system	24-144
- Checking signal from power steering pressure switch	24-147
- Checking signal from clutch pedal switch	24-150
- Checking signal from brake light switch and brake pedal switch	24-152
- Checking ignition retardation during gear selection	24-154
- Checking driving range signal	24-157
- Checking data bus	24-160

28

Ignition system	Page
Servicing ignition system	28-1
- General notes on ignition system	28-1
- Removing and installing parts of the ignition system	28-2
- Safety precautions	28-8
- Test data, spark plugs	28-10
- Checking Hall sender	28-11
- Checking ignition coils with output stage	28-13
- Checking knock sensor	28-21