



## Contents

|   |           |
|---|-----------|
| <b>01 - Self-diagnosis . . . . .</b>  | <b>1</b>  |
| <b>1 General to self-diagnosis . . . . .</b>  | <b>1</b>  |
| 1.1 General to self-diagnosis . . . . .   | 1         |
| 1.2 Features of self-diagnosis . . . . .  | 1         |
| 1.3 Technical data of self-diagnosis . . . . .  | 1         |
| 1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit . . . . .                                    | 2         |
| 1.5 Connecting vehicle diagnosis, testing and information system VAS 5051 and selecting engine electronics control unit . . . . . | 5         |
| <b>2 Fault memory . . . . .</b>   | <b>8</b>  |
| 2.1 Fault memory . . . . .  | 8         |
| 2.2 Interrogating and erasing fault memory . . . . .  | 8         |
| <b>3 Fault table: V.A.G codes and SAE P0 codes . . . . .</b>  | <b>10</b> |
| 3.1 Fault table: V.A.G codes and SAE P0 codes . . . . .   | 10        |
| <b>4 Fault table: Fault code P1176...P1851 . . . . .</b>  | <b>14</b> |
| 4.1 Fault table: Fault code P1176...P1851 . . . . .   | 14        |
| <b>5 Final control diagnosis . . . . .</b>  | <b>16</b> |
| 5.1 Final control diagnosis . . . . .   | 16        |
| 5.2 Performing final control diagnosis . . . . .  | 16        |
| <b>6 Readiness code . . . . .</b>   | <b>23</b> |
| 6.1 Readiness code . . . . .  | 23        |
| 6.2 Read-out readiness code . . . . .   | 24        |
| 6.3 Generating readiness code . . . . .   | 25        |
| <b>7 Measured value blocks . . . . .</b>  | <b>30</b> |
| 7.1 Measured value blocks . . . . .   | 30        |
| 7.2 Safety precautions . . . . .  | 30        |
| 7.3 Read measured value block . . . . .   | 30        |
| <b>8 Evaluating measured value blocks, display groups 0...9 -Basic functions- . . . . .</b>                                       | <b>31</b> |
| 8.1 Evaluating measured value blocks, display groups 0...9 -Basic functions- . . . . .  | 31        |
| <b>9 Evaluating measured value blocks, display groups 10...29 -Ignition- . . . . .</b>  | <b>35</b> |
| 9.1 Evaluating measured value blocks, display groups 10...29 -Ignition- . . . . .   | 35        |
| <b>10 Evaluating measured value blocks, display groups 30...49 -Lambda regulation- . . . . .</b>                                  | <b>37</b> |
| 10.1 Evaluating measured value blocks, display groups 30...49 -Lambda regulation- . . . . .                                       | 37        |
| <b>11 Evaluating measured value blocks, display groups 50...69 -Speed regulation- . . . . .</b>                                   | <b>42</b> |
| 11.1 Evaluating measured value blocks, display groups 50...69 -Speed regulation- . . . . .  | 42        |
| <b>12 Evaluating measured value blocks, display groups 70...79 -Reducing emissions- . . . . .</b>                                 | <b>45</b> |
| 12.1 Evaluating measured value blocks, display groups 70...79 -Reducing emissions- . . . . .                                      | 45        |
| <b>13 Evaluating measured value blocks, display groups 80...100 -Readiness code- . . . . .</b>                                    | <b>46</b> |
| 13.1 Evaluating measured value blocks, display groups 80...100 -Readiness code- . . . . .   | 46        |
| <b>24 - Mixture preparation, Injection . . . . .</b>  | <b>47</b> |
| <b>1 Servicing injection system . . . . .</b>   | <b>47</b> |
| 1.1 Servicing injection system . . . . .  | 47        |
| 1.2 Fitting locations overview . . . . .  | 47        |
| 1.3 General notes on injection . . . . .  | 52        |
| 1.4 Dismantling and assembling intake manifold - Upper part . . . . .   | 53        |
| 1.5 Dismantling and assembling intake manifold - lower part . . . . .   | 55        |
| 1.6 Dismantling and assembling air cleaner . . . . .  | 57        |
| 1.7 Safety precautions . . . . .  | 58        |
| 1.8 Rules for cleanliness . . . . .   | 59        |
| 1.9 Technical data . . . . .  | 59        |
| <b>2 Checking components . . . . .</b>  | <b>59</b> |



|                                       |  |            |
|---------------------------------------|--|------------|
| 2.1                                   | Checking components . . . . .  | 59         |
| 2.2                                   | Checking Lambda probe heating for Lambda probe before catalyst . . . . . | 59         |
| 2.3                                   | Checking Lambda probe heating for Lambda probe after catalyst . . . . .  | 62         |
| 2.4                                   | Checking air mass meter . . . . .  | 65         |
| 2.5                                   | Checking throttle valve control part . . . . .                           | 67         |
| 2.6                                   | Checking coolant temperature sender . . . . .                            | 74         |
| 2.7                                   | Checking intake air temperature sender . . . . .                         | 78         |
| 2.8                                   | Checking engine speed sender . . . . .                                   | 82         |
| 2.9                                   | Checking injectors . . . . .   | 83         |
| 2.10                                  | Checking fuel pressure regulator and holding pressure . . . . .          | 88         |
| 2.11                                  | Checking intake air system for leaks (unmetered air) . . . . .           | 91         |
| <b>3</b>                              | <b>Checking functions . . . . .</b>                                      | <b>92</b>  |
| 3.1                                   | Checking functions . . . . .   | 92         |
| 3.2                                   | Idling check . . . . .   | 92         |
| 3.3                                   | Adapting idling speed . . . . .  | 94         |
| 3.4                                   | Checking Lambda probe and Lambda regulation before catalyst . . . . .    | 95         |
| 3.5                                   | Checking Lambda probe and Lambda regulation after catalyst . . . . .     | 98         |
| 3.6                                   | Checking Lambda probe ageing Lambda probe 1 . . . . .                    | 103        |
| 3.7                                   | Checking engine operating mode . . . . .                                 | 104        |
| <b>4</b>                              | <b>Engine control unit . . . . .</b>                                     | <b>105</b> |
| 4.1                                   | Engine control unit . . . . .  | 105        |
| 4.2                                   | Checking control unit voltage supply . . . . .                           | 105        |
| 4.3                                   | Procedure after voltage supply open circuit . . . . .                    | 107        |
| 4.4                                   | Replacing engine control unit . . . . .                                  | 108        |
| 4.5                                   | Coding engine control unit . . . . .                                     | 109        |
| 4.6                                   | Adapting engine control unit to throttle valve control part . . . . .    | 110        |
| 4.7                                   | Matching engine control unit to electronic immobilizer . . . . .         | 111        |
| <b>5</b>                              | <b>Checking additional signals . . . . .</b>                             | <b>112</b> |
| 5.1                                   | Checking additional signals . . . . .                                    | 112        |
| 5.2                                   | Checking speed signal . . . . .  | 112        |
| 5.3                                   | Checking signal from/to air conditioning system . . . . .                | 114        |
| 5.4                                   | Checking data bus . . . . .  | 116        |
| 5.5                                   | Checking signal from clutch pedal switch . . . . .                       | 122        |
| 5.6                                   | Checking signal from brake light switch and brake pedal switch . . . . . | 123        |
| 5.7                                   | Checking driving range signal . . . . .                                  | 124        |
| <b>28 - Ignition system . . . . .</b> | <b>126</b>   |            |
| <b>1</b>                              | <b>Servicing ignition system . . . . .</b>                               | <b>126</b> |
| 1.1                                   | Servicing ignition system . . . . .                                      | 126        |
| 1.2                                   | General notes on ignition system . . . . .                               | 126        |
| 1.3                                   | Removing and installing parts of the ignition system . . . . .           | 127        |
| 1.4                                   | Safety precautions . . . . .   | 129        |
| 1.5                                   | Test data, spark plugs . . . . .   | 130        |
| 1.6                                   | Checking Hall sender . . . . .   | 131        |
| 1.7                                   | Checking ignition coils with output stage . . . . .                      | 132        |
| 1.8                                   | Checking knock sensor . . . . .  | 135        |
| 1.9                                   | Check misfiring recognition . . . . .                                    | 137        |