



Contents

01 - Self-diagnosis	1
1 General to self-diagnosis	1
1.1 General to self-diagnosis	1
1.2 Features of self-diagnosis	1
1.3 Technical data of self-diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine control unit	2
2 Fault memory	5
2.1 Fault memory	5
2.2 Interrogating and erasing fault memory	5
3 Fault table: Fault codes 00281 ... 00527	7
3.1 Fault table: Fault codes 00281 ... 00527	7
4 Fault table: Fault codes 00530 ... 00578	10
4.1 Fault table: Fault codes 00530 ... 00578	10
5 Fault table: Fault codes 00579 ... 01177	13
5.1 Fault table: Fault codes 00579 ... 01177	13
6 Fault table: Fault codes 01235 ... 18259	15
6.1 Fault table: Fault codes 01235 ... 18259	15
7 Measured value blocks	18
7.1 Measured value blocks	18
7.2 Safety precautions	18
7.3 Read measured value block	18
7.4 Evaluating measured value blocks, display groups 000 - 003	19
7.5 Evaluating measured value blocks, display groups 006 - 135	23
8 Final control diagnosis	31
8.1 Final control diagnosis	31
9 Evaluating measured value blocks, display groups 50...69 -Speed regulation-	39
9.1 Evaluating measured value blocks, display groups 50...69 -Speed regulation-	39
24 - Mixture preparation, Injection	43
1 Servicing injection system	43
1.1 Servicing injection system	43
1.2 Fitting locations overview	43
1.3 Servicing injection system	45
1.4 Removing and installing parts of the injection system	47
1.5 Dismantling and assembling intake manifold upper part and intake manifold lower part	53
1.6 Dismantling and assembling fuel rail	58
1.7 Dismantling and assembling air cleaner	60
1.8 Safety precautions	62
1.9 Rules for cleanliness	62
1.10 Technical data	62
2 Checking components	63
2.1 Checking components	63
2.2 Checking Lambda probe heating	63
2.3 Checking air mass meter	65
2.4 Checking throttle valve control part	68
2.5 Checking coolant temperature sender	75
2.6 Checking intake manifold temperature sender	78
2.7 Checking engine speed sender	81
2.8 Removing and installing injectors	83
2.9 Checking injectors	85
2.10 Checking fuel pressure regulator and holding pressure	91
2.11 Checking intake manifold change-over	94



2.12	Checking intake air system for leaks (unmetered air)	95
3	Checking functions	96
3.1	Checking functions	96
3.2	Idling check	96
3.3	Checking Lambda probe and Lambda control	98
3.4	Checking engine operating mode	101
3.5	Checking driving characteristics after a cold start	103
4	Replacing, coding and matching engine control unit	104
4.1	Replacing, coding and matching engine control unit	104
4.2	Replacing engine control unit	104
4.3	Coding engine control unit	105
4.4	Coding variations of engine control unit	105
4.5	Matching engine control unit to throttle valve control part	106
4.6	Matching engine control unit to electronic immobilizer	108
4.7	Checking engine control unit voltage supply	109
4.8	Procedure after voltage supply open circuit	112
5	Checking additional signals	112
5.1	Checking additional signals	112
5.2	Checking air conditioner and air conditioner compressor signals	112
5.3	Checking selector lever position on automatic gearbox	115
5.4	Testing speed signal	116
5.5	Checking engine speed signal	117
28	Ignition system	118
1	Servicing ignition system	118
1.1	Servicing ignition system	118
1.2	General notes on ignition system	118
1.3	Removing and installing parts of the ignition system	119
1.4	Safety precautions	124
1.5	Test data, spark plugs	125
1.6	Checking Hall sender	126
1.7	Checking knock sensors	128
1.8	Checking ignition coils with output stage	131