



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Notes on removing	3
1.2 Securing engine to assembly stand	7
1.3 Notes on installing	8
1.4 Torque settings	9
1.5 Aligning engine and gearbox mountings	10
1.6 Torque settings for assembly mountings	10
1.7 Additional information and removal instructions for vehicles with air conditioner	11
13 - Crankshaft group	13
1 Dismantling and assembling engine	13
1.1 Assembly overview	13
1.2 Removing and installing poly-V-belt	18
2 Removing and installing sealing flange and pressure plate/drive plate	20
2.1 Renewing crankshaft oil seal - belt pulley end	21
2.2 Removing and installing front sealing flange	23
2.3 Removing and installing drive plate	26
3 Removing and installing crankshaft	28
3.1 Crankshaft dimensions	29
4 Dismantling and assembling pistons and conrods	30
4.1 Checking pistons, piston rings and cylinder bores	31
4.2 Piston and cylinder dimensions	32
15 - Cylinder head, valve gear	33
1 Removing and installing cylinder head	33
1.1 Removing, installing and tensioning toothed belts	34
1.2 Checking semi-automatic toothed belt tensioning roller	39
1.3 Removing and installing cylinder head	40
1.4 Checking compression	43
2 Repairing valve gear	45
2.1 Reworking valve seats	47
2.2 Renewing camshaft oil seal	49
2.3 Removing and installing camshaft	51
2.4 Checking hydraulic bucket tappets	53
2.5 Checking valve guides	54
2.6 Renewing valve guides	55
2.7 Renewing valve stem seals	56
17 - Lubrication	59
1 Removing and installing parts of lubrication system	59
1.1 Engine oil	59
1.2 Assembly overview - parts of lubrication system	59
1.3 Assembly overview - oil filter bracket	61
1.4 Removing and installing sump	62
1.5 Checking oil pressure and oil pressure switch	64
19 - Cooling	67



1	Removing and installing parts of cooling system	67
1.1	Parts of cooling system - body side	67
1.2	Parts of cooling system - engine side	69
1.3	Coolant hose schematic diagram	73
1.4	Draining and filling coolant	75
1.5	Removing and installing radiator	77
1.6	Removing and installing coolant pump	79
1.7	Removing and installing thermostat	80
1.8	Electronically regulated cooling system	82
1.9	Checking electronically regulated cooling system	82
1.10	Dismantling and assembling coolant distribution housing	83
1.11	Checking map-controlled engine cooling thermostat	84
20	Fuel supply system	88
1	Removing and installing parts of fuel supply system	88
1.1	Removing and installing fuel tank with attachments and fuel filter	89
1.2	Safety precautions when working on fuel supply system	91
1.3	Rules for cleanliness	91
1.4	Removing and installing fuel delivery unit	92
1.5	Removing and installing fuel gauge sender G	93
1.6	Removing and installing fuel tank	93
1.7	Checking fuel pump	95
2	Accelerator mechanism	102
2.1	Repairing accelerator mechanism	102
2.2	Adjusting accelerator cable	102
3	Checking electronic power control (EPC)	104
3.1	Function of EPC system	104
3.2	Checking accelerator pedal position sender	105
4	Activated charcoal filter system	108
4.1	Repairing parts of the activated charcoal filter system	108
4.2	Checking solenoid valve 1 for activated charcoal filter	110
4.3	Checking fuel tank breather	113
26	Exhaust system	116
1	Removing and installing parts of exhaust system	116
1.1	Exhaust manifold, front exhaust pipe and catalytic converter with attachments	116
1.2	Silencer with mountings	120
1.3	Checking catalytic converter	121
2	Secondary air system	124
2.1	Function	124
2.2	Removing and installing parts of secondary air system	124
2.3	Check secondary air system	126
2.4	Checking secondary air pump motor V101	128
2.5	Checking combination valve	133
2.6	Checking secondary air inlet valve N112	134
3	Exhaust gas recirculation system	137
3.1	Repairing parts of exhaust gas recirculation system	137
3.2	Checking exhaust gas recirculation potentiometer G212	139