



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Notes on removing	3
1.2 Securing engine to assembly stand	7
1.3 Notes on installing	8
1.4 Assembly mountings	10
1.5 Additional information and removal instructions for vehicles with air conditioner	11
13 - Crankshaft group	13
1 Dismantling and assembling engine	13
1.1 Assembly overview	13
1.2 Removing and installing poly V-belt	16
2 Removing and installing sealing flange and pressure plate/drive plate	19
2.1 Renewing crankshaft oil seal - belt pulley end	20
2.2 Removing and installing front sealing flange	22
2.3 Removing and installing drive plate	25
3 Removing and installing crankshaft	27
3.1 Crankshaft dimensions	28
4 Dismantling and assembling pistons and conrods	30
4.1 Checking pistons, piston rings and cylinder bores	31
4.2 Piston and cylinder dimensions	32
15 - Cylinder head, valve gear	33
1 Cylinder head	33
1.1 Removing and installing cylinder head	35
1.2 Removing, installing and tensioning toothed belt	38
1.3 Checking semi-automatic toothed belt tensioning roller	43
1.4 Checking compression	44
2 Repairing valve gear	46
2.1 Reworking valve seats	48
2.2 Renewing camshaft oil seal	50
2.3 Removing and installing camshaft	53
2.4 Checking valve guides	56
2.5 Renewing valve stem seals	57
17 - Lubrication	60
1 Removing and installing parts of lubrication system	60
1.1 Engine oil	60
1.2 Assembly overview - parts of lubrication system	60
1.3 Assembly overview - oil filter bracket	62
1.4 Removing and installing sump	63
1.5 Checking oil pressure and oil pressure switch	65
19 - Cooling	68
1 Removing and installing parts of cooling system	68
1.1 Parts of cooling system - body side	68
1.2 Parts of cooling system - engine side	71



1.3	Coolant hose schematic diagram	72
1.4	Draining and filling coolant	73
1.5	Removing and installing radiator	75
1.6	Removing and installing coolant pump	77
1.7	Electronically controlled cooling system	78
1.8	Dismantling and assembling coolant distribution housing	80
1.9	Checking map-controlled engine cooling thermostat F265	81
20	- Fuel supply system	84
1	Removing and installing parts of fuel supply system	84
1.1	Removing and installing fuel tank with attachments and fuel filter	84
1.2	Safety precautions when working on fuel supply system	87
1.3	Rules for cleanliness	87
1.4	Removing and installing fuel delivery unit	88
1.5	Removing and installing fuel gauge sender G	89
1.6	Removing and installing fuel tank	89
1.7	Crash fuel shut-off	91
1.8	Checking fuel pump	91
2	Checking electronic power control (EPC)	98
2.1	Function of EPC system	98
2.2	Checking accelerator pedal position sender	99
3	Activated charcoal filter system	103
3.1	Function	103
3.2	Repairing parts of the activated charcoal filter system	103
3.3	Checking active charcoal filter system solenoid valve 1 N80	104
3.4	Checking fuel tank breather system	106
26	- Exhaust system	108
1	Removing and installing parts of exhaust system	108
1.1	Exhaust manifold, front exhaust pipe and catalytic converter with attachments	108
1.2	Silencer with mountings	110
1.3	Checking catalytic converter	111
2	Secondary air system	114
2.1	Function	114
2.2	Removing and installing parts of secondary air system	114
2.3	Checking secondary air system	116
2.4	Checking secondary air pump motor V101	118
3	Exhaust gas recirculation system	120
3.1	Repairing parts of exhaust gas recirculation system	120
3.2	Checking exhaust gas recirculation system	121
3.3	Checking exhaust gas recirculation potentiometer G212	122