



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Notes on removing	4
1.2 Securing engine to assembly stand	8
1.3 Notes on installing	9
1.4 Aligning engine and gearbox mountings	10
1.5 Specified torques	11
1.6 Additional information and removal instructions for vehicles with air conditioner	12
13 - Crankshaft group	13
1 Dismantling and assembling engine	13
1.1 Parts I and II - assembly overview	13
1.2 Part I: Assembly overview - chain drive	15
1.3 Part II: Assembly overview - crankshaft drive	17
1.4 Removing and installing poly V-belt	18
2 Removing and installing sealing flange and dual mass flywheel/drive plate	21
2.1 Assembly overview	21
2.2 Renewing crankshaft oil seal, vibration damper end	22
2.3 Removing and installing drive plate	23
2.4 Removing and installing seal, flywheel end	25
3 Removing and installing crankshaft	28
3.1 Assembly overview	28
4 Dismantling and assembling pistons and conrods	30
4.1 Assembly overview	30
4.2 Piston and cylinder dimensions	33
15 - Cylinder head, valve gear	34
1 Removing and installing cylinder head	34
1.1 Assembly overview	34
1.2 Removing and installing cylinder head cover	37
1.3 Removing and installing cylinder head	41
1.4 Checking valve timing	45
1.5 Adjusting valve timing	47
1.6 Checking compression	52
2 Repairing valve gear	54
2.1 Assembly overview	54
2.2 Reworking valve seats	56
2.3 Removing and installing camshafts	57
2.4 Checking hydraulic bucket tappets	60
2.5 Checking valve guides	61
2.6 Renewing valve guides	61
2.7 Renewing valve stem seals	62
17 - Lubrication	65
1 Removing and installing parts of lubrication system	65
1.1 Engine oil	65
1.2 Assembly overview	66



1.3	Assembly overview - oil filter bracket	68
1.4	Assembly overview - oil pump	69
1.5	Removing and installing sump	70
1.6	Checking oil pressure and oil pressure switch	71
19	- Cooling	74
1	Removing and installing parts of cooling system	74
1.1	Assembly overview - parts of cooling system, body side	74
1.2	Assembly overview - parts of cooling system, engine side	76
1.3	Coolant hose schematic diagram	77
1.4	Assembly overview - thermostat housing	78
1.5	Draining and filling coolant	79
1.6	Removing and installing radiator	82
1.7	Checking continued coolant circulation pump V51	83
1.8	Checking radiator fan V7 and radiator fan, right V35	85
1.9	Removing and installing coolant pump	86
20	- Fuel supply system	88
1	Removing and installing parts of fuel supply system	88
1.1	Assembly overview - fuel tank with attachments and fuel filter	88
1.2	Safety precautions when working on fuel supply system	93
1.3	Rules for cleanliness	93
1.4	Removing and installing suction jet pump	94
1.5	Removing and installing fuel delivery unit	96
1.6	Removing and installing fuel gauge sender G	97
1.7	Removing and installing fuel tank	97
1.8	Crash fuel shut-off	99
1.9	Checking fuel pump	99
2	Accelerator mechanism	106
2.1	Assembly overview	106
2.2	Adjusting throttle cable	107
3	Activated charcoal filter system	109
3.1	Assembly overview	109
3.2	Checking fuel tank breather	110
26	- Exhaust system	112
1	Removing and installing parts of exhaust system, front-wheel drive	112
1.1	Assembly overview	112
2	Removing and installing parts of exhaust system, four-wheel drive	115
2.1	Assembly overview	115
3	Secondary air system	118
3.1	Function	118
3.2	Assembly overview - parts of secondary air system	118
3.3	Checking combination valve	120
3.4	Removing and installing combination valve	121