



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	4
1.2 Securing engine to assembly stand	7
1.3 Notes on installing	7
1.4 Specified torques	8
1.5 Aligning engine and gearbox mountings	8
1.6 Specified torques for assembly mountings	9
1.7 Additional information and removal instructions for vehicles with air conditioner	10
13 - Crankshaft group	12
1 Dismantling and assembling engine	12
1.1 Overview	12
1.2 Removing and installing poly V-belt	16
2 Removing and installing sealing flanges and flywheel or drive plate	18
2.1 Renewing crankshaft oil seal - pulley end	19
2.2 Removing and installing drive plate	20
2.3 Removing and installing sealing flange - pulley end	22
3 Removing and installing crankshaft	25
3.1 Crankshaft dimensions	26
4 Dismantling and assembling pistons and conrods	27
4.1 Separating new conrod	30
4.2 Checking piston projection at TDC	30
4.3 Piston and cylinder dimensions	32
15 - Cylinder head, valve gear	33
1 Assembly overview - cylinder head	33
1.1 Removing and installing cylinder head cover	36
1.2 Removing, installing and tensioning toothed belt	37
1.3 Removing and installing cylinder head	49
1.4 Checking compression	53
2 Assembly overview - valve gear	56
2.1 Checking valve guides	58
2.2 Renewing valve stem seals	59
2.3 Removing and installing camshaft	60
2.4 Removing and installing camshaft oil seal	64
17 - Lubrication	67
1 Removing and installing parts of lubrication system	67
1.1 Engine oil	67
1.2 Checking engine oil level	67
1.3 Removing and installing parts of lubrication system	67
1.4 Removing and installing sump	72
1.5 Checking oil pressure and oil pressure switch	74
19 - Cooling	77
1 Removing and installing parts of cooling system	77



1.1	Parts of cooling system - body side	77
1.2	Parts of cooling system - engine side	79
1.3	Coolant hose schematic diagram	80
1.4	Draining and filling coolant	85
1.5	Removing and installing radiator	88
1.6	Removing and installing coolant pump	90
1.7	Removing and installing thermostat	92
1.8	Checking cooling system for leaks	94
1.9	Checking oil cooler for leaks	95
20	- Fuel supply system	98
1	Removing and installing parts of fuel supply system	98
1.1	Assembly overview - fuel tank with attachments	98
1.2	Assembly overview - fuel filter	105
1.3	Safety precautions when working on fuel supply system	107
1.4	Rules for cleanliness	107
1.5	Removing and installing fuel cooler	107
1.6	Removing and installing fuel tank	108
1.7	Removing and installing fuel delivery unit	110
1.8	Removing and installing fuel gauge sender	112
1.9	Removing and installing fuel pump	113
1.10	Checking fuel pump	114
1.11	Removing, installing and checking suction jet pump	116
1.12	Assembly overview - accelerator mechanism	118
1.13	Checking tandem pump	119
1.14	Removing and installing tandem pump	122
21	- Turbocharging/supercharging	125
1	Charge air system with turbocharger	125
1.1	Assembly overview - turbocharger with attachments	125
1.2	Removing and installing parts of charge air cooling	130
1.3	Checking charge air system for leaks	133
1.4	Vacuum hose schematic diagram	135
1.5	Rules for cleanliness	137
1.6	Safety precautions	138
23	- Mixture preparation - injection	139
1	Repairing diesel direct injection system	139
1.1	Safety precautions	139
1.2	Rules for cleanliness	139
1.3	Fitting locations overview	140
1.4	Assembly overview - Intake manifold flap	145
1.5	Assembly overview - unit injector	146
1.6	Removing and installing O-rings for unit injector	148
1.7	Removing and installing unit injector	149
2	Checking additional signals	155
2.1	Checking speed signal	155
3	Engine control unit	156
3.1	Removing and installing engine control unit	156
3.2	Reading and clearing engine control unit fault memory	156
3.3	Adapting components	157
26	- Exhaust system	159
1	Removing and installing parts of exhaust system	159
1.1	Front-wheel drive vehicles	159
1.2	Vehicles with four-wheel drive	162



2	Exhaust gas recirculation system	167
2.1	Removing and installing parts of exhaust gas recirculation system	167
28	Glow plug system	172
1	Glow plug system	172
1.1	Checking glow plug system	172
1.2	Checking glow plugs	173