



Contents

01 - Self-diagnosis	1
1 Self-diagnosis	1
1.1 Features of self-diagnosis	1
1.2 Technical data of self-diagnosis	1
1.3 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit	2
1.4 Connecting vehicle diagnosis, testing and information system VAS 5051 and selecting engine electronics control unit	5
1.5 Read fault memory	7
1.6 Clear fault memory	8
2 Fault table	10
3 Final control diagnosis	26
3.1 Performing final control diagnosis	26
4 Measured value blocks	30
4.1 Safety precautions	30
4.2 Read measured value block	30
4.3 Evaluating measured value blocks	31
23 - Mixture preparation - injection	48
1 Repairing diesel direct injection system	48
1.1 Safety precautions	48
1.2 Rules for cleanliness	48
1.3 Fitting locations overview	49
1.4 Repairing injection pump	52
1.5 Repairing intake manifold flap	54
1.6 Removing and installing intake manifold flap motor V157	55
1.7 Removing and installing injection pump	57
1.8 Dynamically checking and adjusting commencement of injection	61
1.9 Removing and installing injectors	64
1.10 Repairing injectors	66
1.11 Sealing injection pump	67
2 Checking components and functions	73
2.1 Checking voltage supply for diesel direct injection system	73
2.2 Checking engine speed sender G28	73
2.3 Checking intake manifold pressure sender G71 and altitude sender F96	74
2.4 Checking coolant temperature sender G62	77
2.5 Checking intake manifold temperature sender G72	78
2.6 Checking fuel temperature sender G81	81
2.7 Checking modulating piston movement sender G149 and metering adjuster N146	83
2.8 Checking needle lift sender G80	86
2.9 Checking injection timing control range	87
2.10 Checking air mass meter G70	88
2.11 Checking intake manifold flap change-over	90
2.12 Checking intake manifold flap motor V157	92
3 Checking additional signals	94
3.1 Checking speed signal	94
3.2 Checking gear change signal from automatic gearbox	95
3.3 Checking brake light switch F and brake pedal switch F47	96
3.4 Checking clutch pedal switch F36	97
3.5 Checking signal from/to air conditioning system	98
3.6 Checking engine speed sender G28	101
3.7 Checking cruise control system (CCS)	101
3.8 Checking data bus	103



Bora 1999 > , Golf 1998 >

Direct injection and glow plug system with distributor pump as of 05.99 - Edition 03.2007

4	Renewing, coding and matching engine control unit	105
4.1	Renewing engine control unit	105
4.2	Coding engine control unit	105
4.3	Adapting engine control unit to electronic immobilizer	106
28	Glow plug system	108
1	Checking glow plug system	108
1.1	Checking glow plugs	109