



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	4
1.2 Securing engine to assembly stand	7
1.3 Notes on installing	7
1.4 Torque settings	8
1.5 Aligning engine and gearbox mountings	8
1.6 Specified torques for assembly mountings	9
1.7 Additional information and removal instructions for vehicles with air conditioner	10
13 - Crankshaft group	12
1 Dismantling and assembling engine	12
1.1 Overview	13
1.2 Removing and installing idler roller	16
1.3 Removing and installing poly V-belt	16
1.4 Checking semi-automatic toothed belt tensioner	17
2 Removing and installing sealing flange and pressure plate/flywheel/drive plate	18
2.1 Renewing crankshaft oil seal - belt pulley end	20
2.2 Removing and installing drive plate	22
2.3 Removing and installing front sealing flange	24
3 Removing and installing crankshaft	27
3.1 Crankshaft dimensions	28
4 Dismantling and assembling pistons and conrods	29
4.1 Checking piston projection at TDC	31
4.2 Piston and cylinder dimensions	32
15 - Cylinder head, valve gear	33
1 Assembly overview - Cylinder head	33
1.1 Assembly overview - Intake manifold	35
1.2 Removing, installing and tensioning toothed belt	36
1.3 Removing and installing cylinder head	43
1.4 Checking compression	46
2 Assembly overview - Valve gear	48
2.1 Reworking valve seats	50
2.2 Checking valve guides	52
2.3 Renewing valve guides	53
2.4 Renewing valve stem seals	53
2.5 Removing and installing camshaft	55
2.6 Checking hydraulic bucket tappets	58
17 - Lubrication	60
1 Parts of lubrication system	60
1.1 Engine oil	60
1.2 Removing and installing parts of lubrication system	60
1.3 Removing and installing sump	67
1.4 Checking oil pressure and oil pressure switch	68
19 - Cooling	71



1	Removing and installing parts of cooling system	71
1.1	Parts of cooling system - body side	71
1.2	Parts of cooling system - engine side	73
1.3	Coolant hose schematic diagram	74
1.4	Draining and filling coolant	75
1.5	Removing and installing radiator	78
1.6	Removing and installing coolant pump	79
1.7	Removing and installing thermostat	81
20	Fuel supply system	84
1	Removing and installing parts of fuel supply system	84
1.1	Safety precautions when working on fuel supply system	84
1.2	Rules for cleanliness	84
1.3	Assembly overview - Fuel tank with attachments	85
1.4	Assembly overview - fuel filter	90
1.5	Removing and installing fuel tank	90
1.6	Removing and installing fuel pump	93
1.7	Checking fuel pump	95
1.8	Removing and installing suction jet pump	96
1.9	Assembly overview - Accelerator mechanism	98
1.10	Checking accelerator pedal position sender	100
1.11	Adjusting accelerator pedal position sender	105
21	Turbocharging/supercharging	106
1	Charge air system with turbocharger	106
1.1	Safety precautions	106
1.2	Rules for cleanliness	106
1.3	Turbocharger with attachments	106
1.4	Assembly overview - Parts of charge air cooling	111
1.5	Turbocharger wiring connections	112
2	Checking charge pressure system	114
2.1	Checking wastegate pressure unit	114
2.2	Removing and installing wastegate pressure unit	114
2.3	Checking charge pressure control	115
26	Exhaust system	123
1	Removing and installing parts of exhaust system	123
1.1	Front exhaust pipe and catalytic converter with attachments, engine codes AGR, AHF, ALH, ASV	123
1.2	Exhaust manifold, front exhaust pipe and catalytic converter with attachments, engine codes AGP, AQM	125
1.3	Front exhaust pipe and catalytic converter with attachments for vehicles with four-wheel drive	126
1.4	Silencer with attachments, engine codes AGR, AHF, ALH, ASV	126
1.5	Silencer with mountings, engine codes AGP, AQM	128
1.6	Silencer with mountings for vehicles with four-wheel drive	129
2	Exhaust gas recirculation system	131
2.1	Removing and installing parts of exhaust gas recirculation system	131
2.2	Vacuum hose schematic diagram	132
2.3	Checking exhaust gas recirculation valve	134
2.4	Checking exhaust gas recirculation	135