



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Brakes,wheels, tyres</b> .....	<b>1</b>
1.1 Brakes,wheels, tyres .....	1
1.2 Running gear, steering .....	2
<b>2 General view of front axle</b> .....	<b>3</b>
2.1 General view of front axle .....	3
<b>3 General view of rear axle</b> .....	<b>5</b>
3.1 General view of rear axle .....	5
<b>4 General view of servo-assisted steering</b> .....	<b>6</b>
4.1 General view of servo-assisted steering .....	6
<b>40 - Front suspension</b> .....	<b>8</b>
<b>1 Repairing front suspension</b> .....	<b>8</b>
1.1 Repairing front suspension .....	8
1.2 Repairing front suspension - Vehicles up to Ch. No. 24 FH 019 682 (sliding) .....	8
1.3 Repairing suspension- Vehicles from Ch. No. 24 FH 019 683 (sliding) .....	13
1.4 Checking bonded rubber bush in upper wishbone for wear .....	17
1.5 Removing and installing steering knuckle, coil spring or track control arm .....	17
1.6 Different instructions for vehicles from Ch. No. 24 FH 019 683 (Sliding) .....	20
1.7 High pressure/low pressure test .....	21
1.8 Removing and installing hydraulic unit .....	21
1.9 Removing and installing ABS components on front axle .....	22
1.10 Removing and installing abs components on rear axle .....	23
<b>2 Allocation of coil springs</b> .....	<b>24</b>
2.1 Allocation of coil springs .....	24
2.2 Allocation of supplementary spring/sleeve .....	24
<b>3 Removing and installing shock absorber</b> .....	<b>24</b>
3.1 Removing and installing shock absorber .....	24
3.2 Checking shock absorbers .....	25
<b>4 Removing and installing wishbone</b> .....	<b>25</b>
4.1 Removing and installing wishbone .....	25
4.2 Removing and installing bonded rubber bushes for wishbone .....	25
4.3 Removing and installing bonded rubber bushes for track control arm .....	26
<b>5 Removing and installing wheel bearings</b> .....	<b>29</b>
5.1 Removing and installing wheel bearings .....	29
5.2 Front wheel bearing grease change every 60 000 km's .....	32
5.3 Reworking steering knuckle .....	36
5.4 Wheel bearing grease - all transporter vehicles .....	37
5.5 This grease is available from the following agip branches .....	38
<b>42 - Rear suspension</b> .....	<b>39</b>
<b>1 Repairing rear suspension</b> .....	<b>39</b>
1.1 Repairing rear suspension .....	39
1.2 Cavity preservation of running gear components .....	42
1.3 Rear suspension noises .....	42
1.4 Allocation of coil springs .....	44
<b>2 Repairing wheel bearings</b> .....	<b>45</b>
2.1 Repairing wheel bearings .....	45
2.2 Repairing wheel bearings (with ABS) .....	48
<b>3 Servicing drive shafts</b> .....	<b>52</b>
3.1 Servicing drive shafts .....	52
3.2 A. Service Lubrication of C.V. joints .....	53



3.3	B. Replacing C.V. joints . . . . .	53
3.4	Dismantling and assembling inner constant velocity joint . . . . .	55
<b>44</b>	<b>- Wheels, Tyres, Wheel alignment . . . . .</b>	<b>58</b>
<b>1</b>	<b>Wheels, tyres . . . . .</b>	<b>58</b>
1.1	Wheels, tyres . . . . .	58
1.2	Pressing wheel studs in and out . . . . .	60
<b>2</b>	<b>Measuring wheel alignment . . . . .</b>	<b>60</b>
2.1	Measuring wheel alignment . . . . .	60
2.2	Transporter tyre pressure . . . . .	61
2.3	Settings front axle . . . . .	61
2.4	Settings rear axle . . . . .	62
2.5	Measuring wheel alignment with optical appliance . . . . .	62
2.6	Checking toe, camber and caster with mechanical appliances . . . . .	63
2.7	Checking and adjusting toe (front axle) . . . . .	63
2.8	Checking and adjusting camber (front axle) . . . . .	64
2.9	Checking and adjusting caster angle . . . . .	65
2.10	Checking and adjusting toe (rear axle) . . . . .	66
2.11	Checking and adjusting camber (rear axle) . . . . .	67
<b>46</b>	<b>- Brakes, Brake mechanics . . . . .</b>	<b>68</b>
<b>1</b>	<b>Repairing front wheel brakes - Teves and Girling fixed calipers . . . . .</b>	<b>68</b>
1.1	Repairing front wheel brakes - Teves and Girling fixed calipers . . . . .	68
1.2	Removing and installing brake pads . . . . .	70
<b>2</b>	<b>Repairing front wheel brakes - Girling caliper . . . . .</b>	<b>73</b>
2.1	Repairing front wheel brakes - Girling caliper . . . . .	73
2.2	Removing and installing brake pads . . . . .	76
2.3	Technical data . . . . .	77
2.4	Brake assembly layout . . . . .	78
2.5	Hub assembly layout . . . . .	80
2.6	Calliper assembly layout . . . . .	81
2.7	Brake pad replacement procedure . . . . .	82
2.8	Repair of ate calliper fitted to ventilated disc . . . . .	83
2.9	Fault finding . . . . .	83
2.10	Tyres and rims . . . . .	83
2.11	Tyre pressures . . . . .	84
2.12	Wheel alignment settings . . . . .	84
<b>3</b>	<b>Removing and installing brake pedal, pushrod and master cylinder . . . . .</b>	<b>85</b>
3.1	Removing and installing brake pedal, pushrod and master cylinder . . . . .	85
3.2	Removing and installing brake pedal and servo . . . . .	87
<b>4</b>	<b>Repairing rear wheel brakes . . . . .</b>	<b>89</b>
4.1	Repairing rear wheel brakes . . . . .	89
4.2	Brear brake pulsation . . . . .	91
4.3	Rear brakes, basic adjustment . . . . .	92
4.4	Removing brake drums . . . . .	93
4.5	Removing and installing brake shoes . . . . .	94
4.6	Renewing brake linings . . . . .	96
<b>5</b>	<b>Repairing handbrake lever . . . . .</b>	<b>97</b>
5.1	Repairing handbrake lever . . . . .	97
5.2	Adjusting handbrake . . . . .	98
<b>47</b>	<b>- Brakes, Brake hydraulics . . . . .</b>	<b>99</b>
<b>1</b>	<b>Repairing brake master cylinder . . . . .</b>	<b>99</b>
1.1	Repairing brake master cylinder . . . . .	99
1.2	(Vehicles without servo) . . . . .	99
1.3	(Vehicles with brake servo) . . . . .	105



<b>2</b>	<b>Repairing calipers</b> .....	<b>110</b>
2.1	Repairing calipers .....	110
2.2	Repairing calipers .....	112
2.3	Repairing calipers .....	114
<b>3</b>	<b>Repairing front wheel brake calipers</b> .....	<b>117</b>
3.1	Repairing front wheel brake calipers .....	117
<b>4</b>	<b>Repairing wheel cylinder</b> .....	<b>120</b>
4.1	Repairing wheel cylinder .....	120
4.2	Checking brake pressure regulator .....	121
<b>5</b>	<b>Brake servo</b> .....	<b>123</b>
5.1	Brake servo .....	123
5.2	Checking brake servo .....	123
5.3	Check valve .....	124
<b>6</b>	<b>Bleeding the brakes and changing the brake fluid using the filling and bleeding appliance VW 1238/1</b> .....	<b>125</b>
6.1	Bleeding the brakes and changing the brake fluid using the filling and bleeding appliance VW 1238/1 .....	125
<b>48 - Steering</b> .....		<b>128</b>
<b>1</b>	<b>Removing and installing steering column and column tube</b> .....	<b>128</b>
1.1	Removing and installing steering column and column tube .....	128
<b>2</b>	<b>Repairing steering gear</b> .....	<b>134</b>
2.1	Repairing steering gear .....	134
<b>3</b>	<b>Repairing servo-assisted steering gear</b> .....	<b>139</b>
3.1	Repairing servo-assisted steering gear .....	139
3.2	Filling with ATF .....	139
3.3	Checking steering system for leaks (without pressure gauge) .....	139
3.4	Checking supply pressure of vane pump .....	139
3.5	Removing and installing reservoir filter .....	141
3.6	Repairing servo-assisted steering gear .....	142
<b>4</b>	<b>Removing and installing vane pump</b> .....	<b>153</b>
4.1	Removing and installing vane pump .....	153
<b>5</b>	<b>Servicing vane pump</b> .....	<b>155</b>
5.1	Servicing vane pump .....	155
5.2	Removing and installing servo assisted steering vane pump with bracket .....	159
5.3	Arrangement of vee belts .....	163