



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Identification	1
2 Warning	2
2.1 Warning	2
2.2 Code letters, allocation, gearbox ratios, oil capacity	2
2.3 Code letters, gearbox allocation, ratios capacities	3
2.4 Code letters, allocation, gearbox ratios, oil capacity	9
2.5 Oil splash plate location	10
2.6 Checking the Oil Level	11
3 Transmission layout	12
3.1 Transmission layout	12
3.2 Direction of motion	12
4 Calculating ratios "i"	13
4.1 Calculating ratios "i"	13
30 - Clutch	15
1 Repairs to hydraulic clutch control	15
1.1 Repairs to hydraulic clutch control	15
1.2 Self-centering release bearing	20
2 Clutch repairs	21
2.1 Clutch repairs	21
2.2 Removing, installing and checking clutch	22
2.3 A -Modified gear lever bearing	23
2.4 B - Amendments	25
34 - Controls, Housing	27
1 Repairing gear shift mechanism	27
1.1 Repairing gear shift mechanism	27
1.2 Repairing gearshift linkage	32
1.3 Adjusting gearshift linkage	33
1.4 Correct selection procedure for reverse gear-caravelle	33
2 Adjusting gearshift linkage	34
2.1 Adjusting gearshift linkage	34
3 Removing and installing gearbox	36
3.1 Removing and installing gearbox	36
4 Dismantling and assembling gearbox	39
4.1 Dismantling and assembling gearbox	39
4.2 Removing and installing clutch housing/differential	39
4.3 Dismantling and assembling gearbox	46
4.4 Modifications from Assy. dates 12 10 2, 03 12 2 and 15 12 2	51
4.5 Gear lever plan location altered	52
4.6 Gearshift shaft cover with guide shoulder	52
4.7 Gearshift shaft modified	52
4.8 Modifications from Assy. dates 19 11 2 and 25 11 2	53
4.9 Synchronizer hub with improved method of preventing jumping out of gear	54
4.10 Shift forks and rails	54
4.11 List of service parts required	54
4.12 Dismantling and assembling gearbox	55
4.13 Removing pinion shaft from transmission housing	57
4.14 Determining the thickness of thrust washer for reverse gear	59
4.15 Determining thrust washer from table	60



4.16	Determining thickness of shim for gear 1st gear	60
4.17	Determining shim from table	62
4.18	Dismantling and assembling gearbox	63
4.19	Dismantling and assembling gearbox	66
4.20	Removal Instructions	69
4.21	Installation Instructions	69
4.22	Checking Input shaft surface damage	69
4.23	Checking Input Shaft nose damage	70
35 - Gears, Shafts		71
1	General view	71
1.1	General view	71
2	Dismantling and assembling input shaft	72
2.1	Dismantling and assembling input shaft	72
2.2	Modified circlip	78
2.3	Removing and installing the modified circlip	79
2.4	Dismantling and assembling pinion	79
39 - Final drive, Differential rear		92
1	Renewing drive flange oil seal	92
1.1	Renewing drive flange oil seal	92
2	Dismantling and assembling differential	94
2.1	Dismantling and assembling differential	94
2.2	Differential with four pinions	98
2.3	Dismantling and assembling differential	98
2.4	Adjusting axial play of differential gears	105
3	Dismantling and assembling limited slip differential	107
3.1	Dismantling and assembling limited slip differential	107
3.2	Locking effect approx. 45%	107
4	Adjusting crown wheel and pinion	113
4.1	Adjusting crown wheel and pinion	113
4.2	General instructions	113
5	Adjustment table	115
5.1	Adjustment table	115
5.2	Finding position of pinion	115
5.3	Adjusting pinion	116
5.4	Adjusting crown wheel	119