



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Technical data .....	1
1.2 Engine number .....	1
1.3 Engine list .....	1
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing and installing engine .....	3
1.2 Removing .....	3
1.3 Securing engine in repair stand .....	4
1.4 Installing .....	4
1.5 Tightening torques .....	4
<b>13 - Crankshaft group</b> .....	<b>6</b>
<b>1 Dismantling and assembling engine</b> .....	<b>6</b>
1.1 Dismantling and assembling engine .....	6
1.2 Installing toothed belt .....	14
1.3 Adjusting alternator V-belt tension .....	16
<b>2 Dismantling and assembling cylinder block, crankshaft and flywheel</b> .....	<b>16</b>
2.1 Dismantling and assembling cylinder block, crankshaft and flywheel .....	16
2.2 Removing and installing flywheel .....	19
2.3 Renewing crankshaft oil seal - Flywheel end .....	22
2.4 Renewing crankshaft oil seal - Pulley end .....	23
2.5 Checking axial clearance (Crankshaft) .....	24
2.6 Checking radial clearance (Crankshaft) .....	25
2.7 Crankshaft dimensions .....	25
2.8 Subsequent marking of ignition timing mark .....	26
<b>3 Dismantling and assembling pistons and conrods</b> .....	<b>27</b>
3.1 Dismantling and assembling pistons and conrods .....	27
3.2 Checking radial clearance .....	35
3.3 Piston and cylinder dimensions .....	36
<b>15 - Cylinder head, Valve gear</b> .....	<b>37</b>
<b>1 Removing and installing cylinder head</b> .....	<b>37</b>
1.1 Removing and installing cylinder head .....	37
1.2 Installing cylinder head .....	39
1.3 Checking compressions .....	40
<b>2 Repairing valve gear</b> .....	<b>41</b>
2.1 Repairing valve gear .....	41
2.2 Reworking valve seats .....	48
2.3 Checking hydraulic bucket tappets .....	49
2.4 Renewing camshaft oil seal .....	50
2.5 Removing and installing camshaft .....	51
2.6 Removing valve springs .....	53
2.7 Checking valve guides .....	54
2.8 Renewing valve guides .....	54
2.9 Renewing valve stem seals .....	55
<b>17 - Lubrication</b> .....	<b>57</b>
<b>1 Removing and installing parts of lubrication system</b> .....	<b>57</b>
1.1 Removing and installing parts of lubrication system .....	57
1.2 Installing sump .....	60



1.3	Optical and acoustic oil pressure warning system . . . . .	61
<b>19</b>	<b>- Cooling system . . . . .</b>	<b>63</b>
<b>1</b>	<b>Removing and installing parts of cooling system . . . . .</b>	<b>63</b>
1.1	Removing and installing parts of cooling system . . . . .	63
1.2	Removing and installing parts of cooling system . . . . .	66
1.3	Draining and filling cooling system . . . . .	68
1.4	Checking the cooling system and cap . . . . .	70
<b>20</b>	<b>- Fuel supply system . . . . .</b>	<b>72</b>
<b>1</b>	<b>Removing and installing parts of the fuel system . . . . .</b>	<b>72</b>
1.1	Removing and installing parts of the fuel system . . . . .	72
1.2	Part I . . . . .	72
1.3	Part II . . . . .	74
1.4	Part III . . . . .	76
1.5	Repairing accelerator cable . . . . .	78
1.6	Adjusting throttle controls . . . . .	79
1.7	Rules for cleanliness . . . . .	80
1.8	Removing fuel tank . . . . .	80
1.9	Removing and installing fuel gauge sender . . . . .	80
1.10	Checking fuel system for leaks . . . . .	81
<b>22</b>	<b>- Mixture preparation, Carburetor . . . . .</b>	<b>83</b>
<b>1</b>	<b>Servicing Keihin carburettor . . . . .</b>	<b>83</b>
1.1	Servicing Keihin carburettor . . . . .	83
1.2	Servicing Keihin carburettor (Carburettor top part) . . . . .	83
1.3	Servicing Keihin carburettor (Carburettor lower part) . . . . .	85
1.4	Carburettor data . . . . .	88
1.5	Idling speed adjustment . . . . .	89
1.6	Checking and adjusting cold idling speed . . . . .	90
1.7	Checking and adjusting choke valve gap . . . . .	91
1.8	Checking pulldown unit for leaks . . . . .	92
1.9	Checking vacuum reservoir for leaks . . . . .	92
1.10	Throttle valve basic setting stage II . . . . .	93
1.11	Checking and adjusting accelerator pump injection quantity . . . . .	93
<b>26</b>	<b>- Exhaust system . . . . .</b>	<b>95</b>
<b>1</b>	<b>Servicing exhaust system . . . . .</b>	<b>95</b>
1.1	Servicing exhaust system . . . . .	95
<b>28</b>	<b>- Ignition system . . . . .</b>	<b>97</b>
<b>1</b>	<b>Servicing TCI-H ignition system . . . . .</b>	<b>97</b>
1.1	Servicing TCI-H ignition system . . . . .	97
1.2	Distributor data spark plugs . . . . .	102
1.3	Installing distributor . . . . .	102
1.4	Adjusting ignition timing . . . . .	103
1.5	Checking distributor . . . . .	104
1.6	Checking voltage and resistance . . . . .	106
1.7	Checking ignition coil . . . . .	108
1.8	Checking TCI-H switch unit . . . . .	109
1.9	Checking Hall sender . . . . .	110
1.10	Removing and installing rotor . . . . .	111