



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical Data</b> .....	<b>1</b>
1.1 Technical Data .....	1
1.2 Engine Number .....	1
1.3 Engine Specifications .....	1
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing and installing engine .....	3
1.2 Instructions for removal .....	3
1.3 Removing .....	3
1.4 Mounting engine on repair stand .....	8
1.5 Installing .....	8
1.6 Align engine and gearbox .....	9
1.7 Adjusting alternator V-belt tension .....	9
1.8 Air conditioner only .....	10
1.9 Power assisted steering only .....	10
1.10 Tightening torques .....	10
<b>13 - Crankshaft group</b> .....	<b>12</b>
<b>1 Dismantling and assembling crankshaft and flywheel</b> .....	<b>12</b>
1.1 Dismantling and assembling crankshaft and flywheel .....	12
1.2 Measuring crankshaft radial clearance .....	17
1.3 Crankshaft identification .....	18
1.4 Crankshaft sizes .....	18
<b>2 Dismantling and assembling pistons and conrods</b> .....	<b>19</b>
2.1 Dismantling and assembling pistons and conrods .....	19
2.2 Measuring conrod radial clearance .....	27
2.3 Piston and Cylinder sizes .....	28
<b>15 - Cylinder head, Valve gear</b> .....	<b>29</b>
<b>1 Removing and installing toothed belt</b> .....	<b>29</b>
1.1 Removing and installing toothed belt .....	29
1.2 Installing toothed belt .....	31
<b>2 Removing and installing cylinder head</b> .....	<b>33</b>
2.1 Removing and installing cylinder head .....	33
2.2 Installing cylinder head .....	35
2.3 Checking compression pressure .....	37
<b>3 Dismantling and assembling valve gear</b> .....	<b>38</b>
3.1 Dismantling and assembling valve gear .....	38
3.2 Removing and installing camshaft oil seal .....	42
3.3 Measuring valve guide wear .....	46
3.4 Checking hydraulic bucket tappets .....	47
3.5 Reworking valve seats .....	47
3.6 Renewing valve stem seal .....	50
3.7 Removing and installing exhaust manifold .....	50
<b>17 - Lubrication</b> .....	<b>51</b>
<b>1 Removing and installing parts of lubrication system</b> .....	<b>51</b>
1.1 Removing and installing parts of lubrication system .....	51
1.2 Removing and installing oil pump .....	55
1.3 Oil spray jets .....	56
1.4 Oil cooler fitment .....	57



1.5	Checking oil pressure switch and oil pressure . . . . .	57
<b>2</b>	<b>Dipstick and oil filler pipe . . . . .</b>	<b>59</b>
2.1	Dipstick and oil filler pipe . . . . .	59
2.2	Engine oil specifications . . . . .	62
<b>19</b>	<b>- Cooling system . . . . .</b>	<b>63</b>
<b>1</b>	<b>Removing and installing parts of the cooling system . . . . .</b>	<b>63</b>
1.1	Removing and installing parts of the cooling system . . . . .	63
1.2	Removing and installing parts of the radiator . . . . .	64
1.3	Removing and installing parts of cooling system engine side . . . . .	67
1.4	Removing and installing expansion tank and top-up reservoir . . . . .	69
1.5	Routing of coolant and heater hoses . . . . .	71
1.6	Filling cooling system . . . . .	72
<b>20</b>	<b>- Fuel supply system . . . . .</b>	<b>75</b>
<b>1</b>	<b>Removing and installing parts of the fuel system . . . . .</b>	<b>75</b>
1.1	Removing and installing parts of the fuel system . . . . .	75
1.2	Safety precautions when working on fuel tank . . . . .	77
1.3	Rules for cleanliness when working on fuel system . . . . .	77
1.4	Removing and installing fuel gauge sender . . . . .	77
1.5	Removing the fuel tank . . . . .	78
1.6	Checking fuel system for leaks . . . . .	79
1.7	Checking electric fuel pump . . . . .	80
1.8	Checking electric fuel pump delivery rate . . . . .	80
1.9	Checking electric fuel pump relay . . . . .	81
1.10	Accelerator cable adjustment . . . . .	82
<b>26</b>	<b>- Exhaust system . . . . .</b>	<b>85</b>
<b>1</b>	<b>Removing and installing parts of exhaust system . . . . .</b>	<b>85</b>
1.1	Removing and installing parts of exhaust system . . . . .	85