



Contents

01 - Self-diagnosis	1
1 Self diagnosis	1
1.1 Self diagnosis	1
1.2 Function	1
1.3 Technical data of self diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit	2
1.5 Interrogating and erasing fault memory	3
1.6 Fault table	4
1.7 Reading measured value block	8
1.8 Display group overview	8
24 - Mixture preparation, Injection	10
1 Motronic injection and ignition system	10
1.1 Motronic injection and ignition system	10
1.2 Fitting locations overview	10
1.3 Servicing injection part	12
1.4 Dismantling and assembling intake manifold	15
1.5 Dismantling and assembling air cleaner	18
1.6 Safety precautions	19
1.7 Rules for cleanliness	19
1.8 Technical data	20
1.9 Idling check	20
1.10 Checking and adjusting CO content	21
1.11 Checking engine operating modes	22
1.12 Checking throttle valve control part	23
1.13 Checking coolant temperature sender	30
1.14 Checking manifold pressure sender	32
1.15 Checking intake air temperature sender	34
1.16 Checking control unit voltage supply	35
1.17 Checking signal from air conditioner compressor	36
1.18 Checking injectors	38
1.19 Checking fuel pressure regulator and holding pressure	40
1.20 Checking intake air system for leaks (outside air)	43
1.21 Matching engine electronic control unit to electronic immobilizer	43
28 - Ignition system	44
1 Motronic injection and ignition system	44
1.1 Motronic injection and ignition system	44
1.2 Servicing ignition part	44
1.3 Safety precautions	47
1.4 Test data, spark plugs	48
1.5 Installing distributor	48
1.6 Checking ignition timing	49
1.7 Checking Hall sender	50
1.8 Checking ignition transformer	52